



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LST 114/HA. You'll find the answers to all your questions on the HOTPOINT LST 114/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LST 114/HA
User guide HOTPOINT LST 114/HA
Operating instructions HOTPOINT LST 114/HA
Instructions for use HOTPOINT LST 114/HA
Instruction manual HOTPOINT LST 114/HA

Istruzioni per l'uso

LAVASTOVIGLIE

IT Italiano, 1	EN English, 13	FR Français, 25
DE Deutsch, 37	ES Español, 49	PT Português, 61

LST 114

Sommario

Installazione, 2-3

Posizionamento e livellamento
Collegamenti idraulici ed elettrici
Avvertenze per il primo lavaggio
Dati tecnici

Descrizione dell'apparecchio, 4

Vista d'insieme
Pannello comandi

Caricare i cestelli, 5

Cestello inferiore
Cestello delle posate
Cestello superiore

Avvio e utilizzo, 6

Avviare la lavastoviglie
Caricare il detersivo
Opzioni di lavaggio

Programmi, 7

Tabella dei programmi

Brillantante e sale rigenerante, 8

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 9

Escludere acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gliirroratori
Pulizia filtro entrata acqua
Pulire i filtri
Se ci si assenta per lunghi periodi

Precauzioni e consigli, 10

Sicurezza generale
Smaltimento
Risparmiare e rispettare l'ambiente

Anomalie e rimedi, 11

Assistenza, 12



[You're reading an excerpt. Click here to read official HOTPOINT LST 114/HA user guide](http://yourpdfguides.com/dref/4488775)
<http://yourpdfguides.com/dref/4488775>

Manual abstract:

Connecting the water inlet hose □ To a suitable cold water connection point: before attaching the hose, run the water until it is perfectly clear so that any impurities that may be present in the water do not clog the appliance; after performing this operation, screw the inlet hose tightly onto a tap with a ¾ gas threaded connection. □ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). The water pressure must be within the values indicated in the Technical data table (see adjacent information). The hose should not be bent or compressed. positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2.

Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position.

If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4. Adjust the height of the rear foot from the front of the appliance* on the central lower part of the dishwasher, turning a hexagonal spanner (red color) with an opening of 8 mm in a clockwise direction to increase the height or in an anticlockwise direction to decrease the height. Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance.

@@@ Do not use old hoses.

The water inlet (A) and outlet (B) hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation (see figure). **wARNING: HAZARDOUS VOLTAGE!** Under no circumstance should the water inlet hose be cut as it contains live electrical parts. * Only available in selected models. 14 Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. Alternatively, rest it over a sink or tub; the free end of the hose should not remain immersed in water. The special plastic elbow* makes it easier to find the best layout: fix the elbow to the wall securely in order to prevent the outlet hose from moving and spilling the dirty water. The part of the hose marked with the letter A should be between 40 and 100 cm above the ground (see Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. EN A After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. select the water hardness value (see chapter entitled Rinse aid and refined salt).

- After the salt has been poured into the machine, the LOW SALT indicator light* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result. Advice regarding the first wash cycle figure). we advise against the use of hose extensions. Electrical connection Technical data Before inserting the plug into the electrical socket, make sure that: □ The socket is earthed and complies with current regulations. □ The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see chapter entitled Description of the appliance). □ The power supply voltage falls within the values indicated on the data plate on the inside of the door. □ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. @@ The cable should not be bent or compressed.

@@@@@ * Only available in selected models. @@@@ Never lift or lower the rack on one side only. @@ If the rack is fitted with □ Dual Space □ handles* (see figure), pull out the upper rack until it reaches its stop point, grip the handles at the sides of the rack and move it upwards or downwards, then slowly let it fall back into place. EN Lower rack The lower rack can hold pans, lids, plates, salad bowls, cutlery, etc. As seen in the Loading examples.

Plates and large covers should be placed at the sides of the rack, ensuring that they do not block the rotation of the upper sprayer arm. Some dishwasher models are fitted with tip-up sections*, which can be used in a vertical position when arranging plates or in a horizontal position when arranging pans and salad bowls. Cutlery basket The type of cutlery basket may vary according to the dishwasher model: The cutlery basket should be positioned at the front of the lower rack, by sliding it between the fixed inserts, or on the upper rack when the half load option has been selected (in models featuring this option). - It has a collapsible sliding system which means the cutlery can be arranged in the best possible way. Knives and other utensils with sharp edges must be placed in the cutlery basket with the points facing downwards, or they must be positioned horizontally in the tip-up compartments on the upper rack.

Loading examples for the upper rack Loading examples for the upper rack Cutlery basket positioning examples ù Items which should not be washed in the dishwasher Upper rack Load this rack with delicate and lightweight crockery: glasses, tea and coffee cups, saucers, small salad bowls, saucepans and small saucepans which are not too soiled, using the Loading examples as a guide. □ Mugs and cups, long sharp knives and serving utensils: place these on the tip-up compartments**. □ Wooden items, objects with wooden or horn handles or glued-on parts. Items made from aluminium, copper, brass, pewter or tin. □ Items made from plastic material which is not heat-resistant. Silver which is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. We recommend the use of crockery which is dishwasher safe. * Only available in selected models. ** The number and position may vary.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[LST 114/HA user guide](#)

<http://yourpdfguides.com/dref/4488775>

