



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LST 329 AX/HA. You'll find the answers to all your questions on the HOTPOINT LST 329 AX/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LST 329 AX/HA
User guide HOTPOINT LST 329 AX/HA
Operating instructions HOTPOINT LST 329 AX/HA
Instructions for use HOTPOINT LST 329 AX/HA
Instruction manual HOTPOINT LST 329 AX/HA

Istruzioni per l'uso

LAVASTOVIGLIE

IT Italiano, 1	EN English, 13	FR Français, 25
DE Deutsch, 37	NL Nederlands, 49	ES Español, 61
PT Português, 73		

LST 328
LST 329

Sommario

Installazione, 2-3

Posizionamento e livellamento
Collegamenti idraulici ed elettrici
Avvertenze per il primo lavaggio
Dati tecnici

Descrizione dell'apparecchio, 4

Vista d'insieme
Pannello comandi

Caricare i cestelli, 5

Cestello inferiore
Cestello delle posate
Cestello superiore

Avvio e utilizzo, 6-7

Avviare la lavastoviglie
Caricare il detersivo
Opzioni di lavaggio

Programmi, 8

Tabella dei programmi

Brillantante e sale rigenerante, 9

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 10

Escludere acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gliirroratori
Pulizia filtro entrata acqua
Pulire il filtro
Se ci si assenta per lunghi periodi

Precauzioni, consigli e Assistenza, 11

Sicurezza generale
Smaltimento
Risparmiare e rispettare l'ambiente
Assistenza

Anomalie e rimedi, 12



[You're reading an excerpt. Click here to read official HOTPOINT LST 329 AX/HA user guide](http://yourpdfguides.com/dref/4488776)
<http://yourpdfguides.com/dref/4488776>

Manual abstract:

cont rolla re c he i l f i l t r o e n t r a t a c q u a n o n s i a i n t a s a t o d a i m p u r i t à. □ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. @@@@The hose should not be bent or compressed. positioning and levelling 1. @@@@
2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor.

If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on top of the water hoses or the electricity supply cable. The appliance must be connected to the water supply network using new hoses.

Do not use old hoses. The water inlet (A) and outlet (B) hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation (see figure). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees antiflooding protection even in the event of a supply hose rupture. wARNING: HAZARDOUS VOLTAGE! Under no circumstance should the water inlet hose be cut as it contains live electrical parts.

* □ Only available in selected models. Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. Alternatively, rest it over a sink or tub; the free end of the hose should not remain immersed in water. The special plastic elbow* makes it easier to find the best layout: fix the elbow to the wall securely in order to prevent the outlet hose from moving and spilling the dirty water. The part of the hose marked with the letter A should be between 40 and 100 cm above the ground (see figure). A Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. EN Advice regarding the first wash cycle After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. select the water hardness value (see chapter entitled Rinse aid and refined salt). - After the salt has been poured into the machine, the LOW SALT indicator light* switches off.

If the salt container is not filled, the water softener and the heating element may be damaged as a result. we advise against the use of hose extensions.

Electrical connection Technical data Before inserting the plug into the electrical socket, make sure that: □ The socket is earthed and complies with current regulations. □ The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see chapter entitled Description of the appliance). □ The power supply voltage falls within the values indicated on the data plate on the inside of the door. □ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed. If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards.

(See Assistance) The Company shall not be held responsible for any incidents that occur if these regulations are not observed. Dimensions Capacity Water supply pressure Power supply voltage Total absorbed power Fuse width 44. Upper rack Upper sprayer arm Tip-up compartments Rack height adjuster Lower rack Lower sprayer arm Cutlery basket Washing filter Salt dispenser Detergent and rinse aid dispensers Data plate Control Panel*** Control panel Low rinse aid indicator light* Select wash cycle button Half load upper rack indicator light * Half load lower rack indicator light * Multi-functional tablets indicator light * ON/OFF indicator light ON/OFF/Reset button Low salt indicator light * Wash cycle number light-up indicator Delayed start indicator lights* Multi-functional tablets button * Half load button* Delayed start button* The number and type of wash cycles and options may vary depending on the dishwasher model. □\$ Loading the racks Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and cups.

Arrange the crockery so that it is held in place firmly and does not tip over.

After loading the appliance, check that the sprayer arms can rotate freely. Tilt A Tilt B Tilt C EN Lower rack The lower rack can hold pans, lids, plates, salad bowls, cutlery, etc. As seen in the Loading examples. Plates and large covers should be placed at the sides of the rack, ensuring that they do not block the rotation of the upper sprayer arm. @@@@Never lift or lower the rack on one side only.

@@@@@@@@@@@@@@@@@Items which should not be washed in the dishwasher Tip-up compartments with adjustable tilt - The tilt feature can be used to increase the space in the upper rack, to position wine glasses with different stem lengths safely and to improve drying performance. □ Wooden items, objects with wooden or horn handles or glued-on parts. Items made from aluminium, copper, brass, pewter or tin. □ Items made from plastic material which is not heat-resistant. Silver which is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. We recommend the use of crockery which is dishwasher safe. * Only available in selected models. ** The number and position may vary. Open the door and press the ON/OFF button: you will hear a short beep and the display and option indicator lights switch on. Load the racks (see Loading the racks).

5. Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles), by pressing the P button.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4488776)

[LST 329 AX/HA user guide](http://yourpdfguides.com/dref/4488776)

<http://yourpdfguides.com/dref/4488776>

Start the wash cycle by shutting the door: a long beep signals the start of the wash cycle. 8. Two short beeps and one long one indicate the end of the wash cycle and the wash cycle number flashes on the display. Open the door, switch off the appliance by pressing the ON/OFF button, shut off the water tap and unplug the appliance from the electricity socket. 9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level. AUTO WASH CYCLES*: this model of dishwasher is equipped with a special sensor which can be used to assess the level of soiling and automatically select the most efficient and economic wash cycle accordingly.

The duration of the auto wash cycles may vary due to the operation of the sensor. If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. Measuring out the detergent A good wash result also depends on the correct amount of detergent being used; exceeding the stated amount does not result in a more effective wash and increases environmental pollution. Only use detergent which has been specifically designed for dishwashers. DO NOT USE washing up liquid.

Using excessive detergent may result in foam residue remaining in the machine after the cycle has ended. The use of tablets is only recommended for models which offer the MULTI-FUNCTIONAL TABLETS option. To achieve the best results from each washing and drying cycle, powder detergent, rinse aid liquid and salt should be used. Pour in the detergent after consulting the Table of wash cycles: For powder detergent use compartments A and B. For detergent in tablet form the dishes from the next meal.

Environmentally-friendly wash cycle with low energy consumption levels, suitable for pans and dishes. Economic and fast wash to be used for lightly soiled dishes. (Run cycle immediately after use) (2 plates + 2 glasses + 4 pieces of cutlery + 1 saucepan + 1 small frying pan). @@@@It is ideal for night-time operation of the appliance. @@@@ of powder = approximately 15 ml of liquid - 1 teaspoon = 5 gr. @@@@ do not use table salt or industrial salt, or washing up liquid. Follow the instructions given on the packaging. @@Follow the instructions given on the packaging. to number 3).

@@@@@@@@@@@@@@@@

@@If this happens, clean the spill immediately with a dry G cloth. 3. Screw the lid back on. NEVER pour the rinse aid directly into the appliance tub. @@@@@@@@@@@@@@Remove the lower rack and unscrew the container cap (anticlockwise). 2. The first time you do this: fill the water tank right up to its edge. 3. @@ 4. Remove the funnel* and wipe any salt residue away from the opening; rinse the cap under running water and then screw it on, the heat upper sprayer arm, rotate the locking ring in an anti-clockwise direction.

@@The lower sprayer arm may be removed by pulling it upwards. @@@@@@@@@@ Leave the door of the appliance ajar. When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. @@The following information has been provided for safety reasons and should therefore be read carefully.

Select a wash cycle which is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels. - If the load is smaller than usual activate the Half load option* (see Start-up and use). If your electricity supply contract gives details of electricity saving time bands, run wash cycles during the periods when a lower tariff is applied. The Delayed start* button (see Start-up and use) helps you organise the wash cycles accordingly. EN General safety This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. The appliance must be used by adults only, to wash domestic crockery in accordance with the instructions in this manual. The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms.

Do not touch the appliance when barefoot. When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable. The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning the appliance or carrying out any maintenance work. @@ Never touch the heating element. @@@@ Keep detergent and rinse aid out of reach of children.

The packaging material should not be used as a toy. @@ Enzymes provide a particularly effective action at temperatures around 50°C, and as a result detergents containing enzymes can be used in conjunction with low temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle.

To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water and the soil level and quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature.

Assistance Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting). @@@@Never use the services of unauthorised technicians. @@@@Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health. The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Please have the following information to hand: The type of malfunction.

This information can be found on the appliance data plate (see Description of the appliance). Saving energy and respecting the environment Saving water and energy Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. The dishes are rattling against each other or against the sprayer arms.

An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use).



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[LST 329 AX/HA user guide](#)

<http://yourpdfguides.com/dref/4488776>

the dishes and glasses are covered in a white film or lime scale deposits. □ The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). □ The rinse aid has been used up or the dosage is too low (see Rinse aid and salt). The crockery has not been arranged well.

the spray arms cannot move freely. The wash cycle is too gentle (see Wash cycles). An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). ••• The lid on the rinse aid compartment has not been shut correctly. The filter is dirty or blocked (see Care and maintenance). The appliance lock has been activated because no action was taken when it beeps sound. (several short beeps are emitted) (the ON/OFF indicator light flashes and the number 6 appears on the display). □ ••• Water inlet valve malfunctional arm (the ON/OFF indicator light flashes and the number 2 appears on the display). water inlet hose alarm/Water inlet filter blocked. (the ON/OFF indicator light flashes and the number 7 appears on the display).

U dient door te geven: □ het type storing; □ het model van het apparaat (Mod. .



[You're reading an excerpt. Click here to read official HOTPOINT
LST 329 AX/HA user guide
http://yourpdfguides.com/dref/4488776](http://yourpdfguides.com/dref/4488776)