



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LSTB 6B019 EU. You'll find the answers to all your questions on the HOTPOINT LSTB 6B019 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LSTB 6B019 EU
User guide HOTPOINT LSTB 6B019 EU
Operating instructions HOTPOINT LSTB 6B019 EU
Instructions for use HOTPOINT LSTB 6B019 EU
Instruction manual HOTPOINT LSTB 6B019 EU

LSTB 6B019

IT Italiano
Istruzioni per l'uso
LAVASTOVIGLIE - Sommario
Istruzioni per l'uso, 1
Precauzioni Consigli, 2-3
Assistenza, 9
Schema prodotto, 11
Installazione, 14-15
Descrizione de l'apparecchio, 16
Cale Rigenerante e Brillante, 17
Caricare i cesti, 18-19
Detergente e uso della lavastoviglie, 20
Programmi, 21
Manutenzione e cura, 22
Anomalie e rimedi, 23

EN English
Operating Instructions
DISHWASHER - Contents
Operating Instructions, 1
Precautions and advice, 3-4
Assistance, 10
Product Data, 11
Installation, 24-25
Description of the appliance, 26
Refined salt and rinse aid, 27
Loading the dishes, 28-29
Detergent and dishwasher use, 30
Wash cycles, 31
Care and maintenance, 32
Troubleshooting, 33

PL Polski
Instrukcja obsługi
ZMYWARKA - Spis treści
Instrukcja obsługi, 1
Zalecenia i środki ostrożności, 4-5
Serwis Techniczny, 10
Karta produktu, 12
Instalacja, 24-25
Opis urządzenia, 30
Sól regeneracyjna i środki nabłyszczające, 31
Czyszczenie i konserwacja, 32-33
Słownik myjny i obsługowy, 40
Programy, 41
Konsultacja i pomoc, 42
Nieprawidłowe działanie i możliwe środki zaradcze, 43



HU Magyar
Használati útmutató
MOSOGATÓGÉP - Tartalom
Használati útmutató, 1
Szerviz, 10
Önismertető és tanácsok, 5-6
Termékszerűség adaptál, 12
Üzembe helyezés, 14-15
Készletkellék, 16
Regeneráló és fényszűrő, 17
Berakás a kosarakba, 18-19
Mosogatószer és mosogatógép használata, 20
Programok, 21
Karbantartás és ápolás, 22
Hibaelhárítás, 23

BG Български
Инструкция за експлоатация
СЪ ДОМНА МАШИНА - Съдържание
Инструкция за експлоатация, 1
Предпазни мерки и съвети, 5-7
Съхранение и обслужване, 10
Информационна листовка на уреда, 13
Инсталация, 24-25
Описание на уреда, 26
Регенерираща сол и плънк, 27
Зареждане на кошчето, 28-29
Миещ препарат и експлоатация на съдомиялната машина, 30
Програми, 31
Поддръжка и грижа за машината, 32
Непоправимост и начини за отстраняване им, 33

RO Română
Instrucțiuni de folosire
MAȘINA DE SPĂLAT VASE - Sumar
Instrucțiuni de folosire, 1
Precauții și recomandări, 5-6
Asistență, 10
Fișă produsului, 13
Instalare, 24-25
Descrierea aparatului, 26
Sare de deuzitare și Agent de limpezire, 27
Încărcarea cuștilor, 28-29
Detergenții și folosirea mașinii de spălat vase, 30
Programs, 31
Întreținere și curățare, 32
Anomaliile și remedii, 33



[You're reading an excerpt. Click here to read official HOTPOINT LSTB 6B019 EU user guide](http://yourpdfguides.com/dref/5749554)
<http://yourpdfguides.com/dref/5749554>

Manual abstract:

@@@ This appliance was designed for domestic use or similar applications, for example: - farmhouses; - use by guests in hotels, motels and other residential settings; - bed & breakfasts. Remove the appliance from all packaging and make sure it was not damaged during transportation. If it was damaged, contact the retailer and do not proceed any further with the installation process. Never clean or maintain it unless they are given supervision. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. □ The appliance must be used to wash domestic crockery in accordance with the instructions in this manual. □ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms. □ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket.

Do not pull on the cable. □ The water supply tap must be shut off and the plug should be removed from the electrical socket at the end of every cycle and before cleaning the appliance or carrying out any maintenance work. □ The maximum number of place settings is shown in the product sheet. □ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. □ Do not lean or sit on the open door: this may cause the appliance to overturn.

□ The door should not be left open as it may create a dangerous obstacle. □ Keep detergent and rinse aid out of reach of children. □ The packaging material should not be used as a toy. □ Knives and other utensils with sharp edges must be placed either with the points/blades facing downwards in the cutlery basket or horizontally on the tip-up compartments or in the tray/third basket, if available. General safety Disposal • This appliance should not be operated by children younger than 8 years, people with reduced physical, sensory or mental capacities, or inexperienced people who are not familiar with the product, unless they are given close supervision or instructions on how to use it safely and are made aware by a responsible person of the dangers its use might entail.

□ Children must not play with the appliance. □ It is the user's responsibility to clean and maintain the appliance. Children should • To dispose of any packaging materials, follow local legislation so that the packagings may be reused. □ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of reusing and recycling the materials inside the machine, while preventing potential damage to the atmosphere and public health. The crossed-out dustbin symbol shown on all products reminds the owners of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Saving energy and respecting the environment Saving water and energy Bezpieczeństwo ogólne • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours with the Soak cycle (if available, see • Select a wash cycle that is suited to the type of crockery and to the soil level using the Table of Wash Cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels. - If the load is smaller than usual activate the Half Load option (see Special wash cycles • If your electricity supply contract gives details of electricity-saving time bands, run the wash cycles when electricity prices are lower.

The Delayed Start option can help you organise the wash cycles accordingly (see Special wash cycles and options, if available). 9 EN Assistance Before contacting Assistance: • Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting). □ Restart the programme to check whether the problem has ceased to exist. □ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians. Please have the following information to hand: • The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). The standard cleaning cycle corresponds to the Eco cycle. 2) Based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption depends on how the appliance is used. 0 2800 A 180 12 49 Da Fișa produsului

Identificator model furnizor Capacitate nominală în număr de setări standard (1) Clasa de eficiență energetică pe o scară de la A+++ (consum redus) la D (consum ridicat) Consumul de energie anual exprimat în kWh (2) Consumul de energie la programul de spălare standard exprimat în kWh Consumul de energie în modul off (oprit) exprimat în W Consumul de energie în modul left-on (rămas în funcțiune) exprimat în W Consumul de apă anual exprimat în litri (3) Clasa de eficiență la centrifugare pe o scară de la G (eficiență minimă) la A (eficiență maximă) Durata programului de spălare rufe standard exprimată în minute. 23 Installation EN If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back.

WARNING: HAZARDOUS VOLTAGE! Under no circumstances should the water inlet hose be cut as it contains live electrical parts.

Connecting the water supply Adaptation of the water supply for installation should only be performed by a qualified technician. The water inlet and outlet hoses may be positioned towards the right or the left in order to achieve the best possible installation. Make sure the dishwasher does not bend or squash the hoses. Electrical connection Connecting the water inlet hose • To a 3/4" gas cold or hot water connection point (max. 60°C).

□ Run the water until it is perfectly clear. □ Screw the inlet hose tightly into position and turn off the tap. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). The water pressure must be within the values indicated in the Technical Data table - otherwise the dishwasher may not function properly. Make sure the hose is not bent or compressed. Before inserting the plug into the electrical socket, make sure that: • The socket is earthed and complies with current regulations; • the socket can withstand the maximum load of the appliance as shown on the data plate located on the inside of the door (see chapter Description of the appliance); • The power supply voltage falls within the values indicated on the data plate on the inside of the door.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/5749554)

[LSTB 6B019 EU user guide](http://yourpdfguides.com/dref/5749554)

<http://yourpdfguides.com/dref/5749554>

□ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance). do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible.

The cable should not be bent or compressed. If the power supply cable is damaged, have it replaced by the manufacturer or its authorised Technical Assistance Service in order to prevent all potential hazards. (See Connecting the water outlet hose Assistance) The Company shall not be held responsible for any incidents, if these regulations are not observed. Connect the outlet hose to a drain duct with a minimum diameter of 2 cm. (A) The outlet hose connection must be at a height ranging from 40 to 80 cm from the floor or surface where the dishwasher rests. positioning and levelling MAX 80 cm MIN 40 cm 1.

Position the dishwasher on a level sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 2.

Before recessing the dishwasher, stick the adhesive transparent strip* under the wooden shelf in order to protect it from any condensation which may form. 3. Place the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 4*.

To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm. Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it. (see Building-in Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees antiflooding protection even in the event of a supply hose rupture.

instruction sheet attached to the documentation) * Only available in selected models. 24 Advice regarding the first wash cycle After the installation, remove the stoppers from the racks and the retaining elastic elements from the upper rack (if any). The machine has a buzzer/set of tones (depending on the dishwasher model) to inform the user that a command has been implemented: power on, cycle end etc. The symbols/indicator lights/LEDs on the control panel/ display may vary in colour and may have a flashing or fixed light (depending on the dishwasher model). The display* provides useful information concerning the type of wash cycle, drying/wash-cycle phase, remaining time, temperature etc. EN Water softener settings Before starting the first wash cycle, set the hardness level of the water from the mains supply. (see chapter Rinse aid and refined salt). First load the softener tank with water, then introduce about 1 kg of salt. It is perfectly normal for water to flow out. As soon as this procedure is complete, run a wash cycle.

Only use salt that has been specifically designed for dishwashers. After the salt has been poured into the machine, the LOW SALT indicator light* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result. Technical data Dimensions Capacity Water supply pressure Power supply voltage Total absorbed power Fuse width 44,5 cm height 82 cm depth 55 cm 10 standard place-settings 0,05 ÷ Upper rack Upper spray arm Tip-up compartments Rack height adjuster Lower rack Lower spray arm Cutlery basket Washing filter Salt dispenser Detergent and rinse aid dispensers Data plate Control Panel*** Control panel Low Salt Indicator light Select wash cycle button ON-OFF/Reset button and indicator light Wash cycle indicator light Low Rinse Aid Indicator light ***Only in completely built-in models. * Only available in selected models. The number and type of wash cycles and options may vary depending on the dishwasher model. 26 Only use products which have been specifically designed for dishwashers. do not use table salt or industrial salt. Follow the instructions given on the packaging. If you are using a multi-function product, we recommend that you add salt in any case, especially if the water is hard or very hard.

(Follow the instructions given on the packaging.) If you do not add salt or rinse aid, the LOW SALT* and LOW RINSE AID* indicator lights will remain lit. The use of salt prevents the formation of LIMESCALE on the dishes and on the machine's functional components. □ It is important that the salt dispenser be never empty. • It is important to set the water hardness.

The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: • When the LOW RINSE rack. Upper rack Load this rack with delicate and lightweight crockery such as glasses, cups, saucers and shallow salad bowls. Lower rack The lower rack can hold pans, lids, dishes, salad bowls, cutlery etc. Large plates and lids should ideally be placed at the sides. @@Several dishwasher models are fitted with tip-up sectors*. @@@@For optimum drying results incline the tip-up compartments more. @@@@NEVER raise or lower the rack on one side only. @@@@The cutlery tray can be removed. (see Figure. @@@@Their decorations are not resistant. @@@@Crystal objects) can become opaque after a number of wash cycles too. @@ • Use a delicate detergent suitable for crockery. @@ * Only available in selected models. @@@@The amount can be adjusted to the soil level. @@ if tablets are used , one tablet will be enough.

If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. For good washing results also follow the instructions shown on the detergent box. For further questions please ask the detergent producers. Open the detergent dispenser using button D and measure out the detergent according to the Table of wash cycles: • powder or liquid: compartments A (wash detergent) and B (prewash detergent) • tablets: when the cycle requires 1 tablet, place it in compartment A and close cover C; when it requires 2 tablets, place the second tablet on the bottom of the appliance. Remove detergent residues from the edges of the compartment and close cover C until it clicks. The detergent dispenser automatically opens up at the right time according to the wash cycle. If all-in-one detergents are used, we recommend using the TABS option, because it adjusts the cycle so that the best washing and drying results are always achieved.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/5749554)

[LSTB 6B019 EU user guide](http://yourpdfguides.com/dref/5749554)

<http://yourpdfguides.com/dref/5749554>

Only use detergent which has been specifically designed for dishwashers. **DO NOT USE** washing up liquid. Using excessive detergent may result in foam residues remaining in the machine after the cycle has ended.

To achieve the best washing and drying results, the combined use of detergent, rinse aid liquid and refined salt is required. We recommend using detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. Open the door and press the ON/OFF button. Load the racks (see Loading the racks). 5.

Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles) by pressing the P button. Start the wash cycle by shutting the door. 8. The end of the wash cycle is indicated by beeps and by the flashing of the indicator light of the selected wash cycle. Open the door, switch off the appliance by pressing the ON/OFF button, shut off the water tap and unplug the appliance from the electricity socket.

9. Wait a few minutes before removing the crockery in order to avoid burns. Unload the racks, beginning with the lower level. Starting the dishwasher - The machine will switch off automatically during long periods of inactivity in order to minimise electricity consumption. If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. Changing a wash cycle in progress If a mistake was made in the wash cycle selection process, it is possible to change the cycle provided that it has only just begun: open the door, taking care to avoid the escaping steam, and press and hold the ON/OFF button; the machine will switch off. Switch the machine back on using the ON/OFF button and select the new wash cycle and any options desired; start the cycle by closing the door. Adding extra crockery Without switching off the machine, open the door, taking care to avoid the escaping steam, and place the crockery inside the dishwasher. Close the door: the cycle starts from the point at which it was interrupted. Accidental interruptions If the door is opened during the wash cycle or there is a power cut, the cycle stops.

It starts again from the point at which it was interrupted once the door has been shut or the electricity supply restored. Based on the different conditions of use, the wash-cycle duration and data can change. The number and type of wash cycles and options may vary depending on the dishwasher model. Wash cycle which include drying Yes Yes Yes No No Yes EN Wash cycle Eco Intensive Normal Express Soak Half Load Options No No No No No No Approximate duration of wash cycles 03:00' 02:30' 02:00' 00:40' 00:10' 01:20' Water consumption (l/cycle) 10 14 13,5 9 4,0 10,5 Energy consumption (KWh/cycle) 0,83 1,3 1,1 0,8 0,01 0,95 Instructions on wash cycle selection and detergent dosage 1. The ECO wash cycle is the standard cycle to which the energy label data refers. It can be used to wash crockery with a normal soil level and it is the most efficient cycle in terms of energy and water consumption for this type of crockery. Fast cycle to be used for lightly soiled dishes (Ideal for 2 place settings) 21 gr/ml – 1 Tab 5. Pre-wash for dishes while awaiting completion of the load with the dishes from the next meal. no detergent 6. Ideal cycle for a reduced load of normally soiled dishes.

21 gr/ml – 1 Tab Standby consumption: Left-on mode consumption: 5 W - Off mode consumption: 0. 5 W Notes: Optimum performance levels when using the "Express" cycle can be achieved by respecting the specified number of place settings. To reduce consumption even further, only run the dishwasher when it is full. Note for Test Laboratories: for information on comparative EN testing conditions, please send an email to the following address: assistenza_en_lvs@indesitcompany. Com 31 Care and maintenance EN Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks.

Always unplug the appliance when cleaning it and when performing maintenance work. The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products. Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar. Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water.

They must be cleaned if you wish to achieve the best results in every wash. clean the filters regularly. The dishwasher must not be used without filters or if the filter is loose. After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residues. Cleaning the dishwasher • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours.

Preventing unpleasant odours Food residue may become encrusted onto the spray arms and block the holes used to spray the water. It is therefore recommended that you check the arms from time to time and clean them with a small non-metallic brush. The two spray arms may both be removed. To remove the upper spray arm, turn the plastic locking ring in an anti-clockwise direction. The upper spray arm should be replaced so that the side with the greater number of holes is facing upwards. Cleaning the spray arms C 1 A 3 The lower spray arm can be removed by pressing on the side tabs and pulling it upwards. @@@@Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap. @@- Re-place the filter and screw the water hose back into position. Cleaning the water inlet hose* • Disconnect the appliance from the electricity supply and shut off the water tap.

Leave the door of the appliance ajar. When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. 32 Troubleshooting Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: Possible causes / Solutions: EN The dishwasher does not start • The water supply tap is not turned on. or cannot be controlled. Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the wash cycle. The appliance has not been plugged in properly or another electricity socket should be used.



[You're reading an excerpt. Click here to read official HOTPOINT LSTB 6B019 EU user guide](http://yourpdfguides.com/dref/5749554)
<http://yourpdfguides.com/dref/5749554>

The dishwasher door has not been closed properly. the door won't close.

No water drain out of the dishwasher. Make sure that the racks were inserted all the way. • The lock was released. Strongly push the door until a "clacking" noise is heard. The wash cycle has not finished yet. Check the height of the drain hose. The dishes are rattling against each other or against the sprayer arms. Place the dishes properly and make sure the sprayer arms can rotate freely. Too much foam: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (See Detergent and dishwasher use.

) Do not prewash the dishes by hand. • No refined salt. Water hardness adjustment is not suitable: increase the relevant values. (See Refined Salt and Rinse Aid.) • The salt and rinse-aid dispenser cap has not been closed properly. The rinse aid has been used up or the dosage is too low. • The rinse aid dosage is too high. A wash cycle without a drying programme has been selected. The crockery is made from non-stick material or plastic; the presence of water drops is normal. • The crockery has not been arranged properly.

The sprayer arms cannot rotate freely, being hindered by the dishes. The wash cycle is too gentle (see Wash Cycles). Too much foam: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (See Detergent and dishwasher use.) • The lid on the rinse aid compartment has not been closed correctly.

• The filter is dirty or clogged up (see Care and maintenance.) • The refined salt level is low (See Refined Salt and Rinse Aid.) • Make sure that the height of the dishes is compatible with the rack adjustment. The holes in the sprayer arms are clogged up. (See Care and maintenance.

) • There is no water in the mains supply or the tap is shut off. • The water inlet hose is bent (see Installation). The filters are clogged up: they need cleaning. After checking and cleaning, switch the dishwasher on and off and start a new wash cycle. If the problem persists, turn off the water tap, remove the plug and call the Service Centre. The dishwasher makes excessive noise. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly. The dishes are not clean.

The dishwasher won't load any water. .



[You're reading an excerpt. Click here to read official HOTPOINT LSTB 6B019 EU user guide](http://yourpdfguides.com/dref/5749554)
<http://yourpdfguides.com/dref/5749554>