



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LTB 4M116 EU. You'll find the answers to all your questions on the HOTPOINT LTB 4M116 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LTB 4M116 EU
User guide HOTPOINT LTB 4M116 EU
Operating instructions HOTPOINT LTB 4M116 EU
Instructions for use HOTPOINT LTB 4M116 EU
Instruction manual HOTPOINT LTB 4M116 EU

Operating instructions

DISHWASHER

EN

FR

PL

English, 1

Français, 15

Polski, 29

LTB 4M116

Contents

EN

Product Fiche, 2

Precautions, advice and Assistance, 3-4

General safety
Disposal
Saving energy and respecting the environment
Accidents

Installation, 5-6

Positioning and levelling
Connecting the water and electricity supplies
Advice regarding the first wash cycle
Technical data

Description of the appliance, 7

Overall view
Control panel

Loading the racks, 8-9

Lower rack
Cutlery basket
Upper rack
Cutlery tray
Adjusting upper rack

Start-up and use, 10

Starting the dishwasher
Measuring out the detergent

Wash cycles, 11

Table of wash cycles
Ecodesign Regulation

Rinse aid and refined salt, 12

Measuring out the rinse aid
Measuring out the refined salt

Care and maintenance, 13

Shutting off the water and electricity supplies
Cleaning the dishwasher
Preventing unpleasant odours
Cleaning the spray arms
Cleaning the water inlet filter
Cleaning the filters
Leaving the machine unused for extended periods

Troubleshooting, 14



[You're reading an excerpt. Click here to read official HOTPOINT LTB 4M116 EU user guide](http://yourpdfguides.com/dref/5436934)
<http://yourpdfguides.com/dref/5436934>

Manual abstract:

@@Actual energy consumption depends on how the appliance is used. 3) Based on 280 standard cleaning cycles. Actual water consumption depends on how the appliance is used. @@Keep this instruction manual in a safe place for future reference. If the appliance is sold, given away or moved, please ensure the manual is kept with the machine. Please read these instructions carefully: they contain important information on installation, use and safety. This appliance is designed for domestic use or similar applications, for example: - staff kitchen areas in shops, offices and other work environments; - farmhouses; - use by guests in hotels, motels and other residential settings; - bed & breakfasts. a dangerous obstacle. □ Keep detergent and rinse aid out of reach of children. □

The packaging material should not be used as a toy for children.

EN Disposal General safety • The appliance should not be operated by people (including children) with reduced physical, sensory or mental capacities, or by inexperienced people who are not familiar with the product, unless supervision or instructions on how to use it are provided by someone who assumes responsibility for their safety. □ An adult must supervise children at all times to prevent them from playing with the appliance. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. □ The appliance must be used by adults only to wash domestic crockery in accordance with the instructions in this manual. □ The appliance must not be installed outdoors, even in covered areas.

It is extremely dangerous to leave the machine exposed to rain and storms. □ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket. Do not pull on the cable. □ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning or maintaining the appliance.

□ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. □ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. □ The door should not be left open as it may create • Disposal of packaging material: observe local legislation so that the packaging may be reused. □ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the re-using and recycling rate of the materials inside the machine, while preventing potential damage to the environment and public health. The crossed-out dustbin symbol is marked on all products to remind the owners of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Saving energy and respecting the environment Saving water and energy • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). □ Select a wash cycle that is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - for dishes with a normal soil level use the Eco wash cycle, which ensures low energy/water consumption levels.

- If the load is smaller than usual activate the Half Load option* (see Start-up and use). □ If your electricity supply contract gives details of electricity-saving time bands, run wash cycles when electricity prices are lower. The Delayed Start button * (see Start-up and use) helps you organise the wash cycles accordingly. * Only available in selected models. 3 EN Phosphate-free and chlorine-free detergents containing enzymes • We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. • Enzymes provide a particularly effective action at temperatures around 50°C. As a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. □ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water, the soil level and the quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature. Assistance Before contacting Assistance: • Check whether the problem can be resolved using the

Troubleshooting guide (see Troubleshooting).

□ Restart the programme to check whether the problem has ceased to exist. □ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians. Please have the following information to hand: • The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance).

4 Installation If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back. Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. The outlet hose must be at a height ranging from 40 to 80 cm from the floor / surface where the dishwasher rests (A). eN Positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation.

If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Arrange the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop* (see the Assembly Instruction sheet.) 3. Position the dishwasher on a level sturdy floor. If the floor is uneven, the front feet of the appliance should be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4*. To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm.

Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it (see Building-in Instruction Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees anti-flooding protection even in the event of a supply hose rupture.



[You're reading an excerpt. Click here to read official HOTPOINT LTB 4M116 EU user guide](http://yourpdfguides.com/dref/5436934)
<http://yourpdfguides.com/dref/5436934>

To reduce consumption even further, only run the dishwasher when it is full. Standby consumption: Left-on mode consumption: 5 W – Off mode consumption: 0,5 W Consumption data table for the main cycles Standard conditions* Energy consumption (kWh/cycle) INTENSIVE NORMAL Water consumption (l/cycle) Duration (min/cycle) User conditions** Energy consumption (kWh/cycle) Water consumption (l/cycle) Duration (min/cycle) 1,50 1,20 15 150 120 1,30 1,05 14 14 135 110 * Cycle data refers to the values recorded in a laboratory, in accordance with European standard EN 50242. ** Data is obtained by recording values when the appliance is operational and loaded with user crockery. 11 Rinse aid and refined salt EN Only use products which have been specifically designed for dishwashers. do not use table/industrial salt or washing-up liquid.

Follow the instructions given on the packaging. If using a multi-functional product it is not necessary to add any rinse aid. However, we recommend that you add salt, especially if you live in an area where the water is hard or very hard. (Follow the instructions given on the packaging). If you do not add salt or rinse aid, the LOW SALT* and LOW RINSE AID indicator lights will stay lit.

Water hardness level in your area. This information can be obtained from your local water supplier. Switch the dishwasher on and off using the ON/OFF button. Press and hold the P button for a few seconds until you hear a beep sound. Switch the dishwasher on using the ON/OFF button, the indicator light of the set level flashes (water softener set to medium level). During this procedure the salt indicator light flashes. Adjust the hardness level using the P button, (1-2-3-4* see water hardness table) up to max. 4* levels. Press the ON/OFF button to save the setting. Even if using multi-functional tablets, the salt dispenser should still be filled.

Water Hardness Table level 1 2 3 °dH 0 - 11 12 - 17 17 - 34 34 - 50 °fH 0 - 20 21 - 30 31 - 60 61 - 90 mmol/l 1,1 - 2 2,1 - 3 3,1 - 6 6,1 - 9 Average salt container capacity duration** months 5 months 3 months 2 months 2/3 weeks Measuring out the rinse aid Rinse aid makes it easier for the crockery to dry, as water runs off the surfaces more readily and therefore does not leave streaks or marks. The rinse aid dispenser should be filled: • When the LOW RINSE AID indicator light* on the control panel is illuminated, a reserve supply of rinse aid is still available for 1-2 cycles; MA X 4* For values between 0°f and 10°f, we do not recommend the use of salt. * this setting may cause a slight increase in the duration of the cycles. ** for 1 wash cycle per day. 1. Open the dispenser "D" by pressing and pulling up the tab on the lid; 2. Carefully introduce the rinse aid as far as the maximum reference notch of the filling space - avoid spilling it. If this happens, clean the spill immediately with a dry cloth. 3. Press the lid down until you hear a click to close it.

NEVER pour the rinse aid directly into the appliance tub. (°dH = hardness measured in German degrees - °f = hardness measured in French degrees – mmol/l = millimoles per litre) Measuring out the refined salt Rinse-aid dispenser setting If you are not completely satisfied with the drying results, you can adjust the quantity of rinse aid. Switch the dishwasher on and off using the On/Off button. press the P button 3 times. Switch on using the ON/OFF button, the indicator light of the set level flashes (set to factory level) Adjust the level of rinse aid supply using the P button; during this procedure the rinse aid indicator light flashes.

Press the ON/OFF button to save the setting. If the rinse aid level is set to ZERO (ECO cycle), no rinse aid will be supplied. The LOW RINSE AID indicator light will not be lit if you run out of rinse aid. Up to maximum 4 levels can be set based on the dishwasher model. □ If there are streaks on the crockery, set the adjustment device to a lower number (1-2.

) • If there are drops of water or limescale marks, set the adjustment device to a higher number (3-4.) Setting the water hardness Every dishwasher is equipped with a water softener which, by using refined salt specially designed for this type of appliance, supplies water without limescale which is then used to wash the crockery. This dishwasher offers a setting which helps to reduce pollution and optimises washing performance in accordance with the In order to obtain the best possible results from a wash cycle, make sure that the salt dispenser is never empty. Refined salt removes limescale from the water, thus avoiding the formation of deposits on crockery. The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: • When the green float* cannot be seen by simply looking at the cap of the salt dispenser; • When the LOW RINSE AID indicator light on the control panel is illuminated *; 1. Remove the lower rack and unscrew the cap (anticlockwise). 2. The first time you do this: fill the water tank right up to its edge. 3. Position the funnel* (see figure) and fill the salt dispenser up to the edge (approximately 1 kg).

It is normal for a little water to leak out. 4. Remove the funnel* and wipe any salt residues away from the opening; rinse the cap under running water and then screw it on, the head facing downwards so as to let the water flow out of the four slots (star-shaped arrangement) in the lower part of the cap (cap with green float*). It is advisable to perform this procedure every time you add salt to the dispenser. Make sure the cap is screwed on tightly so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). When necessary, measure out the salt before a wash cycle so that any saline solution which has leaked out of the salt dispenser is removed. * Only available in selected models. 12 Care and maintenance Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks. □ Always unplug the appliance when cleaning it and when performing maintenance work. □ The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water.

do not use solvents or abrasive products. □ Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar. Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They should be cleaned if you wish to achieve the best results in every wash. clean the filters regularly.

The dishwasher should not be used without filters or if the filter is loose. □ After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[LTB 4M116 EU user guide](#)

<http://yourpdfguides.com/dref/5436934>

Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residues.

EN Cleaning the dishwasher • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. @ @ @ @ @ @ @ @ The two sprayer arms may both be removed. To remove the upper sprayer arm, turn the plastic locking ring in an anti-clockwise direction. The upper sprayer arm should be replaced so that the side with the greater number of holes is facing upwards. Cleaning the sprayer arms The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards. After cleaning the filters, re-place the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher. Leaving the machine unused for extended periods If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher. Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap.

- Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water. - Re-place the filter and screw the water hose back into position. Cleaning the water inlet filter* • Disconnect the appliance from the electricity supply and shut off the water tap. Leave the door of the appliance ajar. When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. 13 Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: The dishwasher does not start or cannot be controlled. Possible causes / Solutions: • Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the program. • The appliance has not been plugged in properly.

The dishwasher door has not been shut properly. • The lock was released. Strongly push the door until a “clacking” noise is heard. The dishwasher makes excessive noise. The dishes and glasses are covered in a white film or limescale deposits.

The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly. The dishes are rattling against each other or against the sprayer arms. An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (see Start-up and use).

The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). The lid on the salt dispenser is not closed properly. The rinse aid has been used up or the dosage is too low. Has been used up or the dosage is too low (see Rinse aid and setting is not suitable. is made from non-stick material or plastic. The crockery is not clean. The racks are overloaded (see Loading the racks). • The crockery has not been arranged well. The sprayer arms cannot move freely. The wash cycle is too gentle (see Wash cycles).

An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (see Start-up and use). The lid on the rinse aid compartment has not been shut correctly. • The filter is dirty or blocked (see Care and maintenance.) • The refined salt level is low (see Rinse aid and salt). The dishwasher does not take • There is no water in the mains supply. • The water inlet hose is bent (see Installation.) any water in - Tap shut-off • Turn on the tap and the appliance will start after a few minutes. alarm. (beeps are emitted* and all the cycle indicator lights flash.

The appliance lock has been activated because no action was taken when The ON/OFF indicator light flashes the beeps sounded. Rapidly and the 2nd and 3rd wash • Switch off the machine using the ON/OFF button, turn on the tap and switch the machine back on after a few seconds by pressing the same button. recycle indicator lights flash. Program the appliance and restart the wash cycle. .



[You're reading an excerpt. Click here to read official HOTPOINT LTB 4M116 EU user guide](http://yourpdfguides.com/dref/5436934)
<http://yourpdfguides.com/dref/5436934>