



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LTF 11H121 EU. You'll find the answers to all your questions on the HOTPOINT LTF 11H121 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LTF 11H121 EU
User guide HOTPOINT LTF 11H121 EU
Operating instructions HOTPOINT LTF 11H121 EU
Instructions for use HOTPOINT LTF 11H121 EU
Instruction manual HOTPOINT LTF 11H121 EU

Operating instructions

DISHWASHER

EN

NL

English, 1

Nederlands, 15

LTF 11H121

Contents

EN

Precautions, advice and Assistance, 2-3

General safety
Disposal
Saving energy and respecting the environment
Accidents

Installation, 4-5

Positioning and levelling
Connecting the water and electricity supplies
Advice regarding the first wash cycle
Technical data
Ecodesign Regulation

Description of the appliance, 6

Overall view
Control panel

Loading the racks, 7-8

Lower rack
Cutlery basket
Upper rack
Cutlery tray
Adjusting upper rack

Start-up and use, 9

Starting the dishwasher
Measuring out the detergent

Wash cycles, 10

Table of wash cycles

Special wash cycles and Options, 11

Rinse aid and refined salt, 12

Measuring out the rinse aid
Measuring out the refined salt

Care and maintenance, 13

Shutting off the water and electricity supplies
Cleaning the dishwasher
Preventing unpleasant odours
Cleaning the spray arms
Cleaning the water inlet filter
Cleaning the filters
Leaving the machine unused for extended periods

Troubleshooting, 14



[You're reading an excerpt. Click here to read official HOTPOINT LTF 11H121 EU user guide](http://yourpdfguides.com/dref/5062421)
<http://yourpdfguides.com/dref/5062421>

Manual abstract:

@@@ a dangerous obstacle. ⚠ Keep detergent and rinse aid out of reach of children. ⚠ The packaging material should not be used as a toy for children. Disposal General safety ⚠ The appliance should not be operated by people (including children) with reduced physical, sensory or mental capacities, or by inexperienced people who are not familiar with the product, unless supervision or instructions on how to use it are provided by someone who assumes responsibility for their safety. ⚠ An adult must supervise children at all times to prevent them from playing with the appliance.

@@@@@ ⚠ Do not touch the appliance when barefoot. ⚠ When unplugging the appliance always pull the plug from the mains socket. Do not pull on the cable. ⚠ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning or maintaining the appliance. ⚠ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. ⚠ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. ⚠ The door should not be left open as it may create ⚠ Disposal of packaging material: observe local legislation so that the packaging may be reused. ⚠ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the re-using and recycling rate of the materials inside the machine, while preventing potential damage to the environment and public health. The crossed-out dustbin symbol is marked on all products to remind the owners of their obligations regarding separated waste collection.

For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Saving energy and respecting the environment Saving water and energy ⚠ Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). ⚠ Select a wash cycle that is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - for dishes with a normal soil level use the Eco wash cycle, which ensures low energy/water consumption levels. - If the load is smaller than usual activate the Half Load option* (see Start-up and use).

⚠ If your electricity supply contract gives details of electricity-saving time bands, run wash cycles when electricity prices are lower. The Delayed Start button * (see Start-up and use) helps you organise the wash cycles accordingly. * Only available in selected models. 2 Phosphate-free and chlorine-free detergents containing enzymes ⚠ We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. ⚠ Enzymes provide a particularly effective action at temperatures around 50°C. As a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. ⚠ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water, the soil level and the quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature. Assistance Before contacting Assistance: ⚠ Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting). ⚠ Restart the programme to check whether the problem has ceased to exist.

⚠ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians. Please have the following information to hand: ⚠ The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). EN 3 Installation EN If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back. Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. The outlet hose must be at a height ranging from 40 to 80 cm from the floor / surface where the dishwasher rests (A). positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process.

2. Arrange the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop* (see the Assembly Instruction sheet.) 3. Position the dishwasher on a level sturdy floor. If the floor is uneven, the front feet of the appliance should be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4*. To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm. Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it (see Building-in Instruction Before connecting the water outlet hose to the sink drain, remove the plastic plug (B).

Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees anti-flooding protection even in the event of a supply hose rupture. sheet attached to the documentation.) Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on the water hoses or electricity supply cable. The appliance must be connected to the water supply network using new hoses. Do not use old piping. The water inlet and outlet hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation. WARNING: HAZARDOUS VOLTAGE! Under no circumstances should the water inlet hose be cut, as it contains live electrical parts.



[You're reading an excerpt. Click here to read official HOTPOINT LTF 11H121 EU user guide](http://yourpdfguides.com/dref/5062421)
<http://yourpdfguides.com/dref/5062421>

Open the dispenser by pressing and pulling up the tab on the lid; 2. Carefully introduce the rinse aid as far as the maximum reference notch of the filling space - avoid spilling it. If this happens, clean the spill immediately with a dry cloth. 3. Press the lid down until you hear a click to close it. NEVER pour the rinse aid directly into the appliance tub. Adjusting the amount of rinse aid If you are not completely satisfied with the drying results, you may adjust the quantity of rinse aid used. Switch on and off the dishwasher using the ON/OFF button. Press the P button three times. Press the ON/OFF button, the set level appears on the display (default setting of rinse aid is level 2). Adjust the rinse aid supply level with the P button. Press the ON/OFF button to save the adjustment setting. The rinse aid level can be set to ZERO, in such a case the rinse aid will not be supplied and the low rinse aid indicator light in case of running out. A maximum of 4 levels can be set according to the dishwasher model. If there are streaks on the crockery, set to a low number (1-2). In case of drops of water or limescale marks, set to a high I number number (3-4). In order to obtain the best possible results from a wash cycle, make sure that the salt dispenser is never empty. Refined salt removes limescale from the water, thus avoiding the formation of deposits on crockery. The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: When the green float* cannot be seen by simply looking at the cap of the salt dispenser; When the LOW RINSE AID indicator light on the control panel is illuminated *: 1. Remove the lower rack and unscrew the cap (anticlockwise). 2. The first time you do this: fill the water tank right up to its edge. 3. Position the funnel* (see figure) and fill the salt dispenser up to the edge (approximately 1 kg).

It is normal for a little water to leak out. 4. Remove the funnel* and wipe any salt residues away from the opening; rinse the cap under running water and then screw it on, the head facing downwards so as to let the water flow out of the four slots (star-shaped arrangement) in the lower part of the cap (cap with green float*). It is advisable to perform this procedure every time you add salt to the dispenser. Make sure the cap is screwed on tightly so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). When necessary, measure out the salt before a wash cycle so that any saline solution which has leaked out of the salt dispenser is removed. Setting the water hardness Every dishwasher is equipped with a water softener which, by using refined salt designed especially for this type of appliance, supplies water without limescale which is then used to wash the crockery.

This dishwasher offers a setting which helps to reduce pollution and optimises washing performance in accordance with the water hardness level in your area. This information can be obtained from your local water supplier. * Only available in selected models. 12 Care and maintenance Shutting off the water and electricity supplies Turn off the water tap after every wash cycle to avoid leaks. Always unplug the appliance when cleaning it and when performing maintenance work. The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products. Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar.

Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They should be cleaned if you wish to achieve the best results in every wash. clean the filters regularly. The dishwasher should not be used without filters or if the filter is loose. After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1.

Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residues. EN Cleaning the dishwasher Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. The two sprayer arms may both be removed. To remove the upper sprayer arm, turn the plastic locking ring in an anti-clockwise direction. The upper sprayer arm should be replaced so that the side with the greater number of holes is facing upwards. Cleaning the sprayer arms The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards. After cleaning the filters, replace the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher. Clean the water inlet filter at the tap outlet regularly.

- Turn off the water tap. - Re-place the filter and screw the water hose back into position. Leave the door of the appliance ajar. When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. 13 Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: The dishwasher does not start or cannot be controlled. the door won't close. No water drains out from the dishwasher. Possible causes / Solutions: Turn off the appliance by pressing the ON/OFF button, switch it back on after approximately 5 one minute and reset the program.

The appliance has not been plugged in properly. The dishwasher door has not been shut properly. The lock was released. Strongly push the door until a clacking noise is heard. The dishes are rattling against each other or against the sprayer arms. Excessive foam presence: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (see Start-up and use). The level of the refined salt is low or the dosage setting is not suited to the hardness of the T water (see Rinse aid and salt). The lid on the salt dispenser is not closed properly. The rinse aid has been used up or the dosage is too low. The rinse aid dosage is too high. A wash cycle without a drying programme has been selected. The rinse aid has been used up or the dosage is too low (see Rinse aid and salt). The racks are overloaded (see Loading the racks).



[You're reading an excerpt. Click here to read official HOTPOINT LTF 11H121 EU user guide](http://yourpdfguides.com/dref/5062421)
<http://yourpdfguides.com/dref/5062421>

• The crockery has not been arranged well. • The sprayer arms cannot move freely. • The wash cycle is too gentle (see Wash cycles). • Excessive foam presence: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (see Start-up and use). • The lid on the rinse aid compartment has not been shut correctly.

• The filter is dirty or blocked (see Care and maintenance). • The refined salt level is low (see Rinse aid and salt). • Turn on the tap and the appliance will start after a few minutes. • The appliance lock has been activated because no action was taken when the beeps sounded. • The water inlet hose is bent (see Installation). Re-program the appliance and restart the wash cycle. The dishwasher makes excessive noise. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly. The dishes are not clean. The dishwasher does not take any water in - Tap shut-off alarm (beeps are heard and H appears for some minutes on the display) (the ON/OFF indicator light flashes and number 6 appears on the display). U dient door te geven: • het type storing; • het model van het apparaat (Mod. Eco* Uitgestelde Start - Tabs - Extra Droog Uitgestelde Start - Tabs - Extra Droog Zone wash - Short Time Uitgestelde Start - Tabs - Extra Droog Zone wash - Short Time Uitgestelde Start - Tabs Ja 2. .



[You're reading an excerpt. Click here to read official HOTPOINT LTF 11H121 EU user guide](http://yourpdfguides.com/dref/5062421)
<http://yourpdfguides.com/dref/5062421>