



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT MTP 1911 F/HA. You'll find the answers to all your questions on the HOTPOINT MTP 1911 F/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT MTP 1911 F/HA
User guide HOTPOINT MTP 1911 F/HA
Operating instructions HOTPOINT MTP 1911 F/HA
Instructions for use HOTPOINT MTP 1911 F/HA
Instruction manual HOTPOINT MTP 1911 F/HA

Istruzioni per l'uso

FRIGORIFERO 2 porte



MTP 1911 F/HA

Sommario

Installazione, 2

Posizionamento e collegamento

Reversibilità apertura porte

Descrizione dell'apparecchio, 3-4

Pannello di controllo

Vista d'insieme

Accessori, 5

Vano frigorifero

Vano congelatore

Avvio e utilizzo, 6-7

Avviare l'apparecchio

Come muoversi nel tempo

Sistema di raffreddamento

Utilizzare al meglio il frigorifero

Utilizzare al meglio il congelatore

Manutenzione e cura, 8

Escludere la corrente elettrica

Pulire l'apparecchio

Evitare muffe e cattivi odori

Sostituire la lampadina

Precauzioni e consigli, 9

Sicurezza generale

Smaltimento

Risparmiare e rispettare l'ambiente

Anomalie e rimedi, 10

Assistenza, 11

Assistenza attiva 7 giorni su 7



[You're reading an excerpt. Click here to read official HOTPOINT MTP 1911 F/HA user guide](http://yourpdfguides.com/dref/4489072)
<http://yourpdfguides.com/dref/4489072>

Manual abstract:

Pass them on to possible new owners of the appliance. Before inserting the plug into the electrical socket ensure the following: The appliance is earthed and the plug is compliant with the law. The socket can withstand the maximum power of the appliance (this is indicated on the data plate in the bottom left section of the refrigerator compartment), for example 150 W). The voltage is in the range of values indicated on the data plate located on the bottom left section (e.g. The socket is compatible with the plug of the appliance. If the socket is incompatible with the plug, ask an authorised technician to replace it (see Assistance). Once the appliance has been installed, the power supply cable and the electrical socket must be easily accessible. The cable must not be bent or compressed. The cable must be checked regularly and replaced by authorised technicians only (see Assistance). The manufacturer declines any liability should these safety measures not be observed.

Do not obstruct the rear fan grills. The compressor and condenser give off heat and require good ventilation to operate correctly and save energy. 3. Leave a space of at least 10 cm between the top part of the appliance and any furniture above it, and at least 5 cm between the sides and any furniture/side walls. 4. Ensure the appliance is away from any sources of heat (direct sunlight, electric stove, etc. In order to maintain the correct distance between the appliance and the wall behind it, fit the spacers supplied in the installation kit, following the instructions provided. levelling 1. Install the appliance on a level and sturdy floor. 2.

If the floor is not perfectly horizontal, adjust the refrigerator by tightening or loosening the front feet. Reversible doors If it is necessary to change the direction in which the doors open, please contact the Technical Assistance Centre. I CARE This is used to activate and deactivate the I Care function (the optimal temperature for energy saving levels). When activated, the AUTO LED and the I Care LED illuminate simultaneously. ALARMS This controls all the alarm signals connected to product operation. CHILD LOCK Activates or deactivates the control panel button lock in order to avoid the risk of the various functions being activated accidentally by children. REFRIGERATOR and Temperature Adjustment Enable the temperature setting of the refrigerator to be modified, with the relative confirmation of the temperature selected shown on the display. It is also possible to use these buttons to deactivate the refrigerator compartment only. FREEZER and Temperature Adjustment Enable the temperature setting of the freezer to be modified, with the relative confirmation of the temperature selected shown on the display. HOLIDAY SUPER COOL ON/OFF REFRIGERATOR status bar Indicates the set temperature relating to the refrigerator compartment or shows that it has been deactivated (in this case the status bar is disabled).

FREEZER status bar Shows the set temperature relating to the freezer compartment. ICE PARTY Activates or deactivates the ICE PARTY function (It reduces the temperature of the freezer for the period of time required to cool a bottle.). The ICE PARTY illuminates) 15 Description of the appliance GB Overall view ICE DEVICE FAST FREEZER compartment STORAGE compartment FRESH BOX Compartment Removable lidded shelf with EGG TRAY BUTTER dish*

Removable multipurpose SHELVES MULTI-USE bin* SHELVES BEVERAGE CAN shelves Removable multipurpose SHELVES BOTTLE shelf MOISTURE adjusted FRUIT and VEGETABLE bin Levelling FEET Number and/or position may vary. * Available only on certain models. 16 Accessories Refrigerator compartment 1 2 SHELVES: the shelves are removable and their height may be adjusted thanks to special rails (see diagram), allowing easy storage of large containers and bulky food. The height may be adjusted without removing the shelf completely. FRESH BOX*: for fresh meat and fish. It can also be used for cold meals. After about 2 hours, the ice cubes will be ready.

The ice cubes will fall in to the tray below, ready to be used. Clean the inside of the refrigerator well using warm water and bicarbonate of soda before placing food inside it. The appliance comes with a motor protection control system which makes the compressor start approximately 8 minutes after being switched on. The compressor also starts each time the power supply is cut off whether voluntarily or involuntarily (blackout). Freezer Compartment When the product is switched on the freezer compartment is set to its default value of -18°C.

We recommend that the SUPER FREEZE function is set (the freezer status bar continues to display the set value) in order to accelerate the cooling process of the compartment; when the inside of the compartment has reached its optimal temperature the function will be deactivated and the food may be placed inside.

Refrigerator Compartment When the appliance is switched on the refrigerator compartment is set to its default value of +5°C. We recommend that the SUPER COOL function is set (the refrigerator status bar continues to display the set value) in order to accelerate the cooling process of the compartment. After a few hours it will be cool enough for food to be placed inside. The temperatures are automatically set to +5°C for the refrigerator compartment and -18°C for the freezer compartment (these are standard food storage values).

When the I Care function is active, the appliance automatically adjusts the temperatures according to the conditions inside and outside the refrigerator; the operation of this function is signalled by the text AUTO. Whenever it is necessary to activate the I Care function at temperatures that are different to the standard storage values, the I Care button must be pressed as soon as the function is activated and held down while the new and buttons.

This function is indicated by the text. ! Close bottles and wrap food tightly.

After 24 hours the indicator light stops flashing and remains on constantly. Place the food inside the freezer and close the door. After another 24 hours, the function will be disabled automatically (indicator light goes out). Do not re-freeze food that is defrosting or that has already been defrosted. These foods must be cooked and eaten (within 24 hours). Fresh food that needs to be frozen must not come into contact with food that has already been defrosted.

Do not place glass bottles which contain liquids, and which are corked or hermetically sealed separately collected. It is NOT sufficient to hold the ON/OFF button down for more than two seconds to eliminate all electrical contact. In case of malfunction, under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or further malfunctioning of the appliance. Do not use any sharp or pointed utensils or electrical equipment - other than the type recommended by the manufacturer - inside the frozen food storage compartments.



[You're reading an excerpt. Click here to read official HOTPOINT MTP 1911 F/HA user guide](http://yourpdfguides.com/dref/4489072)
<http://yourpdfguides.com/dref/4489072>

□ Do not put ice cubes taken directly from the freezer into your mouth. □ Do not allow children to tamper with the controls or play with the appliance. Under no circumstances should they be allowed to sit on the bins or to hang from the door. □ Keep packaging material out of reach of children. Respecting and conserving the environment □ Install the appliance in a cool, well-ventilated room.

Ensure that it is protected from direct sunlight and do not place it near sources of heat. □ Try to avoid keeping the door open for long periods. A significant amount of energy is used every time the door is opened. □ Do not over-fill the appliance: cold air must circulate freely for food to be preserved properly. If air circulation is impeded, the compressor will work continuously.

□ Do not place hot food in the refrigerator. The internal temperature will increase, forcing the compressor to work harder and consume more energy.

@@@ malfunctions: The display is completely switched off. The motor does not start. the display is on but it is dim.

@@@@@ □ The refrigerator door has been open for more than two minutes. The buzzer stops when the door is closed or when the ALARM button is pressed. □ The temperature inside the freezer is too high. The freezer will maintain a temperature of around 0°C so that the food will not refreeze, allowing you to eat it within 24 hours or to refreeze it after it has been cooked. To switch off the buzzer, press the ALARM button. Press a second time to display the set value on the freezer status bar, switch off the ALARM LED and restore normal operation. □ The temperature of the freezer is dangerously high: the food inside must not be eaten. the freezer will maintain a temperature of approximately 0°C. To switch off the buzzer, press the RESET ALARM button. Press a second time to display the set value on the freezer status bar, switch off the ALARM LED and restore normal operation.

□ □ □ The doors do not close properly or the seals are damaged. The doors are opened too frequently. The temperature that has been set is too high (see Start-up and use). The refrigerator or the freezer have been over-filled. The alarm sounds, the ALARM LED flashes and the freezer status bar LEDs flash simultaneously. The refrigerator and the freezer do not cool well. The food inside the refrigerator is beginning to freeze. The motor runs continuously. □ The temperature that has been set is too low (see Start-up and use). □ The SUPER FREEZE button has been pressed (rapid freezing): the yellow SUPER FREEZE light is on or flashing (see Description).

The door is not closed properly or is continuously opened. □ The outside ambient temperature is very high. □ The Aircooler system is only activated automatically when it becomes necessary to restore .



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4489072)

[MTP 1911 F/HA user guide](http://yourpdfguides.com/dref/4489072)

<http://yourpdfguides.com/dref/4489072>