



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT NMBL 1922 CVW/HA. You'll find the answers to all your questions on the HOTPOINT NMBL 1922 CVW/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT NMBL 1922 CVW/HA
User guide HOTPOINT NMBL 1922 CVW/HA
Operating instructions HOTPOINT NMBL 1922 CVW/HA
Instructions for use HOTPOINT NMBL 1922 CVW/HA
Instruction manual HOTPOINT NMBL 1922 CVW/HA

Operating Instructions

REFRIGERATOR/FREEZER COMBINATION

GB
English, 1

F
Français, 13

PL
Polski, 25

SL
Slovenščina, 37

NMBL 1922 CVW/HA

Contents

Installation, 2

Positioning and connection

Description of the appliance, 3-4

Control panel

Overall view

Accessories, 5

Start-up and use, 6-7

Starting the appliance

Chiller system

Using the refrigerator to its full potential

Using the freezer to its full potential

Maintenance and care, 8-9

Switching the appliance off

Cleaning the appliance

Avoiding mould and unpleasant odours

Defrosting the appliance

Replacing the light bulb

Precautions and tips, 10

General safety

Disposal

Respecting and conserving the environment

Troubleshooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT NMBL 1922 CVW/HA user guide](http://yourpdfguides.com/dref/4489255)
<http://yourpdfguides.com/dref/4489255>

Manual abstract:

Pass them on to possible new owners of the appliance. @@Before inserting the plug into the electrical socket ensure the following: □ The appliance is earthed and the plug is compliant with the law. □ The socket can withstand the maximum power of the appliance, which is indicated on the data plate located on the bottom left side of the fridge (e. □ The voltage must be in the range between the values indicated on the data plate located on the bottom left side (e. □ The socket is compatible with the plug of the appliance. If the socket is incompatible with the plug, ask an authorised technician to replace it (see Assistance). Once the appliance has been installed, the power supply cable and the electrical socket must be easily accessible. ! The cable must not be bent or compressed. ! The cable must be checked regularly and replaced by authorised technicians only (see Assistance). ! The manufacturer declines any liability should these safety measures not be observed.

Do not obstruct the rear fan grills. The compressor and condenser give off heat and require good ventilation to operate correctly and save energy. 3. Leave a space of at least 10 cm between the top part of the appliance and any furniture above it, and at least 5 cm between the sides and any furniture/side walls. 4. Ensure the appliance is away from any sources of heat (direct sunlight, electric stove, etc. In order to maintain the correct distance between the appliance and the wall behind it, fit the spacers supplied in the installation kit, following the instructions provided. levelling 1. Install the appliance on a level and rigid floor. 2.

If the floor is not perfectly horizontal, adjust the refrigerator by tightening or loosening the front feet. 2 Description of the appliance Control panel POWER Indicator light REFRIGERATOR OPERATION Knob SUPER COOL Indicator light SUPER FREEZE Indicator light FREEZER OPERATION Knob GB SUPER COOL Button SUPER FREEZE Button □ REFRIGERATOR OPERATION Knob to regulate the temperature of the refrigerator compartment. Is the optimal temperature for energy saving levels. @@@@□ POWER Indicator light illuminates when the appliance is connected to the electricity network. SUPER FREEZE button (rapid freezing) to freeze fresh food. When it is pressed, the SUPER FREEZE indicator light illuminates (see Start-up and use). □ SUPER FREEZE Yellow indicator light (rapid freezing) illuminates when the SUPER FREEZE button is pressed. □ FREEZER OPERATION Knob to regulate the temperature of the freezer compartment. Is the optimal temperature for energy saving levels. Switches the appliance off, including the refrigerator.

! The indicator lights are also used to indicate an unusual temperature increase in the freezer compartment (see Troubleshooting). 3 Description of the appliance GB Overall view The instructions contained in this manual are applicable to different model refrigerators. The diagrams may not directly represent the appliance purchased. For more complex features, consult the following pages. SYSTEM Removable multipurpose SHELVES□ SHELVES□ WINE RACK* FRESH BOX Compartment* FRUIT and VEGETABLE bin Removable multipurpose SHELVES□ BOTTLE shelf FREEZER and STORAGE compartment ICE CARE ice tray□ Removable multipurpose SHELVES□ STORAGE compartment Levelling FEET □ Varies by number and/or position. * Available only on certain models. 4 Accessories Refrigerator compartment 1 2 SHELVES: with or without grill. Due to the special guides the shelves are removable and the height is adjustable (see diagram), allowing easy storage of large containers and food. Height can be adjusted without complete removal of the shelf. 3. Check the indicator light again: if necessary, readjust it following the initial process. If large quantities of food have been added or if the refrigerator door has been opened frequently, it is normal for the indicator not to show OK. @@GB FRESH BOX*: for fresh meat and fish. @@It can also be used for □cold meals. @@@@□ 1.

Pull out the tray by pushing it up. @@ 2. Take care not to exceed the level indicated (MAX WATER LEVEL). @@ 3. Turn the tray 90°: due to the connected compartments each mould fills with water (see diagram). 4. Close the opening with the lid provided and put the tray back. 5. When the ice has formed (minimum time approximately 8 hours) knock the tray against a hard surface and wet the outside so that the ice cubes come loose and take them out through the opening. TEMPERATURE Indicator light*: to identify the coldest area in the refrigerator. 1. Check that OK appears clearly on the indicator light (see diagram). mAX WATER LEVEL 2. If the word □OK□ does not appear it means that the temperature is too high: adjust the REFRIGERATOR OPERATION knob to a higher position (colder) and wait approximately 10 hours until the temperature has been stabilised. Before starting the appliance, follow the installation instructions (see Installation).

! Before connecting the appliance, clean the compartments and accessories well with lukewarm water and bicarbonate. ! The appliance comes with a motor protection control system which makes the compressor start approximately 8 minutes after being switched on. The compressor also starts each time the power supply is cut off whether voluntarily or involuntarily (blackout). Insert the plug into the socket and ensure that the green POWER indicator light illuminates.

After a few hours you will be able to put food in the refrigerator. 4. Turn the FREEZER OPERATION knob to an average value and press the SUPER FREEZE button (rapid freezing): the SUPER FREEZE indicator light will illuminate. Once the refrigerator has reached the optimal temperature, the indicator light goes out and you can begin food storage. Using the refrigerator to its full potential □ Use the REFRIGERATOR OPERATION knob to adjust the temperature (see Description). □ Press the SUPER COOL button (rapid cooling) to lower the temperature quickly.

@@@@□ Remember that cooked foods do not last longer than raw foods. Do not store liquids in open containers. @@ food hygiene 1. @@ 2. @@ 3. @@ 4. @@ 5. Remove all food past its expiry date from the refrigerator. 6. @@) should be stored in the coldest zone of the fridge compartment, i. e. @@@@@@@@@@@@@@These foods must be cooked and eaten (within 24 hours). @@@@@@@@@@@@@@□ In order to obtain a greater amount of space in the freezer compartment, you may remove the bins (except the lowest bin and the special COOL CARE ZONE bin, which has an adjustable temperature) and place the food directly onto the evaporator plates. ! Do not open the door during freezing. ! If there is a power cut or malfunction, do not open the freezer door. This will help maintain the temperature inside the freezer, ensuring that foods are conserved for at least 9 -14 hours. GB 7 Maintenance and care GB Switching the appliance off During cleaning anC of 19/02/73 (Low Voltage) and subsequent amendments; -89/336/EEC of 03. @@@@@@@@@@@@@@□ Do not touch the appliance with bare feet or with wet or moist hands and feet.



[You're reading an excerpt. Click here to read official HOTPOINT NMBL 1922 CVW/HA user guide](http://yourpdfguides.com/dref/4489255)
<http://yourpdfguides.com/dref/4489255>

□ Do not touch the internal cooling elements: this could cause skin abrasions or frost/freezer burns. □ When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable.

□ Before cleaning and maintenance, always switch off the appliance and disconnect it from the electrical supply. It is not sufficient to set the temperature adjustment knobs on OFF (appliance off) to eliminate all electrical contact. □ In the case of a malfunction, under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or further malfunctioning of the appliance. □ Do not use any sharp or pointed utensils or electrical equipment - other than the type recommended by the manufacturer - inside the frozen food storage compartments. □ Do not put ice cubes taken directly from the freezer into your mouth. □ Do not allow children to tamper with the controls or play with the appliance. @@ □ Keep packaging material out of the reach of children! it can become a choking or suffocation hazard. @@@ □ Try to avoid keeping the door open for long periods or opening the door too frequently in order to conserve energy. □ Do not fill the appliance with too much food: cold air must circulate freely for food to be preserved properly.

If circulation is impeded, the compressor will work continuously. □ Do not place hot food directly into the refrigerator. The internal temperature will increase and force the compressor to work harder and will consume more energy. □ Defrost the appliance if ice forms (see Maintenance). A thick layer of ice makes cold transference to food products more difficult and results in increased energy consumption.

@@@ The motor does not start. @@@ GB The indicator lights are on but the light is □ Pull out and reverse the plug before putting it back in the socket.

B) The alarm sounds and the two yellow indicator lights flash. C) The alarm sounds and the two yellow indicator lights as well as the green one flash.

Heating is excessive + buzzer a) The refrigerator door has remained open for more than two minutes (the buzzer will stop sounding when you shut the door) or the correct switching-off procedure was not followed (see Maintenance).

B) The temperature in the freezer is too high. Check the quality of the food products and dispose if necessary. C) The temperature in the freezer has reached a dangerous level. The food must be disposed immediately. B/c) In both these cases the freezer will maintain a temperature of about 0°C so that the food does not re-freeze. To turn off the acoustic signal open and close the refrigerator door. To restore normal operation bring the FREEZER OPERATION k.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4489255)

[NMBL 1922 CVW/HA user guide](http://yourpdfguides.com/dref/4489255)

<http://yourpdfguides.com/dref/4489255>