



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT TCD G51 XB. You'll find the answers to all your questions on the HOTPOINT TCD G51 XB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT TCD G51 XB
User guide HOTPOINT TCD G51 XB
Operating instructions HOTPOINT TCD G51 XB
Instructions for use HOTPOINT TCD G51 XB
Instruction manual HOTPOINT TCD G51 XB

Notice d'utilisation et installation

SÈCHE-LINGE

F

GB

Français, 1 English, 19

TCD G51

La première fois que vous allumez votre sèche-linge, vous devez choisir la langue. Voir page 6

Table des Matières

Informations Importantes, 2-3

Installation, 4

Où installer votre sèche-linge
Ventilation
Connexions électriques
Avant de commencer à utiliser votre sèche-linge

Description du sèche-linge, 5

Pour ouvrir la porte
Caractéristiques
Tableau de commandes

L'affichage, 6-8

Démarrage et programmes, 8-11

Choisir un programme
Programmes spéciaux
Options de modifications des programmes
Tableau des programmes
Les commandes

Linge, 12-13

Trier votre linge
Étiquettes d'entretien
Vêtements spéciaux
Temps de séchage

Avertissements et Suggestions, 14

Sécurité générale
Élimination
Économiser de l'énergie et respecter l'environnement

Entretien et Nettoyage, 15

Éclairer l'électrique
Nettoyer le filtre après chaque cycle
Videz le réservoir d'eau après chaque cycle
Vérifier le tambour après chaque cycle
Nettoyage du groupe condenseur
Nettoyer le sèche-linge

Que faire en cas de panne, 16

Service Après-vente, 17

Pièces de rechange

! Conservez cette notice d'utilisation et d'installation à portée de main de manière à pouvoir vous y référer si nécessaire. Emmenez-la avec vous si vous déménagez et, si vous vendez cet appareil ou que vous le donnez à un tiers, faites en sorte que cette notice accompagne le sèche-linge de manière à ce que le nouveau propriétaire soit informé des avertissements et suggestions concernant le fonctionnement de ce sèche-linge.
! Lisez attentivement ce mode d'emploi, les pages suivantes contiennent des informations importantes concernant l'installation et des suggestions relatives au fonctionnement de cet appareil.

 Ce symbole vous rappelle de lire le livret d'instructions.



1



[You're reading an excerpt. Click here to read official HOTPOINT TCD G51 XB user guide](http://yourpdfguides.com/dref/4488855)
<http://yourpdfguides.com/dref/4488855>

Manual abstract:

This symbol reminds you to read this booklet. 19 Important Information GB For your Condenser dryer to operate efficiently, you must follow the regular maintenance schedule shown below: Fluff Filter. ! You MUST clean the fluff filter after EVERY drying cycle. sSTEP 1. Open the door of your dryer. sSTEP 2. Pull out the filter (using the two finger grips). sSTEP 3. Clean any fluff deposits from the filter mesh. sSTEP 4. Refit the filter - NEVER run the dryer without the filter in position. ! Failure to clean the filter after EVERY drying cycle will affect the drying performance of your machine. @@ You MUST empty the water container after EVERY drying cycle. sSTEP 1. @@ sSTEP 2. Empty all the water collected in the water container. sSTEP 3. @@ ! @@ ! Failure to empty the water container will result in: - The machine will stop heating (so the load may still be wet at the end of the drying cycle). - The 'Empty Water' message will tell you that the water container is full. Priming the Water Collection System When your dryer is new, the water container will not collect water until the system is primed. This will take 1 or 2 drying cycles. Once primed it will collect water during every drying cycle. You MUST clean the fluff from the condenser EVERY month. sSTEP 3. Flush the condenser, from the rear with water, to remove any fluff deposits. sSTEP 4. Refit the condenser unit - ensure that the unit is pushed in fully, all 3 clips are re-secured and the positioning arrows on the front of the condenser are pointing upwards. gB STEP 1. Open the condenser cover - hold the handle and pull towards you. sSTEP 2.

Remove the condenser by rotating the 3 clips then pulling the condenser towards you. (There may be some water in the tubes, this is normal). q Check that: - The positioning arrows are pointing upwards. - The 3 clips are re-secured back into their 'lock' position. rotate 3 clips ! Failure to clean the condenser could cause premature failure of your dryer. 21 Installation GB Where to put your dryer Place your dryer at a distance from gas ranges, stoves, heaters, or cook tops because flames can damage the appliance. Q Minimum gap 10mm If you are going to install the appliance under a work counter, be sure to leave a 10mm space between the Minimum gaps top and any other objects 15mm on or above the machine and a 15mm space between the sides and lateral furnishings or walls. This is to ensure proper air circulation. Make sure that the back vents are not obstructed. Q Water drain If your dryer is installed next to a drain the water can be plumbed into this drain.

This does away with the need to empty the water container. If the dryer is stacked onto or installed next to a washing machine it can share the same drain. The height of the drain must be less than 3' (1m) from the bottom of the dryer. Remove the existing clip and hose from position shown (see diagram). remove clip and hose from here.

Ventilation When the dryer is in use, there has to be adequate ventilation. Make sure you put your dryer in an environment that is not damp and has proper air circulation throughout. Airflow around the dryer is essential to condense the water produced during the washing, the dryer will not operate efficiently in an enclosed space or cupboard. ! We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door. ! If using the dryer in a small or cold room some condensation could be experienced.

Fit a suitable length of hose to the . Fit new hose and refit new location shown (see diagram) clip here. Make sure that the hose is not squashed or kinked when the dryer is in its final location. Electrical connections Make sure of the following before you insert the plug into the the electrical socket: q The socket must be grounded. Q The socket must be able to sustain the machines maximum power, which is indicated on the rating label (see Dryer Description). Q Power voltage must be within the values indicated on the rating label (see Dryer Description). Q The socket must be compatible with the dryers plug. Should this not be the case, replace the plug or the socket. ! The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if it is exposed to rain or storms.

! Once installed, the dryers electrical wire and plug must be within easy reach. The power cord must not be bent or squashed. ! The power cord supplied should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorised technicians (see Service). New or longer power cords are supplied at an extra charge by authorised dealers. ! The manufacturer denies any responsibility should any of these rules not be followed. ! If in doubt about any of the above consult a qualified electrician. Door Reversal Instructions Hinge Door latch Door catch Hinge The door of your dryer is reversible and can easily be changed. Before you start using your dryer Once you have installed your dryer and before you use it, clean the inside of the drum to remove any dust that could have accumulated during transport. 22 Dryer Description To open the door Press and release the front panel in position shown The features Water container Rating plate GB Model & Serial numbers Condenser Unit (cover open) Condenser cover Condenser cover handle (Pull to open) Filter Air intake grille Control panel PROGRAMME Selection Buttons Display Unit CHILD LOCK Button ON/OFF Button The ON/OFF button/light : If the dryer is running and this button is pressed, the dryer is turned off. Press again, the dryer restarts.

The PROGRAMME selection buttons set the programme: press the button corresponding to the programme you want to select (see Start and Programmes). The OPTION buttons/indicators: these buttons select available options for your selected programme (see The Controls). The indicators on the display unit next to the buttons light to show that the option has been selected. The START/PAUSE button/light starts a selected programme. When you press this button there will be one beep and the display will show PAUSED .

When a programme is running, holding this button in pauses the programme and stops the dryer. The light is green when the programme is running, flashing amber if the programme has been paused or flashing green if on standby waiting to start a programme (see Start and Programmes). OPTION Buttons and indicators START/PAUSE Button & Light The Display Unit gives warnings and information about the programme (see next page). The CHILD LOCK button/icon : Press and hold this button after selecting your programme and any options, this prevents the programme settings from being changed, the display will briefly show LOCKED . When the icon is lit, the other buttons and the programme knob are disabled.

Hold the button to cancel and the icon will go out, the display will briefly show UNLOCKED .



[You're reading an excerpt. Click here to read official HOTPOINT TCD G51 XB user guide](http://yourpdfguides.com/dref/4488855)
<http://yourpdfguides.com/dref/4488855>

23 The Display GB Selecting your language The first time you turn on your dryer you should select your preferred language from the available list. To change: the language current selection must flash, on the first line of the display. - Press and hold all 3 buttons: for 5 seconds. To - Press the Child Lock or the Timed Dry button scroll up or down through the list. - When your required language is flashing on the top line of the display, pressing the Dryness Level button will select your choice. Understanding the display Programme selection and display The selected programme is shown on the first line of the display when you select the corresponding button, this message is shown while the programme is running. COTTON HIGH HEAT COTTON LOW HEAT SYNTHETICS BED & BATH EASY IRON AIRING DELICATES WOOL When you select the memory button the Display will show your selected programme with 'M' before its name. Dryness levels During programme selection for an automatic programme that has different dryness levels available (see Programmes Table). The second line of the display shows the dryness level you require, for each press of the Dryness Level button option from the list below is selected and displayed.

IRON DRY HANGER DRY CUPBOARD DRY Iron Dry: Dries your clothes ready for ironing. Hanger Dry: Dries your clothes ready for hanging. Cupboard Dry: Dries your clothes ready for wearing. The display also shows: one, two or three blocks, depending on your selection. These are displayed during the programmes progress. The next 24 The Display Programme progress The second line of the display shows the status of the programme as it progresses: (long messages scroll across the line) PRE CARE DRY COOL TUMBLE END OF CYCLE, POST CARE PHASE (if option available and selected). END OF CYCLE, EMPTY THE WATER BOTTLE If the Mixed Dry option been reached: IRON DRY REACHED HANGER DRY REACHED is available and selected this line displays when the different dryness levels have (if option available and selected). GB Timed drying After selecting a programme that has a Timed Dry option, press the Timed button and the display will increment the selected time, each time you press and release the button (see Start and Programmes). Each press advances: 0:20 0:30 1:00 1:30 2:00 2:40 3:00 then , and then repeats. Delicates have a maximum time of: 1:40 The bars to the right of the time, light to give an indication of the time duration selected: 0:20 0:30 1:00 1:30 2:00 2:40 3:00 The selected time remains displayed after the programme starts. delay and Time to End Some programmes can have a delayed start (see Start and Programmes). Press the Delay button Each press of the Delay button advances the delay setting in 1 hour increments, from: 1h to 24h , then OFF and then after a couple of seconds cancels the delay. The delay time is shown on the display next to the Delay button. The display counts down the minutes of the delay period after the Start/Pause button is pressed. The second line of the display shows STARTS IN and the icon flashes.

@ @ @ @ 5kg Synthetics 2kg Denim 2kg 2. @ @ Should this not be possible repeat the programme. @ @ @ @ @ @ Q It can be used for load sizes up to 1kg (approximately 3 sweaters). Q We recommend that garments are turned inside out before drying. @ @ @ @ Allow these to dry naturally as over-drying could damage garments.

! @ @ e. It will not stretch back to original size and shape. ! This programme is not suitable for Acrylic garments. @ @ @ @ programme option modifiers Mixed Dry Available with Cotton High Heat and Synthetic programmes. This option used after selecting either a Cupboard Dry or Hanger Dry dryness level. This allows you to remove items when they have reached Hanger Dry or Iron Dry. When the dryer detects the end of the programme, the colons on the display stop flashing to show that the time has stopped counting down. The Start/Pause button must be pressed to resume the programme. The display will change to show the current status, the colons flash and count down continues. Q During the Post Care phase, the programme ends.

Pressing the Start/Pause button will restart a new programme from the beginning. Q Note If you have a power cut, switch off the power or remove the plug. When power is restored, press the Start/Pause button and the programme will resume. 29 Laundry GB Sorting your laundry Check symbols on clothing labels to make sure that the articles can be tumble dried. Q Wring out each item in order to eliminate as much excess water as possible. ! Do not load dripping wet clothes into the dryer. Q Wash Care Labels Look at the labels on your garments, especially when tumble drying for the first time. The following symbols are the most common: May be tumble dried Do not tumble dry Tumble dry at high heat setting Tumble dry at low heat setting Maximum load size Do not load more than maximum capacity. These numbers refer to dry weight: Natural fibres: 8kg max (18lb) Synthetic fibres: 3kg max (6. 6lb) ! DO NOT overload the dryer as this could result in reduced drying performance.

Items not suitable for tumble drying q Typical weights q Note: 1kg = 1000g (1lb = 16oz) Clothes Blouse Cotton 150g Other 100g Dress Cotton 500g Other 350g Jeans 700g 10 nappies 1000g Shirt Cotton 300g Other 200g T-Shirt 125g Household Items Duvet cover Cotton (Double) Other Large Tablecloth Small Tablecloth Tea Towel Bath Towel Hand Towel Double Sheet Single Sheet q q (5oz) (3oz) (1lb 2oz) (12oz) (1lb 6oz) (2lb 3oz) (10oz) (7oz) (4oz) q Articles that containing rubber or rubber-like materials or plastic film (pillows, cushions, or PVC rainwear), any other flammable articles or objects that contain flammable substances (towels soiled with hair spray). Glass fibres (certain types of draperies) Items which have been dry cleaned Items with the ITCL Code (see Special clothing items). These can be cleaned with special at-home dry cleaning products. follow instructions carefully. Large bulky items (quilts, sleeping bags, pillows, cushions, large bedspreads etc).

These expand when drying and would prevent airflow through the dryer. 1500g 1000g 700g 250g 100g 700g 350g 500g 350g (3lb 5oz) (2lb 3oz) (1lb 6oz) (9oz) (3oz) (1lb 6oz) (12oz) (1lb 2oz) (12oz) At the end of a drying cycle, cottons could still be damp if you grouped cottons and synthetics together. If this happens simply give them an additional short period of drying. Q Note: The last 10 minutes of any time set is the Cool Tumble, so allow for this when setting the time, as this period will not dry your laundry. 30 Laundry Special clothing items Blankets and Bedspreads: acrylic items (Acilan, Courtelle, Orion, Dralon) must be dried with special care on LOW heat setting.

Avoid drying for a long period of time. Pleated or creased garments: read the manufacturer's drying instructions on the garment. Starched articles: do not dry these with non-starched items. Make sure that as much of the starch solution is removed from the load as possible before placing it in the dryer.

@ @ @ @ Others can be left longer if you need them to be completely dry.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[TCD G51 XB user guide](#)

<http://yourpdfguides.com/dref/4488855>

Q Check the drum after each cycle Turn the drum manually in order to remove small items (handkerchiefs) that could have been left behind. Water container Filter Tap Rear Front Condenser unit Condenser cover Catches Handle 33 Air intake Condenser unit Troubleshooting GB One day your dryer seems not to be working. Before you call your Service Centre (see Service), go through the following troubleshooting suggestions: Problem: The tumble dryer won't start. @@There has been a power failure. the fuse has blown. Try to plug another appliance into the socket. You are using an extension cord? Try to plug the dryer's power cord directly into the socket. The door is not closed securely? The programme has not been set properly (see Start and Programmes). @@You have set a delayed time (see Start and Programmes). The filter has not been cleaned (see Maintenance). The water container needs emptying? The condenser needs cleaning? (see Maintenance). @@@@The air intake grille or rear vents are obstructed (see Installation, and see Maintenance). The items were too wet (see Laundry). the dryer was overloaded (see Laundry). The water container was probably not emptied at the start of the programme. Do not wait for the empty water signal, always check and empty the container before starting a new drying programme (see Maintenance). This is normal, the: END OF CYCLE, EMPTY THE WATER BOTTLE message is shown as a reminder to empty the container (see The Display and Start and Programmes). drying cycle will not begin.

Its taking a long time to dry. Q q q q q q q Empty water message is displayed but the dryer has only been running for a short period. Empty water message is displayed and the water container is not full. Programme finishes and clothes are damper than expected. q q ! For safety the dryer has a maximum programme time of 4 hours. If an automatic programme has not sensed the required final moisture in this time the dryer will complete the programme and stop. Check the above points and run the programme again, if the results are still damp, contact the Service Centre (see Service). Q The display shows a fault code F followed by one or two numbers. Q If the display shows F10 or F15: - Turn off and remove the plug. Clean the filter and the condenser (see Maintenance).

Then replace the plug, turn on and start another programme. if F10 or F15 is still displayed contact the Service Centre (see Service). If any other number is shown: Note down the code and contact the Service Centre (see Service). the dryer is in 'Demo' mode. Press and hold both the On/Off and Start/Pause buttons for 3 seconds.

The display will show DEMO OFF for 3 seconds and then the dryer will resume normal operation. The display briefly shows DEMO ON every 6 seconds. q 34 Service Before calling the Service Centre: q Spare Parts This dryer is a complex machine. Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons, could damage the machine and could invalidate the spare parts warranty. Call an authorised technician if you experience problems while using the machine.

The spare parts have been designed exclusively for this appliance and not for other uses. GB q Use the troubleshooting guide to see if you can solve the problem yourself (see Troubleshooting). If not, turn off the dryer and call the Service Centre closest to you. What to tell the Service Centre: name, address and post code. Q the appliance model (Mod.). Q the serial number (S/N). This information can be found on the data label inside the door of the machine. Q Comparative Programmes q Programmes recommended for comparative test to EN61121 Programme (EN61121) Dry Cotton Iron Dry Cotton Easy-care textile Programme to select Load size Dryness Option COTTONS HIGH HEAT COTTONS HIGH HEAT SYNTHETICS 8 kg 8 kg 3 kg HANGER DRY IRON DRY CUPBOARD DRY ! note: This is not a full list of programme options (see Start and Programmes). This appliance conforms to the following EC Directives: - 2006/95/EC (Low Voltage Equipment) - 89/336/EEC, 92/31/EEC and 93/68/EEC (Electromagnetic Compatibility) 35 195079564.



[You're reading an excerpt. Click here to read official HOTPOINT TCD G51 XB user guide](http://yourpdfguides.com/dref/4488855)
<http://yourpdfguides.com/dref/4488855>