



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WDG 862 EU. You'll find the answers to all your questions on the HOTPOINT WDG 862 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WDG 862 EU
User guide HOTPOINT WDG 862 EU
Operating instructions HOTPOINT WDG 862 EU
Instructions for use HOTPOINT WDG 862 EU
Instruction manual HOTPOINT WDG 862 EU

Instructions for use

WASHER-DRYER

 This symbol reminds you to read this instruction manual.

GB

GB

English,1

HU

Magyar,13

CZ

Cesky,25

SK

Slovensky,37

RO

Română,49

UA

Українська,61

WDG 862

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washer-dryer, 4-5

Control panel
Display

How to run a wash cycle or a drying cycle, 6

Wash cycles and options, 7

Table of programmes and wash cycles
Wash options

Detergents and laundry, 8

Detergent dispenser drawer
Preparing the laundry
Special wash cycles

Precautions and advice, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the washer-dryer
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT WDG 862 EU user guide](http://yourpdfguides.com/dref/4643768)
<http://yourpdfguides.com/dref/4643768>

Manual abstract:

@@@If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washer-dryer. ! Read these instructions carefully: they contain vital information relating to the safe installation and operation of the appliance. Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washer-dryer from its packaging. 2. Make sure that the washer-dryer has not been damaged during the transportation process. @@ 3. @@ 1. @@@@ 2. Connect the inlet hose to the washer-dryer by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure).

4. Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the washer-dryer needs to be moved to another location. 3.

Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page). ! Packaging materials should not be used as toys for children. levelling ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. 1.

Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. Use the ones supplied with the machine. 2 Connecting the drain hose ! The cable should not be bent or compressed. Connect the drain hose, without bending it, to a drain duct or a wall drain situated between 65 and 100 cm from the floor; GB ! The power supply cable must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these standards are not observed. 65 - 100 cm The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using wash cycle number 2. Alternatively, placed it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.

! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. electrical connections Technical data Model WDG 862 width 59. 5 cm height 85 cm depth 60,5 cm from 1 to 8 kg for the wash programme from 1 to 6 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 62 litres up to 1200 rotations per minute Wash: programme 4; temperature 60°C; using a load of 8 kg. Drying: the smaller load must be dried by selecting the "A1" (IRON) dryness level. The load must consist of 2 sheets, 1 pillowcase and 1 hand towel; the remainder of the load must be dried by selecting the "A4" (EXTRA) dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC Dimensions Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washerdryer. If this is not the case, replace the socket or the plug. capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 ! The washer-dryer must not be installed outdoors, even in covered areas.

It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washer-dryer has been installed, the electricity socket must remain within easy reach. 3 Description of the washer-dryer GB Control panel TEMPERATURE button CHILD LOCK button CLEANING ACTION button ON/OFF button DISPLAY START/PAUSE Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN button button and indicator light DRYING button OPTION buttons and indicator lights Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry"). ON/OFF button: press this briefly to switch the machine on or off. The START/PAUSE indicator light which flashes slowly in a green colour shows that the machine is switched on.

To switch off the washer-dryer during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR KNOB: used to set the desired wash cycle (see "Table of programmes and wash cycles"). oPTION buttons and indicator lights: press to select the available options. The indicator light corresponding to the selected option will remain lit.

cLEANING ACTION button wash intensity. : to select the desired DRYING button: press to decrease or exclude drying; the selected drying level or time will appear on the display. START/PAUSE button and indicator light: when the green indicator light flashes slowly, press the button to start a wash cycle. Once the cycle has begun the indicator light will remain lit in a fixed manner. To pause the wash cycle, press the button again; the indicator light will flash in an amber colour. If the symbol is not illuminated, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again. CHILD LOCK button : to activate the control panel lock, press and hold the button for approximately 2 seconds. When the symbol is illuminated, the control panel is locked. @@@@The "spin" bars indicate the maximum spin level which may be selected for the set cycle.

The symbol lights up while the drying settings are being adjusted. dOOR LOCKED indicator light: The lit symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED symbol is switched off the door may be opened. 5 How to run a wash cycle or a drying cycle GB 1. sWITCH THE MACHINE ON. Press the button; the START/PAUSE indicator light will flash slowly in a green colour. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4643768)

[WDG 862 EU user guide](http://yourpdfguides.com/dref/4643768)

<http://yourpdfguides.com/dref/4643768>

Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Detergents and laundry". Use the WASH CYCLE SELECTOR knob to select the desired wash cycle.

A temperature and spin speed is set for each wash cycle; these values may be adjusted. The duration of the cycle will appear on the display. Use the relevant buttons: Modify the temperature and/or spin speed. The machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle. The temperature can be decreased by pressing the button, until the cold wash "OFF" setting is reached.

The spin speed may be progressively reduced by pressing the button, until it is completely excluded (the "OFF" setting). If these buttons are pressed again, the maximum values are restored. Selecting the cotton drying cycle through the programme selector knob and pressing the "Eco" button activates an automatic drying cycle that allows for saving energy, thanks to an optimal combination of air temperature and cycle duration; the display will visualise the "A2" dryness level. Set the desired wash intensity. Option makes it possible to optimise washing based on the level of soil in the fabrics and on desired wash cycle intensity.

Select the wash programme: the cycle will be automatically set to "Normal" as optimised for garments with an average level of soil (this setting is not applicable to the "Wool" cycle, which is automatically set to "Delicate"). For heavily-soiled garments press button until the "Intensive" level is reached. This level ensures a highperformance wash due to a larger quantity of water used in the initial phase of the cycle and due to increased drum rotation. It is useful when removing the most stubborn stains. It can be used with or without bleach. If you desire bleaching, insert the extra tray compartment (4) into compartment 1. When pouring in the bleach, be careful not to exceed the "max" level marked on the central pivot (see figure pag. 8). For lightly-soiled garments or a more delicate treatment of the fabrics, only and is calculated assuming standard working conditions. The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected.

! It can be activated with programmes 4 and 5. ! This option can be used in conjunction with all cycles. !

Do not use hand washing detergents; they create too much foam. If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow the grid. Empty all garment pockets and check the buttons. 2 kg How much does your laundry weigh? Use powder detergent for best results. Drying cycles can only be selected on a level basis. (M1127).

Use when barefoot or with wet or damp hands or feet. hold the plug and pull. • Never force the porthole door.

Never try to do this alone, because the appliance is very heavy. During the drying phase, the door tends to get quite hot.

Do not use the appliance to dry clothes that have been washed with flammable solvents (e. Do not use the appliance to dry foam rubber or similar elastomers. Make sure that the water tap is turned on during the drying cycles. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket.

2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Using a screwdriver, remove the cover panel on the lower front part of the washer-dryer (see figure). 4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. 5. Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washer-dryer and help to prevent leaks. Unplug the washer-dryer when cleaning it and during all maintenance work.

Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. do not use solvents or abrasives. To help the wash cycle you may want to use either the detergent (i. e. We recommend running a cleaning programme every 40 wash cycles. To start the programme press button A for 5 seconds (see figure). To stop the cycle press the START/ PAUSE button. ! Make sure the wash cycle has finished and unplug the appliance.

to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washer-dryer (see figure); 2. Unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; Cleaning the detergent dispenser drawer 1 Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently.

Screw the lid back on; 5. GB Problem: Possible causes / Solutions: The washer-dryer does not switch • The appliance is not plugged into the socket fully, or not enough to make contact. on. There is no power in the house. The wash cycle does not start.

The washer-dryer does not fill • The water inlet hose is not connected to the tap. The pressure is too low. • The START/PAUSE button has not been pressed.

The washer-dryer continuously • The drain hose is not fitted at a height between 65 and 100 cm from the floor takes in and drains water. (see "Installation").

The free end of the hose is under water (see "Installation"). The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Technical Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washer-dryer to fill with water and drain continuously. Special antidraining valves are available in shops and help to prevent this inconvenience.

The washer-dryer does not drain or spin. The wash cycle does not include draining: some cycles require the draining process to be enabled manually.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[WDG 862 EU user guide](#)

<http://yourpdfguides.com/dref/4643768>

□ The drum was not unlocked correctly during installation (see "Installation"). The washer-dryer vibrates a lot during the spin cycle. the washer-dryer leaks. The "option" and START/PAUSE • Switch off the machine and unplug it, wait for approximately 1 minute and then indicator lights flash rapidly and an switch it back on again. : If the problem persists, contact the Technical Assistance Service. There is too much foam. □ The detergent is not suitable for machine washing (it should display the text "for washing machine" or "hand and machine wash", or the like). • Too much detergent was used.

□ ••••The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. Service GB Before contacting the Technical Assistance Service: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the wash cycle to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre. ! Always request the assistance of authorised technicians.

Have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washer-dryer, and can also be found on the front of the appliance by opening the door. 5 1 6 4 2 8 8 The duration of the wash cycles can be checked on the display. □ Aparatul nu trebuie utilizat de către persoane (inclusiv copii) cu capacități fizice, senzoriale sau mentale reduse și cu experiență sau cunoștințe insuficiente, exceptând cazul în care această utilizare are loc sub supravegherea sau instrucțiunile unei persoane responsabile cu securitatea lor.

Curățarea pompei Mașina de spălat este dotată cu o pompă de autocurățare care nu are nevoie de întreținere. □ Deșeurile de echipamente electrice și electronice pot conține substanțe periculoase care pot avea un impact negativ asupra mediului și sănătății umane în cazul în care DEEE nu sunt colectate selectiv și gestionate conform prevederilor legale. .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[WDG 862 EU user guide](#)

<http://yourpdfguides.com/dref/4643768>