



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WDG 862BX EU. You'll find the answers to all your questions on the HOTPOINT WDG 862BX EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WDG 862BX EU
User guide HOTPOINT WDG 862BX EU
Operating instructions HOTPOINT WDG 862BX EU
Instructions for use HOTPOINT WDG 862BX EU
Instruction manual HOTPOINT WDG 862BX EU

Instructions for use

WASHER-DRYER

 This symbol reminds you to read this instruction manual.

GB

GB

English, 1

GR

ΕΛΛΗΝΙΚΑ, 13

WDG 862

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washer-dryer, 4-5

Control panel
Display

How to run a wash cycle or a drying cycle, 6

Wash cycles and options, 7

Table of programmes and wash cycles
Wash options

Detergents and laundry, 8

Detergent dispenser drawer
Preparing the laundry
Special wash cycles

Precautions and advice, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the washer-dryer
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT WDG 862BX EU user guide](http://yourpdfguides.com/dref/4643778)
<http://yourpdfguides.com/dref/4643778>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washer-dryer from its packaging. 2. Make sure that the washer-dryer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. @@@@Close off the holes using the plastic plugs provided. 5.

@@Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page). ! Packaging materials should not be used as toys for children. Levelling ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. 1.

Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2. ! Never use second-hand hoses. ! Use the ones supplied with the machine.

2 Connecting the drain hose ! The cable should not be bent or compressed. Connect the drain hose, without bending it, to a drain duct or a wall drain situated between 65 and 100 cm from the floor; GB ! The power supply cable must only be replaced by authorised technicians. Warning! The company shall not be held responsible in the event that these standards are not observed. 65 - 100 cm The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using wash cycle number 2. alternatively, placed it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Technical data Model WDG 862 width 59.5 cm height 85 cm depth 60,5 cm from 1 to 8 kg for the wash programme from 1 to 6 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.

5 bar) drum capacity 62 litres up to 1200 rotations per minute Wash: programme 4; temperature 60C; using a load of 8 kg. Drying: the smaller load must be dried by selecting the ?A1? (IRON) dryness level. The load must consist of 2 sheets, 1 pillowcase and 1 hand towel; the remainder of the load must be dried by selecting the ?A4? (EXTRA) dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC Dimensions Before plugging the appliance into the electricity socket, make sure that: ? the socket is earthed and complies with all applicable laws; ? the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); ? the power supply voltage falls within the values indicated in the Technical data table (see opposite); ? the socket is compatible with the plug of the washerdryer. If this is not the case, replace the socket or the plug. Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 ! The washer-dryer must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washer-dryer has been installed, the electricity socket must remain within easy reach. ! Do not use extension cords or multiple sockets. 3 Description of the washer-dryer GB Control panel TEMPERATURE button CHILD LOCK button CLEANING ACTION button ON/OFF button DISPLAY START/PAUSE Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN button button and indicator light DRYING button OPTION buttons and indicator lights Detergent dispenser drawer: used to dispense detergents and washing additives (see ?Detergents and laundry?).

ON/OFF button: press this briefly to switch the machine on or off. The START/PAUSE indicator light which flashes slowly in a green colour shows that the machine is switched on. To switch off the washer-dryer during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR KNOB: used to set the desired wash cycle (see ?Table of programmes and wash cycles?).

OPTION buttons and indicator lights: press to select the available options. The indicator light corresponding to the selected option will remain lit. CLEANING ACTION button wash intensity. : to select the desired DRYING button: press to decrease or exclude drying; the selected drying level or time will appear on the display. START/PAUSE button and indicator light: when the green indicator light flashes slowly, press the button to start a wash cycle. Once the cycle has begun the indicator light will remain lit in a fixed manner. To pause the wash cycle, press the button again; the indicator light will flash in an amber colour. If the symbol is not illuminated, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again. CHILD LOCK button : to activate the control panel lock, press and hold the button for approximately 2 seconds. When the symbol is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home. To deactivate the control panel lock, press and hold the button for approximately 2 seconds. Standby mode This washer-dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again.

TEMPERATURE button: press to reduce or completely exclude the temperature; the value appears on the display. SPIN button: press to reduce or completely exclude the spin cycle; the value appears on the display. 4 Display B GB A C The display is useful when programming the machine and provides a great deal of information. @@@@corresponding to the selected wash cycle and the ?wash cycle phase? @@and ?drying? (working from the left) are displayed in section C. The ?temperature? @@The ?spin? @@@@2. LOAD THE LAUNDRY. Open the porthole door. @@3. MEASURE OUT THE DETERGENT. @@4. CLOSE THE DOOR.



[You're reading an excerpt. Click here to read official HOTPOINT WDG 862BX EU user guide](http://yourpdfguides.com/dref/4643778)
<http://yourpdfguides.com/dref/4643778>

5. **SELECT THE WASH CYCLE.** Use the **WASH CYCLE SELECTOR** knob to select the desired wash cycle. A temperature and spin speed is set for each wash cycle; these values may be adjusted.

The duration of the cycle will appear on the display. 6. **CUSTOMISE THE WASH CYCLE.** Use the relevant buttons: Modify the temperature and/or spin speed. The machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle.

The temperature can be decreased by pressing the button, until the cold wash 'OFF' setting is reached. The spin speed may be progressively reduced by pressing the button, until it is completely excluded (the 'OFF' setting). If these buttons are pressed again, the maximum values are restored. time may also be set using the **DRYING** button. Selecting the cotton drying cycle through the programme selector knob and pressing the 'Eco' button activates an automatic drying cycle that allows for saving energy, thanks to an optimal combination of air temperature and cycle duration; the display will visualise the 'A2' dryness level. Set the desired wash intensity. Option makes it possible to optimise washing based on the level of soil in the fabrics and on desired wash cycle intensity. Select the wash programme: the cycle will be automatically set to 'Normal' as optimised for garments with an average level of soil (this setting is not applicable to the 'Wool' cycle, which is automatically set to 'Delicate'). For heavily-soiled garments press button until the 'Intensive' level is reached. This level ensures a high-performance wash due to a larger quantity of water used in the initial phase of the cycle and due to increased drum rotation.

It is useful when removing the most stubborn stains. It can be used with or without bleach. If you desire bleaching, insert the extra tray compartment (4) into compartment 1. When pouring in the bleach, be careful not to exceed the 'max' level marked on the central pivot (see figure pag. 8). For lightly-soiled garments or a more delicate treatment of the fabrics, press button until the 'Delicate' level is Cotton (2): lightly soiled resistant colours. Synthetics: heavily soiled resistant colours. Synthetics (3): heavily soiled resistant colours. Anti allergy Wool: for wool, cashmere, etc. Delicates The duration of the wash cycles can be checked on the display.

Fast Wash 30': to refresh lightly soiled garments 10 quickly (not suitable for wool, silk and clothes which require washing by hand). 11 Wash&Dry 12 Drying Cottons 13 Drying Synthetics 14 Drying Wool Rinse Spin and Pump out 8 8 The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions. The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected. For all Test Institutes: 1) Test wash cycle in compliance with regulation EN 50229: set wash cycle 4 with a temperature of 60C. 2) Long wash cycle for cottons: set wash cycle 5 with a temperature of 40C.

3) Long wash cycle for synthetics: set wash cycle 6 with a temperature of 40C. Wash options Eco The Eco option saves energy by not heating the water used to wash your laundry - an advantage both to the environment and to your energy bill. Instead, intensified wash action and water optimisation ensure great wash results in the same average time of a standard cycle. For the best washing results we recommend the usage of a liquid detergent ! @@@@! It can be should be used as specified by the fabric softener instructions. @@@@? This appliance was designed for domestic use only.

@@@ Hold the plug and pull. @@? Never force the porthole door. @@@@ Never try to do this alone, because the appliance is very heavy. @@? During the drying phase, the door tends to get quite hot. @@ trichlorethylene). ? Do not use the appliance to dry foam rubber or similar elastomers. ? Make sure that the water tap is turned on during the drying cycles. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. remove the plug from the electrical socket. 2.

make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 20 3. using a screwdriver, remove the cover panel on the lower front part of the washer-dryer (see figure). 4. pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 9 Care and maintenance GB Cutting off the water and electricity supplies ? Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washer-dryer and help to prevent leaks. ? Unplug the washer-dryer when cleaning it and during all maintenance work.

Caring for the door and drum of your appliance ? Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. Cleaning the washer-dryer ? The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.

? The washer-dryer has a 'Auto Clean' programme for its internal parts that must be run with no load in the drum. To help the wash cycle you may want to use either the detergent (i.e. a quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washer-dryer. We recommend running a cleaning programme every 40 wash cycles.

To start the programme press button A for 5 seconds (see figure). @@ To stop the cycle press the START/ PAUSE button. ! Make sure the wash cycle has finished and unplug the appliance. To access the pre-chamber: 1. @@@@ Wash it under running water; this operation should be repeated frequently. 2 3. clean the inside thoroughly; 4. screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the inlet hose at least once a year.

If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. ! Never use second-hand hoses. 10 Troubleshooting Your washer-dryer could occasionally fail to work. Before contacting the Technical Assistance Service (see ? @@on.



[You're reading an excerpt. Click here to read official HOTPOINT WDG 862BX EU user guide](http://yourpdfguides.com/dref/4643778)
<http://yourpdfguides.com/dref/4643778>

? There is no power in the house. The wash cycle does not start. ? The washer-dryer door is not closed properly. ? The ON/OFF button has not been pressed.
? The START/PAUSE button has not been pressed. ? The water tap has not been opened.
@@with water (the text ?H2O? flashes ? The hose is bent. on the display). ? The water tap has not been opened. ? There is no water supply in the house. ?
The pressure is too low.

? The START/PAUSE button has not been pressed. @@(see ?Installation?). ? The free end of the hose is under water (see ?Installation?). ? The wall
drainage system is not fitted with a breather pipe. @@If the dwelling is on one of the upper floors of a building, there may be problems relating to water
drainage, causing the washer-dryer to fill with water and drain continuously.

Special antidraining valves are available in shops and help to prevent this inconvenience. The washer-dryer does not drain or spin. ? The wash cycle does not
include draining: some cycles require the draining process to be enabled manually. ? The drain hose is bent (see ?Installation?). ? The drainage duct is
clogged. ? The drum was not unlocked correctly during installation (see ?Installation?). ? The washer-dryer is not level (see ?Installation?). ? The washer-
dryer is trapped between cabinets and walls (see ?Installation?). ? The water inlet hose is not screwed on properly (see ?Installation?). ? The detergent
dispenser drawer is blocked (for cleaning instructions, see ?Care and maintenance?).

? The drain hose is not fixed properly (see ?Installation?). The washer-dryer vibrates a lot during the spin cycle. The washer-dryer leaks. The ?option? and
START/PAUSE ? Switch off the machine and unplug it, wait for approximately 1 minute and then indicator lights flash rapidly and an switch it back on again.
error code appears on the display (e.g.: If the problem persists, contact the Technical Assistance Service. F-01, F-..).

There is too much foam. ? The detergent is not suitable for machine washing (it should display the text ?for washing machine? or ?hand and machine wash?,
or the like). ? Too much detergent was used. ? ? ? ? The appliance is not plugged into the socket, or not enough to make contact. There has been a power
failure.

The appliance door is not shut properly. A DELAY TIMER has been set. DRYING is in the OFF position. 11 The washer-dryer does not dry. Service GB
Before contacting the Technical Assistance Service: ? Check whether you can solve the problem alone (see ?Troubleshooting?); ? Restart the wash cycle to
check whether the problem has been solved; ? If this is not the case, contact an authorised Technical Assistance Centre.

! Always request the assistance of authorised technicians. Have the following information to hand: ? the type of problem; ? the appliance model (Mod.); ? the
serial number (S/N). This information can be found on the data plate applied to the rear of the washer-dryer, and can also be found on the front of the
appliance by opening the door. 12 ?????? ?????? ! ?????? ?????? ?????? ?????? ?????? ?????? GR ?????? GR
????????? ?????? ?????? 14-15 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? 16-17 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 18
????????? ?????? ?????? 19 WDG 862 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 20 ???
????????? ?????? ?????? 21 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 21
????????? ?????? ?????? 22 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 22
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 23
????????? 24 13 ?????? ?????? GR ! ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????

????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 1.
????????? ?????? 2. ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? 3. ?????? ?????? 4 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? (????? ??????). 1. ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
3/4 gas (????? ??????). ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
2. ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? (????? ??????). 4.
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 5.
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? 3. ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
1. ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? 14 ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
cm ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? 65 ??? 100 cm.

! ?? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
?? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????
????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ?????? ??????



[You're reading an excerpt. Click here to read official HOTPOINT WDG 862BX EU user guide](http://yourpdfguides.com/dref/4643778)

???) 4 5. 19 GR MAX 1: 3 (???) 2: 4. B. 4: 1 2. Woolmark Company Hotpoint-Ariston Woolmark Care - Platinum (M1127) 9 9 Delicate? 1 kg --> 150 min. 1 kg --> 180 min. 1 kg --> 180 min. 11 I 45 max 8 kg max 4 kg max 2 kg max 2 kg max 2 kg 1 400-500 gr. 1 150-200 gr. 1 400-500 gr. 1 900-1200 gr. 1 150-250 gr. A. 20 OFF. 19 GR MAX 1: 3 (???) 2: 4. B. 4: 1 2. Woolmark Company Hotpoint-Ariston Woolmark Care - Platinum (M1127) 9 9 Delicate? 1 kg --> 150 min. 1 kg --> 180 min. 1 kg --> 180 min. 11 I 45 max 8 kg max 4 kg max 2 kg max 2 kg max 2 kg 1 400-500 gr. 1 150-200 gr. 1 400-500 gr. 1 900-1200 gr. 1 150-250 gr. A. 20



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[WDG 862BX EU user guide](#)

<http://yourpdfguides.com/dref/4643778>

?? ? ??????? ??????? ????? ?????????? ??????? ??? ???????, ?????? ?? ?????????? ?????????? ?????????? ?????????? ??????????, ?????? ?? ?????????? ??????????
?? ?????????? ??? ?????????? ?? ?????????? ?? ?????????? ?????????? ?????????? ?????????? ?????????? ?????????? ?????????? ?????????? ?????????? ?????????? ??????????
????????? (????? ??????????????). ? O ?????? ?????????????? ?????? ??????????. ? ? ?????, ?? ?????? ?? ?????????????, ?? ?????????? ??????
(????? ?????????????). ? ?? ?????????? ?? ?????? ?????????????? (????? ??????????????), ? ?? ?????????? ?????? ?????? ?????? ?????? ?????? ??
???????? (????? ?????????????). ? ? ?????? ?????????????? ?? ?????? ?? ?????? ?????? ?????????? (????? ??????????????).
? ? ??? ?? ?????????????? ?????? ?????????? (?? ?? ?? ?????????? ?????? ?????????? ?? ?????????). ? ? ?????? ?????????????? ?? ?????
????????? (????? ?????????????). ?? ?????????? ?? ?????????? ? ?? ??????. ?? ?????????? ?????????? ?????? ?????? ?? ?????????? ?? ??????????
????? ????

?? ?????????? ??????? ?? ? ?????? ?? ?????? ?? ?????? ?? ?????? ?? ?????? ?????? ?????????? ??????? I ?????? ?????????????? ?? ?? ?START/
???? ?????????? ?? PAUSE? ?????????????? ??????? ?? ? ?????????? ?????????, ?????????? ?? ?????????????? ?? ? ?????? ?????????????? ????? ??????
?????????? (?.?: F-01, F-
.j. ?????????????? ?????? ??????. ? ?? ?????????????? ?? ?????? ?????? ?? ?????????? (?????? ?? ??????? ? ??????? ?????? ??????????, ????? ???????
?? ?????? ?? ?? ?????????????, ? ?????????). ? ? ?????????? ?????? ??????????. ? ?? ?????? ?? ?????? ?????????? ?????? ?????????? ??????, ? ?????????????
?? ??????? ?? ?? ?????? ??????. ? ?? ?????? ?? ?????????? ??????. ? ? ?????? ?? ?????? ?????? ?????????? ? ??????? ?? ?????????????? ????? ??????
?????????. ? ?? ?????????? ?????? ?? ????? OFF.

?? ?????????? ?? ?????????????? ?? ??????????. 23 ?????????? GR 195097941.01 01/2012 - Xerox Fabriano ??? ?????????????? ?? ?? ?????????????? : ?
????????? ?? ?? ?????????? ?????????? ?? ?? ?????????????????? ?????? ?? (????? ?????????????? ?? ?????????); ? ?????????????? ?? ?????????? ?? ??
????????? ?? ?? ?????????? ??????????????????; ? ?? ?????????? ??????????, ?????????????????? ?? ?? ?????? ?????????? ??????????????. I ?? ??????????????
???? ?? ?? ?????????????????????? ??????????. ?????????????????? : ? ?? ?????? ?? ??????????; ? ?? ??????? ?? ?????????????? (Mod.); ? ?? ?????? ???????
(S/N). ?? ?????????????? ?????? ?????????????? ?????? ?????????????? ?? ?????????? ?? ?????? ?????? ?? ?????????????? ?? ?? ?????????? ?????? ?????????????? ???
?????. 24.



[You're reading an excerpt. Click here to read official HOTPOINT WDG 862BX EU user guide](http://yourpdfguides.com/dref/4643778)
<http://yourpdfguides.com/dref/4643778>