



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WMD 863B EU. You'll find the answers to all your questions on the HOTPOINT WMD 863B EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WMD 863B EU
User guide HOTPOINT WMD 863B EU
Operating instructions HOTPOINT WMD 863B EU
Instructions for use HOTPOINT WMD 863B EU
Instruction manual HOTPOINT WMD 863B EU

Instructions for use

WASHING MACHINE

GB
English,1

FR
Français,13

DE
Deutsch,25

NL
Nederlands,37

WMD 863

Contents

GB

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine, 4-5

Control panel
Display

Running a wash cycle, 6

Wash cycles and functions, 7

Table of wash cycles
Wash functions

Detergents and laundry, 8

Detergent dispenser drawer
Preparing the laundry
Special wash cycles
Load balancing system

Precautions and tips, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT WMD 863B EU user guide](http://yourpdfguides.com/dref/4642698)
<http://yourpdfguides.com/dref/4642698>

Manual abstract:

! Read these instructions carefully: they contain vital information relating to the safe installation and operation of the appliance. Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a ¾ gas threaded connection (see figure).

Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided.

5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. ! Packaging materials should not be used as toys for children.

levelling ! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. Use the ones supplied with the machine. @@The cable should not be bent or compressed. ! @@ warning! @@@@The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle (60°C).

! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. technical data Model WMD 863 width 59. 5 cm height 85 cm depth 60,5 cm from 1 to 8 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 62 litres up to 1600 rotations per minute Electrical connections Dimensions Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated on the Technical Data Plate fixed on the machine; • the power supply voltage falls within the values indicated on the Technical Data Plate fixed on the machine; • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. Capacity Electrical connections Water connections Spin speed Test Programmes according to 2010/1061 programme ; temperature 60°C (2nd press of the button); temperature 40°C (3rd press of the button). ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC ! When the washing machine has been installed, the electricity socket must be within easy reach.

3 Description of the washing machine GB Control panel ON/OFF button CLEANING ACTION button SPIN SPEED button DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR buttons MY CYCLE button START/PAUSE FUNCTION buttons button with indicator light ANTI ALLERGY RINSE button DELAY TIMER button TEMPERATURE button button CHILD LOCK Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry"). ON/OFF button : press this briefly to switch the machine on or off. The START/PAUSE indicator light, which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

WASH CYCLE SELECTOR buttons: used to set the desired wash cycle (see "Table of wash cycles"). MY CYCLE button: press and hold the button to store a cycle with your own set of preferences in the memory of the machine. to recall a previously stored cycle , press the MY CYCLE button. FUNCTION buttons: press the button to select the desired function. The corresponding indicator light on the display will switch on.

: to select the desired TEMPERATURE button : press to decrease the temperature: the value will be shown on the display. CHILD LOCK button : to activate the control panel lock, press and hold the button for approximately 2 seconds. When the symbol is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home. To deactivate the control panel lock, press and hold the button for approximately 2 seconds. DELAY TIMER button : press to set a delayed start time for the selected wash cycle. The delay time will be shown on the display. @@@@If the symbol is not illuminated, the door may be opened. @@@@String E shows the maximum temperature value which may be selected (this depends on the wash cycle used); if the temperature of the wash cycle cannot be modified, the string remains unused. Indicator lights F correspond to the functions and light up when the selected function is compatible with the set wash cycle.

Door locked symbol If the symbol is lit, this indicates that the washing machine door is blocked to prevent it from being opened accidentally. To prevent any damage from occurring, wait for the symbol to switch itself off before opening the appliance door. : if the DELAYE TIMER function has been activated, the door cannot be opened; pauses the machine by pressing the START/PAUSE button if you wish to open it. ! The first time the machine is switched on, you will be asked to select the language and the display will automatically show the language selection menu. To select the desired language press the X and Y buttons; to confirm the selection press the Z button. To change the language switch off the machine and press buttons X, Y, Z simultaneously until an alarm is heard: the language-selection menu will be displayed again.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4642698)

[WMD 863B EU user guide](http://yourpdfguides.com/dref/4642698)

<http://yourpdfguides.com/dref/4642698>

Press the On/Off button ; the text POWER ON will appear on the display and the START/PAUSE indicator light will flash slowly in a green colour. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes on the following page. Open the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Detergents and laundry". Press one of the WASH CYCLE SELECTOR buttons to select the required wash cycle; the name of the wash cycle will appear on the display.

A temperature and spin speed is set for each wash cycle; these may be adjusted. The duration of the cycle will appear on the display. Use the relevant buttons:

Modifying the temperature and/or spin speed. The machine automatically selects the maximum temperature and spin speed set for the selected wash cycle; these values cannot therefore be increased. The temperature can be decreased by pressing the button, until the cold wash "OFF" setting is reached.

The spin speed may be progressively reduced by pressing the button, until it is completely excluded (the "OFF" setting). If these buttons are pressed again, the maximum values are restored. setting a delayed start. To set a delayed start for the selected programme, press the corresponding button repeatedly until the required delay period has been reached. When this option is enabled, the symbol lights up on the display.

To remove the delayed start function press the button until the text "OFF" appears on the display. Set the desired wash intensity. Option makes it possible to optimise washing based on the level of soil in the fabrics and on desired wash cycle intensity. Select the wash programme: the cycle will be automatically set to "Normal" as optimised for garments with an average level of soil (this setting is not applicable to the "Wool" cycle, which is automatically set to "Delicate"). For heavily-soiled garments press button until the "Super Wash" level is reached. @@It is useful when removing the most stubborn stains. It can be used with or without bleach. @@When pouring stored. @@@@Use this cycle for lightly soiled garments. @@@@ ! It cannot be used with the , (90°C) , , , .

! @@@@ ! @@@@When running the programme, do not mix garments of different colours. we recommend the use of powder detergent.

@@@@ we recommend the use of powder detergent. @@@@ load 2 kg) and guarantees optimal performance. @@@@Use liquid detergent on delicate garments for best results. ! @@@@Compartment 2: Detergent for the wash cycle (powder or liquid) If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used fo;wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. @@ 4. @@ 5. @@9 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks.

□ Unplug the washing machine when cleaning it and during all maintenance work. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. Cleaning the washing machine • The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water.

do not use solvents or abrasives. □ The washing machine has a "Auto Clean" programme for its internal parts that must be run with no load in the drum. For maximum performance you may want to use either the detergent (i. e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washing machine.

We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure). the programme will start automatically and will last approximately 70 minutes. To stop the cycle press the START/ PAUSE button. ! Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); A B 2. @@@@Screw the lid back on; 5. @@Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

Before contacting the Technical Assistance Centre (see "Assistance"), make sure that the problem cannot be not solved easily using the following list. gB Problem: The washing machine does not switch on. The wash cycle does not start. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or is not making contact. □ There is no power in the house. □ The water inlet hose is not connected to the tap. □ The pressure is too low. • The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation").

□ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. @@@@□ The drum was not unlocked correctly during installation (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

□ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). • Too much detergent was used. The washing machine does not take in water (the text "NO WATER, CHECK SUPPLY" appears on the display). The washing machine continuously takes in and drains water. The washing machine does not drain or spin.

The washing machine vibrates a lot during the spin cycle. the washing machine leaks. The machine is locked and the display flashes, indicating an error code (e. There is too much foam. 11 Service GB Before calling for Assistance: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4642698)

[WMD 863B EU user guide](http://yourpdfguides.com/dref/4642698)

<http://yourpdfguides.com/dref/4642698>

! Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. Vermeld: • het type storing; • het model van de machine (Mod.



[You're reading an excerpt. Click here to read official HOTPOINT
WMD 863B EU user guide
http://yourpdfguides.com/dref/4642698](http://yourpdfguides.com/dref/4642698)