

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WMG 1022B EU. You'll find the answers to all your questions on the HOTPOINT WMG 1022B EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WMG 1022B EU
User guide HOTPOINT WMG 1022B EU
Operating instructions HOTPOINT WMG 1022B EU
Instructions for use HOTPOINT WMG 1022B EU
Instruction manual HOTPOINT WMG 1022B EU



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide http://yourpdfguides.com/dref/4643670

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent.! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page).! Packaging materials should not be used as toys for children.

Levelling! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2.! Never use second-hand hoses.! Use the ones supplied with the machine. 2 Connecting the drain hose! @@@@Warning! @@The free end of the hose should not be underwater.! @@If this is not the case, replace the socket or the plug. Water connections Spin speed Test Programmes according to 2010/1061 programme 4; temperature 60C.

programme 5; temperature 40C.! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions.! When the washing machine has been installed, the electricity socket must remain within easy reach. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC! Do not use extension cords or multiple sockets. 3 Description of the washing machine GB Control panel TEMPERATURE button OPTION ON/OFF button buttons and indicator lights CLEANING ACTION button DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN button CHILD LOCK button START/PAUSE button and indicator light DELAY TIMER button Detergent dispenser drawer: used to dispense detergents and washing additives (see ?Detergents and laundry?). ON/OFF button: press this briefly to switch the machine on or off. The START/PAUSE indicator light which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

WASH CYCLE SELECTOR KNOB: used to set the desired wash cycle (see ?Table of programmes and wash cycles?). OPTION buttons and indicator lights: press to select the available options. The indicator light corresponding to the selected option will remain lit. CLEANING ACTION button wash intensity. : to select the desired DELAYED START button: press to set a delayed start for the selected wash cycle; the delay period appears on the display.

START/PAUSE button and indicator light: when the green indicator light flashes slowly, press the button to start a wash cycle. Once the cycle has begun the indicator light will remain lit in a fixed manner. To pause the wash cycle, press the button again; the indicator light will flash in an amber colour. If the symbol is not illuminated, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again.

@@When the symbol is illuminated, the control panel is locked. @@@@@@@@@@@@@@@@@corresponding to the selected wash cycle and the ?wash cycle phase? @@and ?delayed start? (working from the left) are displayed in section C. The ?temperature? @@The ?spin? @@The ?delay? symbol, when lit, indicates that the set ?delayed start? value has appeared on the display. DOOR LOCKED indicator light: The lit symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED symbol is switched off the door may be opened. 5 Running a wash cycle GB 1. SWITCH THE MACHINE ON. Press the button; the START/PAUSE indicator light will flash slowly in a green colour. 2.

LOAD THE LAUNDRY. Open the porthole door. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page. 3. MEASURE OUT THE DETERGENT. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in ?Detergents and laundry?. 4. CLOSE THE DOOR. 5. SELECT THE WASH CYCLE.

Use the WASH CYCLE SELECTOR knob to select the desired wash cycle. A temperature and spin speed is set for each wash cycle; these values may be adjusted. The duration of the cycle will appear on the display. 6. CUSTOMISE THE WASH CYCLE.

Use the relevant buttons: Modify the temperature and/or spin speed. The machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle. The temperature can be decreased by pressing the button, until the cold wash ?OFF? setting is reached. The spin speed may be progressively reduced by pressing the button, until it is completely excluded (the ?OFF? setting). If these buttons are pressed again, the maximum values are restored.

Setting a delayed start. To set a delayed start for the selected cycle, press the corresponding button repeatedly until the required delay period has been reached. When this option has been activated, the symbol lights up on the display. To remove the delayed start setting, press the button until the text ?OFF? appears on the display. Set the desired wash intensity. Option makes it possible to optimise washing based on the level of soil in the fabrics and on desired wash cycle intensity. Select the wash programme: the cycle will be automatically set to ?Normal? as optimised for garments with an average level of soil (this setting is not applicable to the ?Wool? cycle, which is automatically set to ?Delicate?).



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide

http://yourpdfguides.com/dref/4643670

For heavily-soiled garments press button until the ?Intensive? level is reached. This level ensures a high-performance wash due to a larger quantity of water used in the initial phase of the cycle and due to increased drum rotation. It is useful when removing the most stubborn stains.

It can be used with or without bleach. If you desire bleaching, insert the extra tray compartment (4) into 6 compartment 1. When pouring in the bleach, be careful not to exceed the ?max? level marked on the central pivot (see figure pag. 8). For lightly-soiled garments or a more delicate treatment of the fabrics, press button until the ?Delicate? level is reached. @@Modify the cycle settings. @@? Press the button again to disable the option; the indicator light will sdispenser drawer Successful washing results also depend on the correct dose of detergent: adding too much detergent will not necessarily result in a more efficient wash, and may in fact cause build up on the inside of your appliance and contribute to environmental pollution. ! @@@@If powder detergent is used, place the partition into slot B. @@@@Empty all garment pockets and check the buttons. @@10 kg Synthetic fabrics: max.

5 kg Delicate fabrics: max. 2 kg Wool: max. 2,5 kg Silk: max. @ @ We recommend the use of powder detergent. @ @ Whites: use this cycle 2 to wash white clothes.

@@Use powder detergent for best results. @@@@@@@@@@on the label. @@load 2,5 kg) and guarantees optimal performance. @@@@level from option . @@Use liquid detergent on delicate garments for best results.

@@@@@@@@@@@@@@@@@@@mormal unsorted municipal waste stream. @@The crossed out ?wheeled bin? symbol on the product reminds you of your obligation, that when you di the washing machine? @@Do not use solvents or abrasives.? The washing machine has a ?Auto Clean? @@To help the wash cycle you may want to use either the detergent (i.e. @@We recommend running a cleaning programme every 40 wash cycles. @@@@To stop the cycle press the START/PAUSE button.! Make sure the wash cycle has finished and unplug the appliance. To access the pre-chamber: 1. @@unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; Cleaning the detergent dispenser drawer 1 Remove the dispenser by raising it and pulling it out (see figure).

Wash it under running water; this operation should be repeated frequently. 2 3. clean the inside thoroughly; 4. screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.! Never use second-hand hoses. 10 Troubleshooting Your washing machine could occasionally fail to work. Before contacting the Technical Assistance Service (see? Service?), make sure that the problem cannot be not solved easily using the following list.

GB Problem: The washing machine does not switch on. Possible causes / Solutions: ? The appliance is not plugged into the socket fully, or not enough to make contact. @@? The ON/OFF button has not been pressed. ? The START/PAUSE button has not been pressed. ? The water tap has not been opened. @@with water (the text ?H2O? flashes ? The hose is bent. on the display). ? The water tap has not been opened. ? There is no water supply in the house. ? The pressure is too low.

? The START/PAUSE button has not been pressed. @@(see ?Installation?). ? The free end of the hose is under water (see ?Installation?). ? The wall drainage system is not fitted with a breather pipe. @@If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special antidraining valves are available in shops and help to prevent this inconvenience. The washing machine does not drain or spin. ? The wash cycle does not include draining: some cycles require the draining process to be enabled manually. ? The drain hose is bent (see ?Installation?). ? The drainage duct is clogged.

? The drum was not unlocked correctly during installation (see ?Installation?). ? The washing machine is not level (see ?Installation?). ? The washing machine is trapped between cabinets and walls (see ?Installation?). ? The water inlet hose is not screwed on properly (see ?Installation?). ? The detergent dispenser drawer is blocked (for cleaning instructions, see ?Care and maintenance?). @@The washing machine leaks. The ?option? @@@@F-01, F-..).

There is too much foam.

@@or ?hand and machine wash?, or the like). ? Too much detergent was used. 11 Service GB Before contacting the Technical Assistance Service: ? Check whether you can solve the problem alone (see ?Troubleshooting?). ? Restart the wash cycle to check whether the problem has been solved. ? If this is not the case, contact an authorised Technical Assistance Centre.

???????????? 1.



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide

http://yourpdfguides.com/dref/4643670

7???????????????? ?? ????????? ??????
????????????????. 3.
??????????????????????????????????????
??????????????????????????????????????
?? ?????????, ? ????????? ????????? ??? ??? ??? ?????
15 ???????? ??? ???????? GR ?????? ?????? ?????? ??????? ????? ON/OFF ?????? ???????? ??????? ??????? ??????
??? ???????? ?? ??????? ??? ??????????
?? ?? ??????? ??? ???????? ???????? ??
Voulre reading an excernt Click here to read official HOTPOINT



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide http://yourpdfguides.com/dref/4643670

```
??????? ?????.
?? ?????? ????????
?????? ?? ???????
60\ 40\ 60\ 40\ 60\ 40\ 40\ 30\ 60\ 1200\ 1200\ 1200\ 1200\ 1200\ 800\ 800\ 1200\ 1200\ 1200\ 800\ 800\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 1200\ 12
1????????????2?????3 k+: .4k(1): ..5k(2-3): .6k: ..6k(4): ..7????-????????8?????????9: .cachemire, ...
```



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide http://yourpdfguides.com/dref/4643670

```
?????????? 7, 10, 14, .
????????: max 2 kg ???????: max 2,5 kg ????????: max 2,5 kg ???? ???????? ????????; 1 ??????? 400-500 gr, 1 ????????? 150-200 gr, 1
  ?????????? ?? ?????? ????????.
 7777777 77 77777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 777 77
  ???????????? ????????.
222 22 22222222222
```



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide
http://yourpdfguides.com/dref/4643670

?? ??????? ??? ????????? ??????? ??????
??????????, ??? ?? ????? ????????? ???
??????????????????????????????????????
????????? ???????? ??? ??? ???????? ??? ????
??????????????????????????????????????
??????????????????????????????????????
77 777 77777 777 777777777 7777777777 77 7777
????????? ??? ????????? ??? ??????? ????
7777 7777777777 7 77777 777 777777777 7777
??? ???? ????? ???? ??? ???????? ?? ????
??????????????????????????????????????
??? ??? ?????????? ??? ???????? ???????
???????? ??? ??? ??????? ??????? 70 ?????? ?? ?? ????????
????????? ?? ?????? ??? ??? ??? ?????? ??? ????
??????????????????????????????????????
? ????????? ????? ?????????? ????? ?????
????????, ???? ?? ??????? ??? ?? ?????, ??? ??????
????????? ?? ??????? ?? ????????? ?? ??
22 ????????? ??? ?????? ?? ?????? ?? ?????
??? ????????? ??? ???????? ??? ??????? ?? ?? ????
??????????????????????????????/????:??????
? ??? ????? ??? ?????? ?????. ? ? ? ? ?
??? ????????. ? ????? ??? ????? ????????
?????? ??? ????????? ???? ??? ???????? ?
? ?????? ??? ??????????????????????????
??? ??????? ?????? ?????? ?? ??????? START/PAUSE ??? ????????? ?? ???????????????????
? ?? ???? ??? ?????? ????????? ???? ????
?????? ???? ???????? ?? ??????? ??? ????
????????? ????? ???????? ?????? ???? ????
???? ??????? ??? ??? ????????? ??? ?????
2777777777777777777777777777777777777
2 ?? ?????????? ??? ???????????????????
? ?? ???????? ????? ???? ????? ?????? ??? ????
????????? (????? ???????????). ? ? ???? ???
??????? ????????? ??? ???? ????? ???? (????? ??????
?? ??????? ?? ???????? ????? ???? ?? ??
?????? ???????????????????????????????
Voy'ma mading an avecumt Click have to mad official HOTDOINT



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide http://yourpdfguides.com/dref/4643670

?? ? ???????? ????????, ??????? ??? ???	
?.: F-01, F). ?????????????????????.	
? ?? ????????????? ??? ?????? ??? ???	??, :
????????). ? ? ????????? ?????? ????????	??: !
	?
- ???????? ?? ?? ???????? ????????????	??
???? ?? ?? ????????????????????????????	
????????????????? ??? ??????????; ? ?? ?	??
???? ????????? ??? ??????? ??? ???? ????	



You're reading an excerpt. Click here to read official HOTPOINT WMG 1022B EU user guide
http://yourpdfguides.com/dref/4643670