



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WMG 8237BS EU. You'll find the answers to all your questions on the HOTPOINT WMG 8237BS EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WMG 8237BS EU  
User guide HOTPOINT WMG 8237BS EU  
Operating instructions HOTPOINT WMG 8237BS EU  
Instructions for use HOTPOINT WMG 8237BS EU  
Instruction manual HOTPOINT WMG 8237BS EU

## Instructions for use

### WASHING MACHINE

**GB**

English,1

**GR**

ΕΛΛΗΝΙΚΑ,13

**BG**

Български,25

WMG 8237

#### Contents

**GB**

#### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

#### Description of the washing machine, 4-5

Control panel  
Display

#### Running a wash cycle, 6

**Wash cycles and options, 7**  
Table of programmes and wash cycles  
Wash options

#### Detergents and laundry, 8

Detergent dispenser drawer  
Preparing the laundry  
Special wash cycles

#### Precautions and advice, 9

General safety  
Disposal  
Opening the porthole door manually

#### Care and maintenance, 10

Cutting off the water and electricity supplies  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

#### Troubleshooting, 11

**Service, 12**

1



[You're reading an excerpt. Click here to read official HOTPOINT WMG 8237BS EU user guide](http://yourpdfguides.com/dref/4642733)  
<http://yourpdfguides.com/dref/4642733>

### Manual abstract:

*! Read these instructions carefully: they contain vital information relating to the safe installation and operation of the appliance. Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure).*

*Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided.*

*5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page).*

*! Packaging materials should not be used as toys for children. levelling ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. Use the ones supplied with the machine. 2 Connecting the drain hose ! The cable should not be bent or compressed.*

*@@@ warning! @@@@Alternatively, placed it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.*

*! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. 5 cm from 1 to 8 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 62 litres up to 1200 rotations per minute Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. Water connections Spin speed Test Programmes according to 2010/1061 programme 4; temperature 60°C; programme 5; temperature 40°C. ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must remain within easy reach. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic*

*Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC ! do not use extension cords or multiple sockets.*

*3 Description of the washing machine GB Control panel TEMPERATURE button OPTION ON/OFF button buttons and indicator lights CLEANING ACTION button DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN button CHILD LOCK button START/PAUSE button and indicator light DELAY TIMER button Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry"). ON/OFF button:*

*press this briefly to switch the machine on or off. The START/PAUSE indicator light which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.*

*WASH CYCLE SELECTOR KNOB: used to set the desired wash cycle (see "Table of programmes and wash cycles"). OPTION buttons and indicator lights: press to select the available options. The indicator light corresponding to the selected option will remain lit. CLEANING ACTION button wash intensity.*

*@@@@@@@If the symbol is not illuminated, the door may be opened.*

*@@@When the symbol is illuminated, the control panel is locked. @@@@@@@SPIN button: press to reduce or completely exclude the spin cycle; the value appears on the display. 4 Display B GB A C The display is useful when programming the machine and provides a great deal of information.*

*The duration of the available wash cycles and the remaining time of a running cycle appear in section A; if the DELAYED START option has been set, the countdown to the start of the selected wash cycle will appear. Pressing the corresponding button allows you to view the maximum spin speed and temperature values attained by the machine during the set wash cycle, or the values selected most recently, if these are compatible with the set wash cycle. The "wash cycle phases" corresponding to the selected wash cycle and the "wash cycle phase" of the running wash cycle appear in section B: Main wash Steam Refresh Rinse Spin and Pump out The icons corresponding to "temperature", "spin" and "delayed start" (working from the left) are displayed in section C. The*

*"temperature" bars indicate the maximum temperature level which may be selected for the set cycle. The "spin" bars indicate the maximum spin level which may be selected for the set cycle. The "delay" symbol, when lit, indicates that the set "delayed start" value has appeared on the display. DOOR LOCKED indicator light: The lit symbol indicates that the door is locked.*

*To prevent any damage, wait until the symbol turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED symbol is switched off the door may be opened. Press the button; the START/PAUSE indicator light will flash slowly in a green colour. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page.*



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[WMG 8237BS EU user guide](#)

<http://yourpdfguides.com/dref/4642733>

Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Detergents and laundry". Use the WASH CYCLE SELECTOR knob to select the desired wash cycle. A temperature and spin speed is set for each wash cycle; these values may be adjusted. The duration of the cycle will appear on the display. Use the relevant buttons: Modify the temperature and/or spin speed. The machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle. The temperature can be decreased by pressing the button, until the cold wash "OFF" setting is reached. The spin speed may be progressively reduced by pressing the button, until it is completely excluded (the "OFF" setting). If these buttons are pressed again, the maximum values are restored. setting a delayed start. To set a delayed start for the selected cycle, press the corresponding button repeatedly until the required delay period has been reached.

When this option has been activated, the symbol lights up on the display. @@Set the desired wash intensity. @@@@It is useful when removing the most stubborn stains. It can be used with or without bleach. @@@@ 8).

@@@@ modify the cycle settings. @@@@When running the programme, do not mix garments of different colours. we recommend the use of powder detergent. @@Whites: use this cycle 2 to wash white clothes. @@Use powder detergent for best results. @@@@ 5 kg , roughly 3 items). Insert dry items only (that are not dirty) and select programme 8. @@The 8 programme makes ironing easier. ! Not recommended for wool or silk garments. @@@@ (M1127).

@@@@@Use liquid detergent on delicate garments for best results. @@@@@@If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners , etc. ) The fabric softener should not overflow the grid. @@Empty all garment pockets and check the buttons. @@2 kg How much does your laundry weigh? @@@@The following information is provided for safety reasons and must therefore be read carefully. Must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB

General safcloth soaked in lukewarm soapy water.

do not use solvents or abrasives. □ The washing machine has a "Auto Clean" programme for its internal parts that must be run with no load in the drum. To help the wash cycle you may want to use either the detergent (i. e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washing machine.

We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure).

@@To stop the cycle press the START/ PAUSE button. ! Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1.

@@@@@Wash it under running water; this operation should be repeated frequently. Screw the lid back on; 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Before contacting the Technical Assistance Service (see "Service"), make sure that the problem cannot be not solved easily using the following list. gB Problem: The washing machine does not switch on. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or not enough to make contact. □ There is no power in the house. The wash cycle does not start.

The washing machine does not fill • The water inlet hose is not connected to the tap. □ The pressure is too low. • The START/PAUSE button has not been pressed. @@ (see "Installation"). @@□ The wall drainage system is not fitted with a breather pipe. @@@@Special antidraining valves are available in shops and help to prevent this inconvenience. The washing machine does not drain or spin. □ The wash cycle does not include draining: some cycles require the draining process to be enabled manually. □ The drum was not unlocked correctly during installation (see "Installation"). The washing machine vibrates a lot during the spin cycle.

the washing machine leaks. The "option" and START/PAUSE • Switch off the machine and unplug it, wait for approximately 1 minute and then indicator lights flash rapidly and an switch it back on again. : If the problem persists, contact the Technical Assistance Service. There is too much foam. □ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like).

• Too much detergent was used. 11 Service GB Before contacting the Technical Assistance Service: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the wash cycle to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre. ! Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N).

This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. .



[You're reading an excerpt. Click here to read official HOTPOINT WMG 8237BS EU user guide](http://yourpdfguides.com/dref/4642733)  
<http://yourpdfguides.com/dref/4642733>