



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WML 621. You'll find the answers to all your questions on the HOTPOINT WML 621 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WML 621  
User guide HOTPOINT WML 621  
Operating instructions HOTPOINT WML 621  
Instructions for use HOTPOINT WML 621  
Instruction manual HOTPOINT WML 621

## Instructions for use

### WASHING MACHINE

**GB** English,1  
**BG** Български,13  
**SR** Српски,25

WML 621

#### Contents

##### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

##### Description of the washing machine and starting a wash cycle, 4-5

Control panel  
Indicator lights  
Starting a wash cycle

##### Wash cycles, 6

Table of wash cycles

##### Personalisation, 7

Setting the temperature  
Setting the spin speed  
Functions

##### Detergents and laundry, 8

Detergent dispenser drawer  
Preparing the laundry  
Garments requiring special care  
Load balancing system

##### Precautions and tips, 9

General safety  
Disposal  
Opening the porthole door manually

##### Care and maintenance, 10

Cutting off the water or electricity supply  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

##### Troubleshooting, 11

##### Service, 12

GB



[You're reading an excerpt. Click here to read official HOTPOINT WML 621 user guide](http://yourpdfguides.com/dref/4642734)  
<http://yourpdfguides.com/dref/4642734>

**Manual abstract:**

*! Read these instructions carefully: they contain vital information relating to the safe installation and operation of the appliance. Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a ¾ gas threaded connection (see figure).*

*Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided.*

*5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. ! Packaging materials should not be used as toys for children.*

*levelling ! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. Use the ones supplied with the machine. @@The cable should not be bent or compressed. ! @@ warning! @@@@The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle 2.*

*! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. technical data Model WML 621 width 59. 5 cm height 85 cm depth 54 cm from 1 to 6 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 52 litres up to 1200 rotations per minute Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must be within easy reach. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 3 Description of the washing machine and starting a wash cycle GB Control panel WASH CYCLE PROGRESS/ DELAY TIMER indicator lights SPIN SPEED ON/OFF button knob TEMPERATURE DOOR LOCKED knob indicator light START/PAUSE Detergent dispenser drawer WASH CYCLE knob FUNCTION button with indicator light buttons with indicator lights Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").*

*During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions. The indicator light corresponding to the selected function will remain lit. TEMPERATURE knob: sets the temperature or the cold wash cycle (see "Personalisation"). SPIN SPEED knob: sets the spin speed or exclude the spin cycle completely (see "Personalisation").*

*@@The illuminated indicator light shows which phase is in progress. @@@@This is what they can tell you: Delayed start If the DELAY TIMER function has been activated (see "Personalisation"), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash: Wash cycle phase indicator lights Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress. Wash Rinse Spin Pump out End of wash cycle END GB As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate. If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and a sound alert (3 beeps); the function will not be activated. If a function which is incompatible with another function selected previously, only the most recent selection will remain active.*

*Door locked indicator light If this indicator light is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damage, wait for the indicator light to switch off before you open the appliance door. If the DELAY TIMER function is activated, the door cannot be opened; pause the machine by pressing the START/PAUSE button if you wish to open it. Once the set delay has elapsed, the flashing indicator light will switch off and the selected wash cycle will begin. ! If the START/PAUSE indicator light (orange) flashes rapidly at the same time as the function indicator light, this indicates a problem has occurred (see "Troubleshooting"). Starting a wash cycle 1. Turn the washing machine on by pressing the ON/OFF button. All the indicator lights will turn on for a few seconds, then only the indicator lights relative to the selected programme settings will remain lit and the START/PAUSE indicator light will flash. 2. Load the laundry and close the door. 3.*

*Set the WASH CYCLE knob to the desired programme. Set the spin speed (see "Personalisation"). Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle.*



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[WML 621 user guide](#)

<http://yourpdfguides.com/dref/4642734>

9. At the end of the wash cycle the indicator light will switch on. The DOOR LOCKED indicator light will switch off, indicating that the door may be opened. Take out your laundry and leave the appliance door ajar to make sure the drum dries completely. Switch the washing machine off by pressing the ON/OFF button. Cycle load duration (kg) Description of the wash cycle 1 2 3 4 5 6 6 7 8 9 Anti Stain Whites Cotton + Prewash: extremely soiled whites.

10 Delicates Mix 60': to refresh normal soiled garments quickly (not suitable for 11 wool, silk and clothes which require washing by hand). 12 Cottons 13 Synthetics 14 Fast Wash Rinse Spin and Pump out 4 4 6 6 6 2,5 2,5 4 4 1,5 1 3,5 6 3 3 6 6 180' 180' 175' 190' 185' 110' 95' 195' 150' 75' 80' 60' 85' 60' 30' 40' 20' The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions. The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected. For all Test Institutes: 1) Test wash cycle in compliance with regulation 2010/1061: set wash cycle 4 with a temperature of 60°C. @@@@ When running the programme, do not mix garments of different colours.

we recommend the use of powder detergent. @@Whites: use this cycle 2 to wash white clothes. @@Use powder detergent for best results. @@@@ load 1 ,5 kg) and guarantees optimal performance. @@@@Use liquid detergent on delicate garments for best results. @@@@If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners , etc. ) The fabric softener should not overflow the grid. @@@@ •Empty all garment pockets and check the buttons. @@1 kg How much does your laundry weigh? @@@@GB General safety •This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. □ This appliance was designed for domestic use only. □ Do not touch the machine when barefoot or with wet or damp hands or feet. □ Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull.

□ Do not open the detergent dispenser drawer while the machine is in operation. □ Do not touch the drained water as it may reach extremely high temperatures. •Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. □ If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. □ Always keep sily using the following list. gB Problem: The washing machine does not switch on. The wash cycle does not start. Possible causes / Solutions: •The appliance is not plugged into the socket fully, or is not making contact. □ There is no power in the house.

□ The water inlet hose is not connected to the tap. □ The pressure is too low. •The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation").

□ The wall drainage system is not fitted with a breather pipe. @@@@ □ The EASY IRON function has been activated: To complete the wash cycle, press the START/PAUSE button ("Personalisation"). □ The drum was not unlocked correctly during installation (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

□ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). •Too much detergent was used. The washing machine does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The washing machine continuously takes in and drains water. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks. The START/PAUSE indicator light (orange) and the function indicator lights flash rapidly. There is too much foam. 11 Service GB Before calling for Assistance: •Check whether you can solve the problem alone (see "Troubleshooting"); •Restart the programme to check whether the problem has been solved; •If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate.

! Always request the assistance of authorised technicians. Have the following information to hand: •the type of problem; •the appliance model (Mod. ); •the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[WML 621 user guide](#)

<http://yourpdfguides.com/dref/4642734>