



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT WMSD 521 EU. You'll find the answers to all your questions on the HOTPOINT WMSD 521 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT WMSD 521 EU
User guide HOTPOINT WMSD 521 EU
Operating instructions HOTPOINT WMSD 521 EU
Instructions for use HOTPOINT WMSD 521 EU
Instruction manual HOTPOINT WMSD 521 EU

Instructions for use

WASHING MACHINE

GB English,1	CZ Česky,13	HU Magyar,25
RO Română,37	BG Български,49	GR ΕΛΛΗΝΙΚΑ,61
TR Türkçe,73		

WMSD 521

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Care and maintenance, 4

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Precautions and tips, 5

General safety
Disposal
Opening the porthole door manually

Description of the washing machine, 6-7

Control panel
Display

Running a wash cycle, 8

Wash cycles and functions, 9

Table of wash cycles
Wash functions

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Special wash cycles
Load balancing system

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT WMSD 521 EU user guide](http://yourpdfguides.com/dref/5005850)
<http://yourpdfguides.com/dref/5005850>

Manual abstract:

Levelling the machine correctly will provide it with stability, help to avoid vibrations and excessive noise and prevent it from shifting while it is operating. If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine. unpacking and levelling

Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. 3. 4. Close off the holes using the plastic plugs provided. 5.

! Packaging materials should not be used as toys for children. levelling 1. 2. If the floor is not perfectly level, compensate for any unevenness 2 Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure).

Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent.

! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Use the ones supplied with the machine. Connecting the drain hose Connect the drain hose, without bending it, to a drain duct or a wall drain situated between 65 and 100 cm from the floor; ! The cable should not be bent or compressed. ! The power supply cable must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these standards are not observed. GB 65 - 100 cm The first wash cycle alternatively, placed it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using wash cycle number "Auto Clean".

technical data Model Dimensions Capacity WMSD 521 width 59.5 cm height 85 cm depth 42 cm from 1 to 5 kg Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. !

The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must remain within easy reach. Please refer to the technical Electrical data plate fixed to the maconnections chine maximum pressure 1 MPa (10 bar) Water conminimum pressure nections 0.05 MPa (0.5 bar) drum capacity 40 litres Spin speed up to 1200 rotations per minute Test wash (60°) programme cycles in (1st press of the button); accordanCotton Standard 60°. Ce with programme (40°) directives (2nd press of the button); 1061/2010 Cotton Standard 40°.

1015/2010 This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 3 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. □ Unplug the washing machine when cleaning it and during all maintenance work. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance.

Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. ! Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); Cleaning the washing machine • The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives.

□ The washing machine has a "Auto Clean" programme for its internal parts that must be run with no load in the drum. To help the wash cycle you may want to use either the detergent (i. e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washing machine. We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure). The programme will start automatically and will run for about 70 minutes. To stop the cycle press the START/PAUSE button. a B 2. Unscrew the lid by rotating it anticlockwise (see figure): a little water may trickle out.

This is perfectly normal; Cleaning the detergent dispenser drawer 1 Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. Screw the lid back on; 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the inlet hose at least once a year. @@@@ Remove the plug from the electrical socket. 2. @@@@ hold the plug and pull. @□ Do not touch the drained water as it may reach extremely high temperatures. • Never force the porthole door.

This could damage the safety lock mechanism designed to prevent accidental opening. □ If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. □ Always keep children well away from the appliance while it is operating. □ The door can become quite hot during the wash cycle. □ If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. □ Before loading laundry into the washing machine, make sure the drum is empty. 3. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure).



[You're reading an excerpt. Click here to read official HOTPOINT WMSD 521 EU user guide](http://yourpdfguides.com/dref/5005850)
<http://yourpdfguides.com/dref/5005850>

Disposal • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used.

□ The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. 4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 5 Description of the washing machine GB Control panel ON/OFF button CLEANING ACTION button SPIN SPEED button DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR buttons MY CYCLE button START/PAUSE FUNCTION buttons button with indicator light ANTI ALLERGY RINSE button DELAY TIMER button TEMPERATURE button button CHILD LOCK Detergent dispenser drawer: used to dispense detergents and washing additives (see “Detergents and laundry”). ON/OFF button : press this briefly to switch the machine on or off.

The START/PAUSE indicator light, which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR buttons: used to set the desired wash cycle (see “Table of wash cycles”). MY CYCLE button: press and hold the button to store a cycle with your own set of preferences in the memory of the machine. to recall a previously stored cycle , press the MY CYCLE button. @@@@The duration of the cycle will appear on the display. @@@@If these buttons are pressed again, the maximum values are restored. ! @@ setting a delayed start. @@When this option is enabled, the symbol lights up on the display. @@Set the desired wash intensity. @@@@It is useful when removing the most stubborn stains. It can be used with or without bleach. @@@@ 10). @@@@ set the rinse type.

@@@@@@@@@ modifying the cycle settings. @@@@ ! @@ ! @@ ! @@@@During the wash cycle, the name of the phase in progress will appear on Iron By selecting this function, the wash and spin cycles will be modified in order to reduce the formation of creases. @@@@ ! It cannot be used with the , “Fast Wash 30” , , . @@@@For the best washing results we recommend the usage of a liquid detergent. ! It cannot be used with the , , , . 9 Detergents and laundry GB Detergent dispenser drawer Good washing results also depend on the correct dose of detergent: adding too much detergent will not necessarily result in a more efficient wash, and may in fact cause a build up on the inside of your appliance and contribute to environmental pollution. ! Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C. ! Follow the instructions given on the detergent packaging. ! Do not use hand washing detergents because these create too much foam. B MAX Special wash cycles Anti Stain : this programme is suitable to heavily-soiled garments with resistant colours. It ensures a washing class that is higher than the standard class (A class). When running the programme, do not mix garments of different colours. we recommend the use of powder detergent. Pre-treatment with special additives is recommended if there are obstinate stains. cotton Standard 20° : ideal for heavily soiled cotton loads.

The effective performance levels achieved at cold temperatures, which are comparable to washing at 40°, are guaranteed by a mechanical action which operates at varying speed, with repeated and frequent peaks. Bed&Bath: use programme to wash bed linen and towels in one single cycle: it optimises softener performance and helps you save time and energy. we recommend the use of powder detergent. Wool: the wool wash cycle on this Hotpoint/Ariston machine has been tested and approved by The Woolmark Company for washing wool garments labelled as hand washable provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. Hotpoint/Ariston is the first washing machine brand to be approved by The Woolmark Company for Apparel Care- Platinum for its washing performance and consumption of energy and water. (M1128) A 4 Open the detergent dispenser drawer and pour in the detergent or washing additive, as follows. 1 3 2 compartment 1: Pre-wash detergent (powder) Before pouring in the detergent, make sure that extra compartment 4 has been removed. @@If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners , etc.) The fabric softener should not overflow the grid.

@@ • Empty all garment pockets and check the buttons. @@How much does your laundry weigh? @@Delicates: use programme to wash very delicate garments with decorative features, such as diamantes and sequins. To wash silk garments and curtains select the cycle and set the “Delicate” level from option . We recommend turning the garments inside out before washing and placing small items into the special bag for washing delicates. Use liquid detergent on delicate garments for best results.

Load balancing system Before every spin cycle, to avoid excessive vibrations and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. @@@@Before contacting the Technical Assistance Centre (see “Assistance”), make sure that the problem cannot be not solved easily using the following list. gB Problem: The washing machine does not switch on. The wash cycle does not start. Possible causes / Solutions: •The appliance is not plugged into the socket fully, or is not making contact.

□ There is no power in the house. □ The water inlet hose is not connected to the tap. □ The pressure is too low. •The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see “Installation”). □ The free end of the hose is under water (see “Installation”). □ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service.



[You're reading an excerpt. Click here to read official HOTPOINT WMSD 521 EU user guide](http://yourpdfguides.com/dref/5005850)
<http://yourpdfguides.com/dref/5005850>

If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience.

□ The wash cycle does not include draining: some wash cycles require the drain phase to be started manually (see “Wash cycles and functions”). □ The EASY IRON function has been activated: To complete the wash cycle, press the START/PAUSE button (see “Wash cycles and functions”). □ The drum was not unlocked correctly during installation (see “Installation”). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text “for washing machines” or “hand and machine wash”, or the like). • Too much detergent was used. The washing machine does not take in water (the text “NO WATER, CHECK SUPPLY” appears on the display). The washing machine continuously takes in and drains water. The washing machine does not drain or spin.

The washing machine vibrates a lot during the spin cycle. the washing machine leaks. The machine is locked and the display flashes, indicating an error code (e. There is too much foam. 11 Service GB Before calling for Assistance: • Check whether you can solve the problem alone (see “Troubleshooting”); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate.

! Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. Curățarea pompei Mașina de spălat este dotată cu o pompă de autocurățare care nu are nevoie de întreținere.

□ Aparatul nu trebuie utilizat de către persoane (inclusiv copii) cu capacități fizice, senzoriale sau mentale reduse și cu experiență sau cunoștințe insuficiente, exceptând cazul în care această utilizare are loc sub supravegherea sau instrucțiunile unei persoane responsabile cu securitatea lor. □ Deșeurile de echipamente electrice și electronice pot conține substanțe periculoase care pot avea un impact negativ asupra mediului și sănătății umane în cazul în care DEEE nu sunt colectate selectiv și gestionate conform prevederilor legale. .



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/5005850)

[WMSD 521 EU user guide](http://yourpdfguides.com/dref/5005850)

<http://yourpdfguides.com/dref/5005850>