



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HP DESKJET 1000 J110A. You'll find the answers to all your questions on the HP DESKJET 1000 J110A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HP DESKJET 1000 J110A
User guide HP DESKJET 1000 J110A
Operating instructions HP DESKJET 1000 J110A
Instructions for use HP DESKJET 1000 J110A
Instruction manual HP DESKJET 1000 J110A

HP Deskjet 1000 J110 series



[You're reading an excerpt. Click here to read official HP DESKJET 1000 J110A user guide](http://yourpdfguides.com/dref/4173780)
<http://yourpdfguides.com/dref/4173780>

Manual abstract:

@@@When the product is processing a job, the On button light will be blinking. If the On button light is blinking very quickly, the printer is in an error state that you can resolve by following the onscreen messages. If you do not see any onscreen messages, try printing a document to generate an onscreen message. If you cleared a paper jam or the printer was out of paper, you will need to press the On button to resume printing. Get to know the HP Printer 6 Get to know the HP Printer 3 Print Choose a print job to continue. Print documents Print photos Print envelopes Print documents To print from a software application 1. Make sure the output tray is open. 2. Make sure you have paper loaded in the input tray. 3.

From your software application, click the Print button. 4. Make sure the product is the selected printer. 5. Click the button that opens the Properties dialog box.

@@6. Select the appropriate options. · On Layout tab select Portrait or Landscape orientation. @@@Click OK to close the Properties dialog box. 8. Click Print or OK to begin printing. @@Click on the Advanced button on the Paper/Quality or Layout tab. From the Pages to Print drop-down menu select Print Odd Pages Only. Click OK to print. After the odd numbered pages of the document have been printed, remove the document from the output tray. Reload the paper in the input tray with the blank side facing up. Return to the Pages to Print drop-down menu and then select Print Even Pages Only. Click OK to print. Print photos To print a photo on photo paper 1. Make sure the output tray is open.

2. Remove all paper from the input tray, and then load the photo paper with side to be printed on facing up. NOTE: If the photo paper you are using has perforated tabs, load photo paper so that tabs are on top. 3. On the File menu in your software application, click Print. 4. Make sure the product is the selected printer. 5. Click the button that opens the Properties dialog box. @@6.

Click the Paper/Quality tab. Print 8 Print 7. Select the appropriate options. · On Layout tab select Portrait or Landscape orientation. @@ · Click Advanced to select the appropriate paper size from the Paper/Output list.

NOTE: For maximum dpi resolution, go to the Paper/Quality tab and select Photo Paper, Best Quality from the Media drop-down list. Make sure you are printing in color. Then go to the Advanced tab and select Yes from the Print in Max DPI drop-down list. For more information, see Print using the maximum dpi. 8.

Click OK to return to the Properties dialog box. 9. Click OK, and then click Print or OK in the Print dialog box. NOTE: Do not leave unused photo paper in the input tray. The paper might start to curl, which could reduce the quality of your printout. Photo paper should be flat before printing. Print envelopes You can load one or more envelopes into the input tray of the HP Printer. Do not use shiny or embossed envelopes or envelopes that have clasps or windows.

NOTE: For specific details on how to format text for printing on envelopes, consult the help files in your word processing software. For best results, consider using a label for the return address on envelopes.

To print envelopes 1. Make sure the output tray is open. 2. Slide the paper guide all the way to the left. 3. Place the envelopes in the right side of the tray. The side to be printed on should face up. The flap should be on the left side. 4. Push the envelopes into the printer until they stop.

5. Slide the paper guide firmly against the edge of the envelopes. Print envelopes 9 Print Chapter 3 6. Click the button that opens the Properties dialog box. @@7.

Select the appropriate options. · On Paper/Quality tab select a Plain paper type. · Click the Advanced button, and select the appropriate envelope size from the Paper Size drop down menu. 8. Click OK, and then click Print or OK in the Print dialog box.

Tips for print success To successfully print, the HP cartridges should be functioning properly with sufficient ink, the paper should be loaded correctly, and the product should have the appropriate settings. Cartridge tips · Use genuine HP ink cartridges. · Install both the black and tri-color cartridges correctly. For more information, see Replace the cartridges. · Check the estimated ink levels in the cartridges to make sure there is sufficient ink. For more information, see Check the estimated ink levels. · For more information, see Improve print quality. Paper loading tips · Load a stack of paper (not just one page). All of the paper in the stack should be the same size and type to avoid a paper jam. · Load paper with side to be printed on facing up.

· Ensure that paper loaded in the input tray lays flat and the edges are not bent or torn. · Adjust the paper-width guide in the input tray to fit snugly against all paper. Make sure the paper-width guide does not bend the paper in the input tray. · For more information, see Load media. Printer settings tips · On the Paper/Quality tab of the print driver, select the appropriate paper type and quality from the Media drop down menu. · Click the Advanced button, and select the appropriate Paper Size from the Paper/ Output drop-down menu. · Click the HP Printer desktop icon to open the Printer Software. In the Printer Software, click Printer Actions and then click Set Preferences to access the print driver. NOTE: You can also access the Printer Software by clicking Start > Programs > HP > HP Deskjet 1000 J110 series > HP Deskjet 1000 J110 series Print 10 Print Notes · Genuine HP ink cartridges are designed and tested with HP printers and papers to help you easily produce great results, time after time. NOTE: HP cannot guarantee the quality or reliability of non-HP supplies.

Product service or repairs required as a result of using a non-HP supply will not be covered under warranty. If you believe you purchased genuine HP ink cartridges, go to: www.hp.com/go/anticounterfeit · Ink level warnings and indicators provide estimates for planning purposes only. NOTE: When you receive a low-ink warning message, consider having a replacement cartridge available to avoid possible printing delays.

You do not need to replace the cartridges until print quality becomes unacceptable. For more information, see Check the estimated ink levels. · You can print your document on both sides of the paper, instead of just one side. NOTE: Click the Advanced button on the Paper/Quality or Layout tab. From the Pages to Print drop-down menu select Print Odd Pages Only.

Click OK to print. After the odd numbered pages of the document have been printed, remove the document from the output tray. Reload the paper in the input tray with the blank side facing up. Return to the Pages to Print drop-down menu and then select Print Even Pages Only. Click OK to print. · Print using black ink only NOTE: If you want to print a black and white document using black ink only, click the Advanced button.



[You're reading an excerpt. Click here to read official HP DESKJET](http://yourpdfguides.com/dref/4173780)

[1000 J110A user guide](http://yourpdfguides.com/dref/4173780)

<http://yourpdfguides.com/dref/4173780>

From the Print in Grayscale drop-down menu select Black Ink Only, then click the OK button. If you see Black and White as an option on the Paper/Quality tab or the Layout tab, select it. Click here to go online for more information. Print using the maximum dpi Use maximum dots per inch (dpi) mode to print high-quality, sharp images on photo paper.

See technical specifications for the print resolution of the maximum dpi mode. Printing in maximum dpi takes longer than printing with other settings and requires a large amount of disk space. To print in Maximum dpi mode 1. Make sure you have photo paper loaded in the input tray. 2. On the File menu in your software application, click Print. 3. Make sure the product is the selected printer. Print Print using the maximum dpi 11 Chapter 3 4. Click the button that opens the Properties dialog box.

@@5. Click the Paper/Qual HP Premium Inkjet Transparency Film HP Premium Inkjet Transparency Film make your color presentations vivid and even more impressive. This film is easy to use and handle and dries quickly without smudging. HP Photo Value Pack HP Photo Value Packs conveniently package original HP cartridges and HP Advanced Photo Paper to save you time and take the guesswork out of printing affordable professional photos with your HP Printer. Original HP inks and HP Advanced Photo Paper have been designed to work together so your photos are long lasting and vivid, print after print. Great for printing out an entire vacation's worth of photos or multiple prints to share. NOTE: At this time, some portions of the HP Web site are available in English only. To order HP papers and other supplies, go to www.hp.com/buy/supplies.

If prompted, choose your country/region, follow the prompts to select your product, and then click one of the shopping links on the page. Paper basics 14 Paper basics Load media Select a paper size to continue. Load full-size paper a. Raise the input tray Raise the input tray. Paper basics b. Lower the output tray Lower the output tray and pull out the tray extender. Load media 15 Chapter 4 c. Slide paper-width guide to the left Slide paper-width guide to the left. Paper basics d. Load paper.

Insert stack of paper into input tray with short edge forward and print side up. Slide stack of paper down until it stops. Slide paper-width guide to the right until it stops at edge of paper. 16 Paper basics Load small-size paper a. Raise the input tray Raise the input tray. b. Lower the output tray Lower the output tray and pull out the tray extender. Load media 17 Paper basics Chapter 4 c. Slide paper-width guide to the left. Slide paper-width guide to the left. Paper basics d. Load paper. Insert stack of photo paper with short edge down and side to be printed on facing up. Slide stack of paper forward until it stops. NOTE: If the photo paper you are using has perforated tabs, load photo paper so that tabs are on top.

Slide paper-width guide to the right until it stops at edge of paper. 18 Paper basics Load envelopes a. Raise the input tray Raise the input tray. b. Lower the output tray Lower the output tray and pull out the tray extender. c. Slide paper-width guide to the left. Slide paper-width guide to the left. Load media 19 Paper basics Chapter 4 Remove all paper from the main input tray. d. Load envelopes. Insert one or more envelopes into far-right side of the input tray. The side to be printed on should face up. The flap should be on the left side and facing down. Slide stack of envelopes down until it stops.

Slide paper-width guide to the right against stack of envelopes until it stops. Paper basics 20 Paper basics 5 Work with cartridges Check the estimated ink levels Order ink supplies Replace the cartridges Use single-cartridge mode Cartridge warranty information Check the estimated ink levels You can easily check the ink supply level to determine how soon you might need to replace a cartridge. The ink supply level shows an estimate of the amount of ink remaining in the cartridges. To check the ink levels from the Printer Software 1. Click the HP Printer desktop icon to open the Printer Software. NOTE: You can also access the Printer Software by clicking Start > Programs > HP > HP Deskjet 1000 J110 series > HP Deskjet 1000 J110 series 2. In the Printer Software, click Estimated Ink Levels. NOTE: If you have installed a refilled or remanufactured cartridge, or a cartridge that has been used in another printer, the ink level indicator might be inaccurate or unavailable. NOTE: Ink level warnings and indicators provide estimates for planning purposes only. When you reinsert used in its designated HP printing device.

This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with. During the warranty period the product is covered as long as the HP ink is not depleted and the end of warranty date has not been reached. The end of warranty date, in YYYY/ MM/DD format, may be found on the product as indicated: For a copy of the HP Limited Warranty Statement, see the printed documentation that came with the product. Cartridge warranty information Chapter 5 Work with cartridges 26 Work with cartridges 6 Solve a problem This section contains the following topics: Improve print quality Clear a paper jam Unable to print HP support Click here to go online for more information. Improve print quality 1. Make sure you are using genuine HP cartridges. 2. Check the print properties to make sure you have selected the appropriate paper type and print quality from the Media drop-down list. In the Printer Software, click Printer Actions and then click Set Preferences to access the print properties. 3. Check the estimated ink levels to determine if the cartridges are low on ink. For more information, see Check the estimated ink levels. If the print cartridges are low on ink consider replacing them. 4. Align the printer cartridges To align the cartridges from the Printer Software NOTE: Aligning the cartridges ensures high-quality output. The HP Printer prompts you to align the cartridges when you print a document after installing a new cartridge. a. Load letter or A4 unused plain white paper into the input tray. b. In the Printer Software, click Printer Actions and then click Maintenance Tasks to access the Printer Toolbox.

c. The Printer Toolbox appears. d. Click Align Ink Cartridges tab. The product prints an alignment sheet. 5. Print a diagnostics page if the cartridges are not low on ink. To print a diagnostics page a. Load letter or A4 unused plain white paper into the input tray. b. In the Printer Software, click Printer Actions and then click Maintenance Tasks to access the Printer Toolbox. c. Click Print Diagnostic Information to print a diagnostics page. Review the blue, magenta, yellow, and black boxes on the diagnostics page.



[You're reading an excerpt. Click here to read official HP DESKJET 1000 J110A user guide](http://yourpdfguides.com/dref/4173780)
<http://yourpdfguides.com/dref/4173780>

If you are seeing Improve print quality 27 Solve a problem Chapter 6 streaks in the color and black boxes, or no ink in portions of the boxes, then automatically clean the cartridges 6.

Clean the print cartridges automatically, if the diagnostic page shows streaks or missing portions of the color and black boxes. To clean the cartridges automatically a. Load letter or A4 unused plain white paper into the input tray. b. In the Printer Software, click Printer Actions and then click Maintenance Tasks to access the Printer Toolbox.

c. Click Clean Ink Cartridges. Follow the onscreen instructions. If the above solutions do not resolve the problem, click here for more online troubleshooting. Solve a problem 28 Solve a problem Clear a paper jam Clear a paper jam. To clear a paper jam Locate the paper jam Input tray If the paper jam is located near the back input tray, pull the paper gently out of the input tray. Output tray · If the paper jam is located near the front output tray, pull the paper gently out of the output tray. · You may need to open the carriage door and slide the print carriage to the right to access the paper jam. Clear a paper jam 29 Solve a problem Chapter 6 Inside of printer · If the paper jam is located inside the printer, open the cleanout door located on the bottom of the printer. Press tabs on both sides of the cleanout door.

· Remove jammed paper. · Close the cleanout door. Gently push the door towards the printer until both latches snap into place. Press the Power button to resume printing If the above solutions do not resolve the problem, click here for more online troubleshooting. Prevent paper jams · Do not overfill the input tray. · Remove printed papers from the output tray frequently. · Ensure that paper loaded in the input tray lays flat and the edges are not bent or torn. · Do not combine different paper types and paper sizes in the input tray; the entire stack of paper in the input tray must be the same size and type. · Adjust the paper-width guide in the input tray to fit snugly against all paper. Make sure the paper-width guide does not bend the paper in the input tray.

· Do not force paper too far forward in the input tray. If the above solutions do not resolve the problem, click here for more online troubleshooting. Solve a problem 30 Solve a problem Unable to print Make sure that the printer is turned on and that there is paper in the tray. If you are still unable to print, try the following in order: 1. Check for error messages and resolve.

2. Disconnect and reconnect the USB cable. 3. Verify that the product is not paused or offline. @@Click here to go online for more information.

Otherwise, follow the steps below. a. @@@@Double-click the icon for your product to open the print queue. @@Double-click the icon for your product to open the print queue. b. @@c. If you made any changes, try to print again. 4. @@Click here to go online for more information. Otherwise, follow the steps below.

a. @@@@b. Make sure the correct product is set as the default printer. Unable to print Chapter 6 c. @@d. Try using your product again. 5. Restart the print spooler. @@Click here to go online for more information. Otherwise, follow the steps below.

a. @@ · Double-click Services. · Right-click the Print Spooler, and then click Properties. @@@@ · Double-click Services. @@@@ · Click Manage, and then click Services and Applications.

· Double-click Services, and then select Print Spooler. @@b. Make sure the correct product is set as the default printer. @@c. @@d.

Try using your product again. 6. Restart the computer. Solve a problem 32 Solve a problem 7. @@Click here to go online for more information. Otherwise, follow the steps below. a. @@@@Double-click the icon for your product to open the print queue. @@Double-click the icon for your product to open the print queue. b.

@@c. @@d. @@@@8. Reset the printer To reset the printer a. Turn off the product. b. Unplug the power cord. c. Wait a minute, then plug the power cord back in. d.

Turn on the product. @@NOTE: Do not use any tools or other devices to remove jammed paper. @@@@Remove black cartridge and then close cartridge door. 2. Try printing a document.

3. @@If the On light does not blink, replace the black cartridge. 4. Close cartridge door. 5.

Try printing a document. 6. @@@@Check the documentation that came with the product. 2. Visit the HP online support Web site at www.hp.com/support. HP online support is available to all HP customers. @@Call HP support. @@@@To determine the duration of phone support in Europe, the Middle East, and Africa, go to www.

hp.com/support. Standard phone company charges apply. Chapter 6 Placing a call Call HP support while you are in front of the computer and the product. Be prepared to provide the following information: · · Product name (HP Deskjet 1000 J110 series) Model number (located inside the cartridge door) Product No. xxxxx Model No. xxxxx HP Ink Cartridge xx · · Serial number (located on the back or bottom of the product) Messages that appear when the situation occurs Answers to these questions: Has this situation happened before? Can you re-create it? Did you add any new hardware or software to your computer at about the time that this situation began? Did anything else occur prior to this situation (such as a thunderstorm, product was moved, etc.)? Support phone numbers For the most current HP list of telephone support numbers and call costs information, see www.hp.com/support.

Solve a problem 36 After the phone support period After the phone support period, help is available from HP at an additional cost. Help may also be available at the HP online support Web site: www.hp.com/support. Contact your HP dealer or call the support phone number for your country/region to learn more about support options.

Additional warranty options Extended service plans are available for the HP Printer at additional costs. Go to www.hp.com/support, select your country/region and language, then explore the services and warranty area for information about the extended service plans. Solve a problem 7 Technical information The technical specifications and international regulatory information for the HP Printer are provided in this section.

For additional specifications, see the printed documentation that came with the HP Printer. This section contains the following topics: · · · Notice Specifications Environmental product stewardship program Regulatory notices Notice Hewlett-Packard Company notices The information contained in this document is subject to change without notice. All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services.



[You're reading an excerpt. Click here to read official HP DESKJET 1000 J110A user guide](http://yourpdfguides.com/dref/4173780)
<http://yourpdfguides.com/dref/4173780>

Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein. © 2009 Hewlett-Packard Development Company, L.P. Microsoft, Windows, Windows XP, and Windows Vista are U.

S. registered trademarks of Microsoft Corporation. Windows 7 is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. Intel and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries. Specifications Technical specifications for the HP Printer are provided in this section. For complete product specifications, see the Product Data Sheet at www.hp.com/support. System requirements Software and system requirements are located in the Readme file. For information about future operating system releases and support, visit the HP online support Web site at www.

hp.com/support. Environmental specifications · Recommended operating temperature range: 15 °C to 32 °C (59 °F to 90 °F) · · · · Allowable operating temperature range: 5 °C to 40 °C (41 °F to 104 °F) Humidity: 15% to 80% RH non-condensing; 28 °C maximum dewpoint Non-operating (Storage) temperature range: 40 °C to 60 °C (40 °F to 140 °F) In the presence of high electromagnetic fields, it is possible the output from the HP Printer may be slightly distorted HP recommends using a USB cable less than or equal to 3 m (10 feet) in length to minimize injected noise due to potential high electromagnetic fields Technical information Specifications 37 Input tray capacity Plain paper sheets (80 g/m² [20lb]): Up to 50 Envelopes: Up to 5 Index cards: Up to 20 Photo paper sheets: Up to 20 Chapter 7 Output tray capacity Plain paper sheets (80 g/m² [20lb]): Up to 30 Envelopes: Up to 5 Index cards: Up to 10 Photo paper sheets: Up to 10 Paper size For a complete list of supported media sizes, see the printer software. Paper weights Plain Paper: 64 to 90 g/m² (16 to 24 lb) Envelopes: 75 to 90 g/m² (20 to 24 lb) Cards: Up to 200 g/m² (110-lb index maximum) Photo Paper: Up to 280 g/m² (75 lb) Print specifications · Print speeds vary according to the complexity of the document · · Method: drop-on-demand thermal inkjet Language: PCL3 GUI Print resolution Draft mode · Color Input/Black Render: 300x300dpi · Output (Black/Color): Automatic Normal mode · Color Input/Black Render: 600x300dpi · Output (Black/Color): Automatic Plain-Best mode · Color Input/Black Render: 600x600dpi · Output: 600x1200dpi (Black), Automatic (Color) Photo-Best mode · Color Input/Black Render: 600x600dpi · Output (Black/Color): Automatic Max DPI mode · Color Input/Black Render: 1200x1200dpi · Output: Automatic (Black), 4800x1200 optimized dpi (Color) Power specifications 0957-2286 · Input voltage: 100-240Vac (+/- 10%) · Technical information 38 Input frequency: 50/60 Hz (+/- 3Hz) 0957-2290 · Input voltage: 200-240Vac (+/- 10%) · Input frequency: 50/60 Hz (+/- 3Hz) NOTE: Use only with the power adapter supplied by HP. Technical information Cartridge yield Visit www.

hp.com/go/learnaboutsups for more information on estimated cartridge yields. @@@@Design for recycling has been incorporated into this product. @@Dissimilar materials have been designed to separate easily. @@@@Material safety data sheets Material safety data sheets (MSDS) can be obtained from the HP Web site at: www.

hp.com/go/msds Environmental product stewardship program 39 Technical information Chapter 7 Recycling program HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world.

HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit: www.hp.com/hpinfo/globalcitizenship/environment/recycle/ HP inkjet supplies recycling program HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge. For more information, go to the following Web site: www.hp.com/hpinfo/globalcitizenship/environment/recycle/ Power consumption Hewlett-Packard printing and imaging equipment marked with the ENERGY STAR® logo is qualified to the U.

S. Environmental Protection Agency's ENERGY STAR specifications for imaging equipment. The following mark will appear on ENERGY STAR qualified imaging products: Additional ENERGY STAR qualified imaging product model information is listed at: www.hp.com/go/energystar Technical information 40 Technical information Disposal of waste equipment by users in private households in the European Union Disposal of Waste Equipment by Users in Private

Households in the European Union This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Évacuation des équipements usagés par les utilisateurs dans les foyers privés au sein de l'Union européenne La présence de ce symbole sur le produit ou sur son emballage indique que vous ne pouvez pas vous débarrasser de ce produit de la même façon que vos déchets courants. Au contraire, vous êtes responsable de l'évacuation de vos équipements usagés et, à cet effet, vous êtes tenu de les remettre à un point de collecte agréé pour le recyclage des équipements électriques et électroniques usagés.

Le tri, l'évacuation et le recyclage séparés de vos équipements usagés permettent de préserver les ressources naturelles et de s'assurer que ces équipements sont recyclés dans le respect de la santé humaine et de l'environnement. Pour plus d'informations sur les lieux de collecte des équipements usagés, veuillez contacter votre mairie, votre service de traitement des déchets ménagers ou le magasin où vous avez acheté le produit.



[You're reading an excerpt. Click here to read official HP DESKJET](http://yourpdfguides.com/dref/4173780)

[1000 J110A user guide](http://yourpdfguides.com/dref/4173780)

<http://yourpdfguides.com/dref/4173780>

Entsorgung von Elektrogeräten durch Benutzer in privaten Haushalten in der EU Dieses Symbol auf dem Produkt oder dessen Verpackung gibt an, dass das Produkt nicht zusammen mit dem Restmüll entsorgt werden darf. Es obliegt daher Ihrer Verantwortung, das Gerät an einer entsprechenden Stelle für die Entsorgung oder Wiederverwertung von Elektrogeräten aller Art abzugeben (z.B.

ein Wertstoffhof). Die separate Sammlung und das Recyceln Ihrer alten Elektrogeräte zum Zeitpunkt ihrer Entsorgung trägt zum Schutz der Umwelt bei und gewährleistet, dass sie auf eine Art und Weise recycelt werden, die keine Gefährdung für die Gesundheit des Menschen und der Umwelt darstellt. Weitere Informationen darüber, wo Sie alte Elektrogeräte zum Recyceln abgeben können, erhalten Sie bei den örtlichen Behörden, Wertstoffhöfen oder dort, wo Sie das Gerät erworben haben. Smaltimento di apparecchiature da rottamare da parte di privati nell'Unione Europea Questo simbolo che appare sul prodotto o sulla confezione indica che il prodotto non deve essere smaltito assieme agli altri rifiuti domestici. Gli utenti devono provvedere allo smaltimento delle apparecchiature da rottamare portandole al luogo di raccolta indicato per il riciclaggio delle apparecchiature elettriche ed elettroniche.

La raccolta e il riciclaggio separati delle apparecchiature da rottamare in fase di smaltimento favoriscono la conservazione delle risorse naturali e garantiscono che tali apparecchiature vengano rottamate nel rispetto dell'ambiente e della tutela della salute. Per ulteriori informazioni sui punti di raccolta delle apparecchiature da rottamare, contattare il proprio comune di residenza, il servizio di smaltimento dei rifiuti locale o il negozio presso il quale è stato acquistato il prodotto. Eliminación de residuos de aparatos eléctricos y electrónicos por parte de usuarios domésticos en la Unión Europea Este símbolo en el producto o en el embalaje indica que no se puede desechar el producto junto con los residuos domésticos. Por el contrario, si debe eliminar este tipo de residuo, es responsabilidad del usuario entregarlo en un punto de recogida designado de reciclado de aparatos electrónicos y eléctricos. El reciclaje y la recogida por separado de estos residuos en el momento de la eliminación ayudará a preservar recursos naturales y a garantizar que el reciclaje proteja la salud y el medio ambiente. Si desea información adicional sobre los lugares donde puede dejar estos residuos para su reciclado, póngase en contacto con las autoridades locales de su ciudad, con el servicio de gestión de residuos domésticos o con la tienda donde adquirió el producto. Likvidace vysloužilého zařízení uživatelů v domácnosti v zemích EU Tato značka na produktu nebo na jeho obalu označuje, že tento produkt nesmí být likvidován prostým vyhozením do běžného domovního odpadu. Odpovídáte za to, že vysloužilé zařízení bude pedáno k likvidaci do stanovených sběrných míst určených k recyklaci vysloužilých elektrických a elektronických zařízení. Likvidace vysloužilého zařízení samostatným sběrem a recyklací napomáhá zachování přírodních zdrojů a zajišťuje, že recyklace proběhne způsobem chránícím lidské zdraví a životní prostředí. Další informace o tom, kam můžete vysloužilé zařízení předat k recyklaci, můžete získat od úřad místní samosprávy, od společnosti provádějící svoz a likvidaci domovního odpadu nebo v obchod, kde jste produkt zakoupili.

Bortskaffelse af affaldsudytyr for brugere i private husholdninger i EU Dette symbol på produktet eller på dets emballage indikerer, at produktet ikke må bortskaffes sammen med andet husholdningsaffald. I stedet er det dit ansvar at bortskaffe affaldsudytyr ved at aflevere det på dertil beregnede indsamlingssteder med henblik på genbrug af elektrisk og elektronisk affaldsudytyr. Den separate indsamling og genbrug af dit affaldsudytyr på tidspunktet for bortskaffelse er med til at bevare naturlige ressourcer og sikre, at genbrug finder sted på en måde, der beskytter menneskers helbred samt miljøet. Hvis du vil vide mere om, hvor du kan aflevere dit affaldsudytyr til genbrug, kan du kontakte kommunen, det lokale renovationsvæsen eller den forretning, hvor du købte produktet. Afvoer van afgedankte apparatuur door gebruikers in particuliere huishoudens in de Europese Unie Dit symbool op het product of de verpakking geeft aan dat dit product niet mag worden afgevoerd met het huishoudelijk afval. Het is uw verantwoordelijkheid uw afgedankte apparatuur af te leveren op een aangewezen inzamelpunt voor de verwerking van afgedankte elektrische en elektronische apparatuur. De gescheiden inzameling en verwerking van uw afgedankte apparatuur draagt bij tot het sparen van natuurlijke bronnen en tot het hergebruik van materiaal op een wijze die de volksgezondheid en het milieu beschermt. Voor meer informatie over waar u uw afgedankte apparatuur kunt inleveren voor recycling kunt u contact opnemen met het gemeentehuis in uw woonplaats, de reinigingsdienst of de winkel waar u het product hebt aangeschaft. Eramajapidamistes kasutuselt kõrvaldatavate seadmete käitlemine Euroopa Liidus Kui tootel või toote pakendil on see sümbol, ei tohi seda toodet visata olmejäätmete hulka. Teie kohus on viia tarbetuks muutunud seade selleks ettenähtud elektri- ja elektroonikaseadmete utiliseerimiskohta.

Utiliseeritavate seadmete eraldi kogumine ja käitlemine aitab säästa loodusvarasid ning tagada, et käitlemine toimub inimeste tervisele ja keskkonnale ohutult. Lisateavet selle kohta, kuhu saate utiliseeritava seadme käitlemiseks viia, saate küsida kohalikust omavalitsusest, olmejäätmete utiliseerimispunktist või kauplusest, kust te seadme ostsite. Hävitettävien laitteiden käsittely kotitalouksissa Euroopan unionin alueella Tämä tuotteessa tai sen pakkauksessa oleva merkintä osoittaa, että tuotetta ei saa hävittää talousjätteiden mukana. Käyttäjän velvollisuus on huolehtia siitä, että hävitettävä laite toimitetaan sähkö- ja elektroniikkalaiteromun keräyspisteeseen. Hävitettävien laitteiden erillinen keräys ja kierrätys säästää luonnonvaroja. Näin toimimalla varmistetaan myös, että kierrätys tapahtuu tavalla, joka suojelee ihmisten terveyttä ja ympäristöä.



[You're reading an excerpt. Click here to read official HP DESKJET 1000 J110A user guide](http://yourpdfguides.com/dref/4173780)
<http://yourpdfguides.com/dref/4173780>

Saat tarvittaessa lisätietoja jätteiden kierrätyspaikoista paikallisilta viranomaisilta, jäteyhtiöiltä tai tuotteen jälleenmyyjältä. . . .

. . A hulladékanyagok kezelése a magánháztartásokban az Európai Unióban Ez a szimbólum, amely a terméken vagy annak csomagolásán van feltüntetve, azt jelzi, hogy a termék nem kezelhető együtt az egyéb háztartási hulladékkal. Az Ön feladata, hogy a készülék hulladékanyagait eljuttassa olyan kijelölt gyűjtőhelyre, amely az elektromos hulladékanyagok és az elektronikus berendezések újrahasznosításával foglalkozik. A hulladékanyagok elkülönített gyűjtése és újrahasznosítása hozzájárul a természeti erőforrások megrzéséhez, egyúttal azt is biztosítja, hogy a hulladék újrahasznosítása az egészségre és a környezetre nem ártalmas módon történik. Ha tájékoztatást szeretne kapni azokról a helyekről, ahol leadhatja újrahasznosításra a hulladékanyagokat, forduljon a helyi önkormányzathoz, a háztartási hulladék begyűjtésével foglalkozó vállalatához vagy a termék forgalmazójához. Lietotju atbrvosans no nedergrm iercm Eiropas Savienbas privtajs mjsaimniecbs Sis simbols uz ierces vai ts iepakojuma norda, ka so ierci nedrkst izmest kop ar prijem mjsaimniecbas atkritumiem. Js esat atbildgs par atbrvosanos no nedergrs ierces, to nododot nordtaj savksanas viet, lai tiktu veikta nedergr elektrisk un elektronisk aprkojuma otrreizj prstrde. Specila nedergrs ierces savksana un otrreizj prstrde paldz taupit dabas resursus un nodrosina tdu otrreizjo prstrdi, kas sarg cilvku veselbu un apkrtjo vidi. Lai iegtu papildu informciju par to, kur otrreizjai prstrdei var nogdt nedergr ierci, ldzu, sazinieties ar vietjo pasvaldibu, mjsaimniecbas atkritumu savksanas dienestu vai veikalu, kur iegdjties so ierci. Europos Sjungos vartotoj ir privaci nam ki atliekamos rangos ismetimas Sis simbolis ant produkto arba jo pakuots nurodo, kad produktas negali bti ismestas kartu su kitomis nam kio atliekomis.

Js privalote ismesti savo atliekam rang atiduodami j atliekamos elektronikos ir elektros rangos perdirbimo punktus. Jei atliekama ranga bus atskirai surenkama ir perdirbama, bus issaugomi natrals istekliai ir uztikrinama, kad ranga yra perdirbta zmogaus sveikat ir gamt tausojanciu bdu. Dl informacijos apie tai, kur galite ismesti atliekam perdirbti skirt rang kreipkitis atitinkam vietos tarnyb, nam kio atliek isvezimo tarnyb arba parduotuv, kurioje pirkote produkt. Utylizacija zuytego sprztu przez uytowników domowych w Unii Europejskiej Symbol ten umieszczony na produkcie lub opakowaniu oznacza, e tego produktu nie naley wyrzuca razem z innymi odpadami domowymi. Uytownik jest odpowiedzialny za dostarczenie zuytego sprztu do wyznaczonego punktu gromadzenia zuytych urzdze elektrycznych i elektronicznych. Gromadzenie osobno i recykling tego typu odpadów przyczynia si do ochrony zasobów naturalnych i jest bezpieczny dla zdrowia i rodowiska naturalnego. Dalsze informacje na temat sposobu utylizacji zuytych urzdze mona uzyska u odpowiednich wladz lokalnych, w przedsibiorstwie zajmujcym si usuwaniem odpadów lub w miejscu zakupu produktu. Descarte de equipamentos por usuários em residências da União Européia Este símbolo no produto ou na embalagem indica que o produto não pode ser descartado junto com o lixo doméstico. No entanto, é sua responsabilidade levar os equipamentos a serem descartados a um ponto de coleta designado para a reciclagem de equipamentos eletro-eletrônicos. A coleta separada e a reciclagem dos equipamentos no momento do descarte ajudam na conservação dos recursos naturais e garantem que os equipamentos serão reciclados de forma a proteger a saúde das pessoas e o meio ambiente.

Para obter mais informações sobre onde descartar equipamentos para reciclagem, entre em contato com o escritório local de sua cidade, o serviço de limpeza pública de seu bairro ou a loja em que adquiriu o produto. Postup používateov v krajinách Európskej únie pri vyhadzovaní zariadenia v domácom používaní do odpadu Tento symbol na produkte alebo na jeho obale znamená, že nesmie by vyhodeny s iným komunálnym odpadom. Namiesto toho máte povinnos odovzda toto zariadenie na zbernom mieste, kde sa zabezpečuje recyklácia elektrických a elektronických zariadení. Separovaný zber a recyklácia zariadenia urceného na odpad pomôže chráni prírodné zdroje a zabezpečí taký spôsob recyklácie, ktorý bude chráni udské zdravie a životné prostredie. @@@@ @@@@ Vec informacij o mestih, kjer lahko oddate odpadno opremo za recikliranje, lahko dobite na občini, v komunalnem podjetju ali trgovini, kjer ste izdelek kupili.

Kassering av förbrukningsmaterial, för hem- och privat användare i EU Produkter eller produktförpackningar med den här symbolen får inte kasseras med vanligt hushållsavfall. I stället har du ansvar för att produkten lämnas till en behörig återvinningsstation för hantering av el- och elektronikprodukter. Genom att lämna kasserade produkter till återvinning hjälper du till att bevara våra gemensamma naturresurser. @@@@ , . .

. . . @@@@ Colectarea i reciclarea separat a echipamentului uzat atunci când dorii s îl aruncaí ajut la conservarea resurselor naturale i asigur reciclarea echipamentului într-o manier care protejeaz sntatea uman i mediul. Pentru informaíi suplimentare despre locul în care se poate preda echipamentul uzat pentru reciclare, luaí legtura cu primria local, cu serviciul de salubritate sau cu vânztorul de la care ai achiziíionat produsul. Svenska Slovenscina Slovenscina Português Polski Lietuviskai Latviski Magyar Suomi Eesti Nederlands Dansk Cesky Español Italiano Deutsch Français English Chemical Substances HP is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No Environmental product stewardship program 41 Technical information Român Chapter 7 1907/2006 of the European Parliament and the Council).



[You're reading an excerpt. Click here to read official HP DESKJET 1000 J110A user guide](http://yourpdfguides.com/dref/4173780)
<http://yourpdfguides.com/dref/4173780>

A chemical information report for this product can be found at: www.hp.com/go/reach. Toxic and hazardous substance table Regulatory notices The HP Printer meets product requirements from regulatory agencies in your country/region. This section contains the following topics: Regulatory model identification number FCC statement Notice to users in Korea VCCI (Class B) compliance statement for users in Japan Notice to users in Japan about the power cord HP Deskjet 1000 J110 series declaration of conformity Regulatory model identification number For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is VCVRA-1003.

This regulatory number should not be confused with the marketing name (HP Deskjet 1000 J110 series, etc.) or product numbers (CH340-64001, etc.). Technical information 42 Technical information FCC statement FCC statement The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. For further information, contact: Manager of Corporate Product Regulations Hewlett-Packard Company 3000 Hanover Street Palo Alto, Ca 94304 (650) 857-1501 Modifications (part 15.21) The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by HP may void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Notice to users in Korea B B VCCI (Class B) compliance statement for users in Japan Technical information 43 B VCCI-B Regulatory notices Chapter 7 Notice to users in Japan about the power cord HP Deskjet 1000 J110 series declaration of conformity DECLARATION OF CONFORMITY according to ISO/IEC 17050-1 and EN 17050-1 Supplier's Name: Supplier's Address: declares, that the product Product Name and Model: Regulatory Model Number: 1) Product Options: Power Adapter: DoC #: VCVRA-1003 -01 Hewlett-Packard Company SE 34th Street, Vancouver, WA 98683-8906, USA HP Deskjet 1000 Printer J110 VCVRA-1003 All 0957-2286 0957-2290 (China and India only) conforms to the following Product Specifications and Regulations: EMC: Class B CISPR 22:2005 + A1:2005 + A2:2006/ EN 55022:2006 + A1:2007 CISPR 24:1997 +A1:2001 +A2:2002 / EN 55024:1998 +A1:2001 +A2:2003 IEC 61000-3-2: 2005 / EN 61000-3-2:2006 IEC 61000-3-3: 1994 + A1:2001 / EN 61000-3-3:1995 +A1:2001 + A2:2005 FCC CFR 47 Part 15 / ICES-003, issue 4 Safety: IEC 60950-1:2005 / EN 60950-1:2006 IEC 60825-1:1993 +A1:1997 +A2:2001 / EN 60825-1:1994 +A1:2002 +A2:2001 IEC 62311: 2007 / EN 62311:2008 Energy Use: Regulation (EC) No. 1275/2008 ENERGY STAR® Qualified Imaging Equipment Operational Mode (OM) Test Procedure This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The product herewith complies with the requirements of the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, the EuP Directive 2005/32/EC and the European Council Recommendation 1999/519/EC on the limitation of Electromagnetic fields to the general public, and carries the marking accordingly. Additional Information: 1) This product is assigned a Regulatory Model Number which stays with the regulatory aspects of the design. The Regulatory Model Number is the main product identifier in the regulatory documentation and test reports, this number should not be confused with the marketing name or the product numbers. November 11, 2009 Vancouver, WA Technical information 44 Local contact for regulatory topics only: EMEA: Hewlett-Packard GmbH, HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, Germany U.S.: Hewlett-Packard, 3000 Hanover St., Palo Alto 94304, U.S.A. 650-857-1501 [www](http://www.hp.com).

hp.com/go/certificates Technical information Index A after the support period 36 C Index 45 customer support warranty 36 E environment Environmental product stewardship program 39 environmental specifications 37 P paper recommended types 13 phone support 35 phone support period period for support 35 print specifications 38 R recycle ink cartridges 40 regulatory notices regulatory model identification number 42 S support process 35 system requirements 37 T technical information environmental specifications 37 print specifications 38 system requirements 37 W warranty 36 Index 46 .



[You're reading an excerpt. Click here to read official HP DESKJET 1000 J110A user guide](http://yourpdfguides.com/dref/4173780)
<http://yourpdfguides.com/dref/4173780>