



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HP PHOTOSMART WIRELESS B110A. You'll find the answers to all your questions on the HP PHOTOSMART WIRELESS B110A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HP PHOTOSMART WIRELESS B110A**  
**User guide HP PHOTOSMART WIRELESS B110A**  
**Operating instructions HP PHOTOSMART WIRELESS B110A**  
**Instructions for use HP PHOTOSMART WIRELESS B110A**  
**Instruction manual HP PHOTOSMART WIRELESS B110A**

HP Photosmart Wireless B110 series



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

### Manual abstract:

*OK: Selects a menu setting, value, or photo. Copy: Opens the Copy menu where you can select a copy type or change the copy settings. Photo: Opens the Photo Menu. Scan: Opens the Scan menu where you can select a destination for your scan. Apps: TouchSmart Web provides a quick and easy way to access and print information from the Web, such as coupons, coloring pages, and puzzles. TouchSmart Web Manager The TouchSmart Web Manager can be used to add new Apps or to remove Apps. Get to know the HP Photosmart Manage Apps 1. Add new Apps. a. Press the directional keys to scroll to the Web menu option.*

*Press OK. b. Press the directional keys to scroll to the More menu option. Press OK. Check desired Apps.*

*Press OK. Follow prompts. 2. View the animation for this topic. TouchSmart Web Manager 7 Get to know the HP Photosmart Chapter 2 Get to know the HP Photosmart 8 Get to know the HP Photosmart 3 How do I? This section contains links to commonly performed tasks, such as printing photos, scanning, and making copies.*

*TouchSmart Web Manager Replace the cartridges Load media Scan to a computer Copy text or mixed documents Clear the paper jam from the rear access door How do I? 9 How do I? Chapter 3 How do I? 10 How do I? 4 Print Print documents Print photos Print Print envelopes Related topics Load media Tips for print success Print documents Most print settings are automatically handled by the software application. You need to change the settings manually only when you change print quality, print on specific types of paper or transparency film, or use special features. To print from a software application 1. Make sure you have paper loaded in the paper tray. 2. On the File menu in your software application, click Print. 3. Make sure the product is the selected printer. 4. If you need to change settings, click the button that opens the Properties dialog box.*

*Depending on your software application, this button might be called Properties, Options, Printer Setup, Printer, or Preferences. NOTE: When printing a photo, you must select options for the specific photo paper and photo enhancement. 5. Select the appropriate options for your print job by using the features available in the Advanced, Printing Shortcuts, Features, and Color tabs. TIP: You can easily select the appropriate options for your print job by choosing one of the predefined print tasks on the Printing Shortcuts tab. Click a type of print task in the Printing Shortcuts list. The default settings for that type of print task are set and summarized on the Printing Shortcuts tab. If necessary, you can adjust the settings here and save your custom settings as a new printing shortcut.*

*To save a custom printing shortcut, select the shortcut and click Save As. To delete a shortcut, select the shortcut and click Delete.*

*Print 11 Chapter 4 6. Click OK to close the Properties dialog box. 7. Click Print or OK to begin printing. Related topics Load media Tips for print success Print photos Print photos saved on your computer Print Print photos saved on your computer To print a photo on photo paper 1.*

*Remove all paper from the paper tray. 2. Place the photo paper print side down on the right side of the paper tray. Slide the paper-width guide inward until it stops at the edge of the paper. On the File menu in your software application, click Print.*

*Make sure the product is the selected printer. Click the button that opens the Properties dialog box. Depending on your software application, this button might be called Properties, Options, Printer Setup, Printer, or Preferences. 7. Click the Features tab. 8. In the Basic Options area, from the Paper Type drop-down list, select More. Then, select the appropriate photo paper type. 9. In the Resizing Options area, from the Size drop-down list, select More.*

*Then, select the appropriate paper size. If the paper size and paper type are not compatible, the printer software displays an alert and allows you to select a different type or size. 10. (Optional) Select the Borderless printing check box if it is not already checked. If the borderless paper size and paper type are not compatible, the product software displays an alert and allows you to select a different type or size. 3. 4. 5. 6. 12 Print 11.*

*In the Basic Options area, select a high print quality, such as Best, from the Print Quality drop-down list. NOTE: To achieve the highest dpi resolution, you can use the Maximum dpi setting with supported types of photo paper. If Maximum dpi is not listed in the Print quality drop-down list, you can enable it from the Advanced tab. 12. In the HP Real Life Technologies area, click the Photo fix drop-down list and select from the following options: · Off: applies no HP Real Life Technologies to the image.*

*· Basic: enhances low-resolution images; moderately adjusts image sharpness. 13. Click OK to return to the Properties dialog box. 14. Click OK, and then click Print or OK in the Print dialog box.*

*NOTE: Do not leave unused photo paper in the paper tray. The paper might start to curl, which could reduce the quality of your printout. For best results, do not allow printed photos to stack up in the paper tray. Related topics Load media Tips for print success Print envelopes With the HP Photosmart, you can print on a single envelope, a group of envelopes, or label sheets designed for inkjet printers. To print a group of addresses on labels or envelopes 1. Print a test page on plain paper first. 2. Place the test page on top of the label sheet or envelope, and hold both up to the light. Check the spacing for each block of text. Make adjustments as needed.*

*3. Load the labels or envelopes into the paper tray. CAUTION: Do not use envelopes with clasps or windows. They can get stuck in the rollers and cause paper jams. 4. Slide the paper-width guide inward against the stack of labels or envelopes until the guide stops. 5. If you are printing on envelopes, do the following: a. Display the print settings, and click the Features tab. b.*

*In the Resizing Options area, click the appropriate envelope size in the Size list. 6. Click OK, and then click Print or OK in the Print dialog box. Related topics Load media Tips for print success Print envelopes 13 Print Chapter 4 Tips for print success Use the following tips to print successfully. Print tips · Use genuine HP cartridges.*

*Genuine HP cartridges are designed for and tested with HP printers to help you produce great results, time after time. · Make sure the cartridges have sufficient ink. To check the estimated ink levels, follow the instruction in the Tools menu on the display. Alternatively, you can check the ink levels in Printer Toolbox from the software. · Load a stack of paper, not just one page.*

*Use clean and flat paper of the same size. Make sure only one type of paper is loaded at a time. · Adjust the paper-width guide in the input tray to fit snugly against all paper. Make sure the paper-width guide does not bend the paper in the input tray.*



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

· Set the print quality and paper size settings according to the type and size of paper loaded in the input tray. · Use print preview to check margins. Do not let the margin settings for the document exceed the printable area of the printer. · Learn how to share your photos online and order prints. Click here to go online for more information. · Learn about TouchSmart Web Manager for printing reanother printer, the ink level indicator might be inaccurate or unavailable.

*NOTE: Ink level warnings and indicators provide estimates for planning purposes only. When you receive a low-ink warning message, consider having a replacement cartridge available to avoid possible printing delays. You do not have to replace the cartridges until the print quality is unacceptable. NOTE: Ink from the cartridges is used in the printing process in a number of different ways, including in the initialization process, which prepares the product and cartridges for printing, and in printhead servicing, which keeps print nozzles clear and ink flowing smoothly. In addition, some residual ink is left in the cartridge after it is used. For more information, see [www.hp.com/go/inkusage](http://www.hp.com/go/inkusage). To check the ink levels from the HP Photosmart Software 1. In the HP Solution Center, click Settings, point to Print Settings, and then click Printer Toolbox.*

*NOTE: You can also open the Printer Toolbox from the Print Properties dialog box. In the Print Properties dialog box, click the Features tab, and then click the Printer Services button. The Printer Toolbox appears. 2. Click the Estimated Ink Level tab. The estimated ink levels for the ink cartridges appear. To check the ink levels from the printer display 1. From the Home screen, press the Settings button. The Setup Menu is displayed. 2.*

*In the Setup Menu, press right arrow to highlight Tools. Press OK. 3. Press OK to display estimated ink level information. Work with cartridges Work with cartridges 21 Chapter 6 Related topics Order ink supplies Tips for working with ink Clean printhead automatically To clean the printhead from the printer display 1. From the Home screen, press the Settings button. The Setup Menu is displayed. 2. In the Setup Menu, press right arrow to highlight Tools. Press OK.*

*3. Press right arrow to highlight Clean Printhead. Press OK. Related topics Order ink supplies Tips for working with ink Replace the cartridges To replace the cartridges 1. Check that power is on. 2. Remove cartridge. a. Open cartridge access door. Work with cartridges Wait for print carriage to move to center of product.*

*b. Press tab on cartridge, then remove it from slot. 22 Work with cartridges 3. Insert new cartridge. a.*

*Remove cartridge from packaging. b. Twist orange cap to snap it off. A forceful twist may be required to remove cap. c.*

*Match color icons, then slide cartridge into slot until it clicks into place. Replace the cartridges 23 Work with cartridges Chapter 6 d. Close cartridge door. 4. Align cartridges. a. When prompted, press OK to print cartridge alignment page. b. Load page print side down on right front corner of glass, and then press OK to scan page. c.*

*Remove alignment page and recycle or discard it. 5. View the animation for this topic. Related topics Order ink supplies Tips for working with ink Work with cartridges Order ink supplies To learn which HP supplies work with your product, order supplies online, or create a printable shopping list, open HP Solution Center, and select the online shopping feature. Cartridge information and links to online shopping also appear on ink alert messages. In addition, you can find cartridge information and order online by visiting [www.hp.com/buy/supplies](http://www.hp.com/buy/supplies). NOTE: Ordering cartridges online is not supported in all countries/regions. If it is not supported in your country/region, contact a local HP reseller for information about purchasing cartridges.*

*24 Work with cartridges Cartridge warranty information The HP cartridge warranty is applicable when the product is used in its designated HP printing device. This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with. During the warranty period the product is covered as long as the HP ink is not depleted and the end of warranty date has not been reached. The end of warranty date, in YYYY/MM/DD format, may be found on the product as indicated: For a copy of the HP Limited Warranty Statement, see the printed documentation that came with the product. Tips for working with ink Use the following tips to work with ink cartridges: · Use the correct ink cartridges for your printer.*

*For a list of compatible ink cartridges, see the printed documentation that came with the printer. Alternatively, look in Printer Toolbox in the software. Insert the ink cartridges into the correct slots. Match the color and icon of each cartridge to the color and icon for each slot. Make sure all cartridges snap down into place.*

*Use genuine HP ink cartridges. Genuine HP ink cartridges are designed for and tested with HP printers to help you produce great results, time after time. Consider getting replacement ink cartridges when you receive an ink alert message. This avoids possible printing delays. You do not need to replace the ink cartridges until print quality becomes unacceptable. Make sure the printhead is clean. Follow the instructions from Tools menu on the printer display.*

*Alternatively, look in Printer Toolbox in the software. After you insert new ink cartridges, align the printer for best print quality. Follow the instructions from Tools menu on the printer display.*

*Alternatively, look in Printer Toolbox in the software. Work with cartridges · · · · Tips for working with ink 25 Chapter 6 Work with cartridges 26 Work with cartridges 7 Connectivity · · Add the HP Photosmart to a network Tips for setting up and using a networked printer Add the HP Photosmart to a network · · · WiFi Protected Setup (WPS) Wireless with a router (infrastructure network) Wireless without a router (ad hoc connection) WiFi Protected Setup (WPS) To connect the HP Photosmart to a wireless network using WiFi Protected Setup (WPS), you will need the following: A wireless 802.11 network that includes a WPS-enabled wireless router or access point. A desktop computer or laptop with either wireless networking support, or a network interface card (NIC). The computer must be connected to the wireless network that you intend to install the HP Photosmart on. To connect the HP Photosmart using WiFi Protected Setup (WPS) 1. Do one of the following: Use Push Button (PBC) method a. Set up wireless connection. Press and hold the Wireless button. Press corresponding button on WPS-enabled router or other networking device.*

*Press OK. b. Install software. NOTE: The product begins a timer for approximately two minutes in which the corresponding button on the networking device needs to be pressed.*



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

Use PIN method a.

Set up wireless connection. Press the Wireless button. Highlight Wireless Settings. Press OK. Highlight WiFi Protected Setup.

Press OK. Highlight PIN. Press OK. The device displays a PIN. Connectivity 27 Connectivity Chapter 7 Enter the PIN on WPS-enabled router or other networking device. Press OK. b. Install software. NOTE: The product begins a timer for approximately two minutes in which the PIN needs to be entered on the networking device. 2.

View the animation for this topic. Related topics Install the software for a network connection Tips for setting up and using a networked printer Wireless with a router (infrastructure network) To connect the HP Photosmart to an integrated wireless WLAN 802.11 network, you will need the following: A wireless 802.11 network that includes a wireless router or access point. A desktop computer or laptop with either wireless networking support, or a network interface card (NIC). The computer must be connected to the wireless network that you intend to install the HP Photosmart on. Broadband Internet access (recommended) such as cable or DSL. If you connect the HP Photosmart on a wireless network that has Internet access, HP recommends that you use a wireless router (access point or base station) that uses Dynamic Host Configuration Protocol (DHCP). Network name (SSID). WEP key or WPA Passphrase (if needed).

To connect the product with the Wireless Setup Wizard 1. Write down your network name (SSID) and WEP key or WPA passphrase. 2. Start Wireless Setup Wizard. Touch Wireless Setup Wizard.

3. Connect to wireless network. Select your network from the list of detected networks. 4. Follow prompts.

5. Install software. 6. View the animation for this topic. Related topics Install the software for a network connection Tips for setting up and using a networked printer Wireless without a router (ad hoc connection) Use this section if you want to connect the HP Photosmart to a wireless-capable computer without using a wireless router or access point. Connectivity 28 Connectivity There are two methods you can use to connect the HP Photosmart to your computer using an ad hoc wireless network connection. Once connected, you can install the HP Photosmart software. Turn on the wireless radio for the HP Photosmart and the wireless radio on your computer. On your computer, connect to the network name (SSID) hp (product model).(6-digit unique identifier), which is the default ad hoc network created by the HP Photosmart.

The 6-digit identifier is unique to each printer. OR Use an ad hoc network profile on your computer to connect to the product. If your computer is not currently configured with an ad hoc network profile, consult the Help file for your computer Operating System for the proper method to create an ad hoc profile on your computer. Once the ad hoc network profile has been created, insert the installation CD that came with the product and install the software. Connect to the ad hoc network profile you created on your computer. NOTE: An ad hoc connection can be used if you do not have a wireless router or access point but do have a wireless radio on your computer. However, an ad hoc connection may result in a lower level of network security and possibly reduced performance when compared to an infrastructure network connection using a wireless router or access point. To connect the HP Photosmart to a Windows computer with an ad hoc connection, the computer must have a wireless network adapter and an ad hoc profile. Create a network profile for a Windows Vista or Windows XP computer using the directions below. NOTE: The product comes configured with a network profile with hp (product model).

(6-digit unique identifier) as the network name (SSID). However, for security and privacy HP recommends you create a new network profile on your computer as described here. To create a network profile (Windows Vista) NOTE: The product comes configured with a network profile with hp (product model).(6-digit unique identifier) as the network name (SSID). However, for security and privacy HP recommends you create a new network profile on your computer as described here.

Connectivity Add the HP Photosmart to a network 29 Chapter 7 1. In the Control Panel, double-click Network and Internet, then Network and Sharing Center.. 2. In the Network and Sharing Center (under Tasks on the left), select Set up a connection or network.

3. Choose the connection option Set up a wireless ad hoc (computer-to-computer) network, then click Next. Read the description and warnings about ad hoc networks, then click Next>. 4. Enter details, including Network name (the SSID for your ad hoc connection), Security type, and SecurityPassphrase. If you are going to save this network connection, check Save this network. Make a note of the SSID and the Security key/ Passphrase for future reference. Click Next 5.

Continue to follow the prompts to complete setup of the ad hoc network connection. To create a network profile (Windows XP) NOTE: The product comes configured with a network profile with hp (product model).

(6-digit unique identifier) as the network name (SSID). However, for security and privacy HP recommends you create a new network profile on your computer as described here. 1. In the Control Panel, double-click Network Connections. 2. On the Network Connections window, right-click the Wireless Network Connection. If you see Enable on the pop-up menu, select it. Otherwise, if you see Disable on the menu, the wireless connection is already enabled. 3. Right-click the Wireless Network Connection icon, and then click Properties.

4. Click the Wireless Networks tab. 5. Select the Use Windows to configure my wireless network settings check box. 6.

Click Add, and then do the following: a. In Network name (SSID) box, type in a unique network name of your choice. NOTE: The network name is case sensitive, so it is important to remember any uppercase (capital) and lowercase (small) letters. b. If there is a Network Authentication list, select Open. Otherwise, go to the next step. c. In the Data encryption list, select WEP. d. Make sure that the check box is not selected next to The key is provided for me automatically. If it is selected, click the check box to clear it. e. In the Network key box, type a WEP key that has exactly 5 or exactly 13 alphanumeric (ASCII) characters. For example, if you enter 5 characters, you might enter ABCDE or 12345. Or, if you enter 13 characters, you might enter ABCDEF1234567.

(12345 and ABCDE are examples only. Select a combination of your choosing.) Alternatively, you can use HEX (hexadecimal) characters for the WEP key. A HEX WEP key must be 10 characters for 40 bit encryption, or 26 characters for 128 bit encryption. Connectivity 30 Connectivity f. In the Confirm network key box, type the same WEP key you typed in the previous step. NOTE: You must remember the exact uppercase (capital) and lowercase (small) letters. If you enter your WEP key incorrectly on the product, the wireless connection will fail.



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

- g. Write down the WEP key exactly as you typed it, including uppercase and lowercase letters.  
h. Select the check box for This is a computer-to-computer (ad hoc) network; wireless access points are not used. i. Click OK to close the Wireless network properties window, and then click OK again. j.

Click OK again to close the Wireless Network Properties Connection window. Related topics Install the software for a network connection Tips for setting up and using a networked printer Install the software for a network connection Use this section to install the HP Photosmart software on a computer connected to a network. Before you install the software, make sure you have connected the HP Photosmart to a network. If the HP Photosmart has not been connected to a network, follow the onscreen instructions during the software installation to connect the product to the network. NOTE: If your computer is configured to connect to a series of network drives, make sure that your computer is currently connected to these drives before installing the software.

Otherwise, the HP Photosmart software installer might try to use one of the reserved drive letters and you will not be able to access that network drive on your computer. NOTE: Installation time can range from 20 to 45 minutes depending on your operating system, the amount of available space, and the processor speed of your computer. To install the Windows HP Photosmart Software on a networked computer 1. Quit all applications running on your computer. 2. Insert the Windows CD that came with the product into the CD-ROM drive on your computer and follow the onscreen instructions. NOTE: If the HP Photosmart is not connected to a network, when prompted, connect the product to the computer using the USB setup cable included in the box. The product will then attempt to connect to the network. 3. If a dialog box about firewalls appears, follow the instructions.

If you see firewall popup messages, you must always accept or allow the pop-up messages. Add the HP Photosmart to a network 31 Connectivity Chapter 7 4.

On the Connection Type screen, select an appropriate option, and then click Next. The Searching screen appears as the Setup program searches for the product on the network. 5. On the Printer Found screen, verify that the printer description is correct. If more than one printer is found on the network, the Printers Found screen appears. Select the product you want to connect. 6. Follow the prompts to install the software.

When you have finished installing the software, the product is ready for use. 7. To test your network connection, go to your computer and print a self-test report to the product. Tips for setting up and using a networked printer Use the following tips to set up and use a networked printer: · When setting up the wireless networked printer, make sure your wireless router or access point is powered on. The printer searches for wireless routers, then lists the detected network names on the display.

When entering the WEP or WPA key, use the button next to Change Mode on the lower left to switch among Alpha Keypad, Numeric Keypad, and Symbol Keypad. To verify the wireless connection, check the wireless radio light in the Wireless Settings menu on the display. If the light is off, select Enable Wireless to enable the wireless connection. It also displays the IP address of the printer. If your computer is connected to a Virtual Private Network (VPN), you need to disconnect from the VPN before you can access any other device on your network.

, including the printer. Learn how to find your network security settings. Click here to go online for more information. Learn about the Network Diagnostic Utility and other troubleshooting tips. Click here to go online for more information. Learn how to change from a USB to wireless connection. Click here to go online for more information. Learn how to work with your firewall and anti-virus programs during printer setup. Click here to go online for more information. . . . . Connectivity 32 Connectivity 8 Paper basics 1.

Do one of the following: Load small-size paper a. Lower paper tray. Slide paper-width guide outwards. Paper basics Paper basics 33 Load media b. Load paper. Insert stack of photo paper into paper tray with short edge forward and print side down. Slide stack of paper forward until it stops. NOTE: If the photo paper you are using has perforated tabs, load photo paper so that tabs are closest to you. Slide paper-width guide inward until it stops at edge of paper.

Chapter 8 Paper basics 34 Load full-size paper a.

Lower paper tray. Slide paper-width guide outwards. b. Load paper. Insert stack of paper into paper tray with short edge forward and print side down. Slide stack of paper forward until it stops. Slide paper-width guide inward until it stops at edge of paper. Paper basics 2. View the animation for this topic. Load media 35 Paper basics Chapter 8 Paper basics 36 Paper basics 9 HP support · HP support by phone Additional warranty options HP support by phone Phone support options and availability vary by product, country/region, and language.

This section contains the following topics: · · · Phone support period Placing a call After the phone support period Phone support period One year of phone support is available in North America, Asia Pacific, and Latin America (including Mexico). To determine the duration of phone support in Europe, the Middle East, and Africa, go to [www.hp.com/support](http://www.hp.com/support). Standard phone company charges apply. Placing a call Call HP support while you are in front of the computer and the product. Be prepared to provide the following information: · · · Product name (HP Photosmart Wireless B110 series) Serial number (located on the back or bottom of the product) Messages that appear when the situation occurs Answers to these questions: Has this situation happened before? Can you re-create it? Did you add any new hardware or software to your computer at about the time that this situation began? Did anything else occur prior to this situation (such as a thunderstorm, product was moved, etc.)? For the list of support phone numbers, visit [www.hp.com/support](http://www.hp.com/support).

After the phone support period After the phone support period, help is available from HP at an additional cost. Help may also be available at the HP online support Web site: [www.hp.com/support](http://www.hp.com/support). Contact your HP dealer or call the support phone number for your country/region to learn more about support options. HP support 37 HP support Chapter 9 Additional warranty options Extended service plans are available for the HP Photosmart at additional costs. Go to [www.hp.com/support](http://www.hp.com/support), select your country/region and language, then explore the services and warranty area for information about the extended service plans. Clear the paper jam from the rear access door To clear a paper jam from the rear access door 1.



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

Turn product off. 2. Remove rear door. HP support 38 3. Remove jammed paper.  
4. Replace rear door. 5. Turn on product. 6.

Try printing again. 7. View the animation for this topic. HP support 10 Technical information The technical specifications and international regulatory information for the HP Photosmart are provided in this section. For additional specifications, see the printed documentation that came with the HP Photosmart. © All rights reserved. © 2009 Hewlett-Packard Development Company, L.P. Microsoft, Windows, Windows XP, and Windows Vista are U.S.

registered trademarks of Microsoft Corporation. © Press the Settings button on the Home screen. The Setup Menu appears. 2. 3. 4. Press OK to select Preferences. © Press OK. © For information about future operating system releases and support, visit the HP online support Web site at [www.hp.com/support](http://www.hp.com/support).

Environmental specifications · Recommended operating temperature range: 15 °C to 32 °C (59 °F to 90 °F) ···· Allowable operating temperature range: 5 °C to 40 °C (41 °F to 104 °F) Humidity: 20% to 80% RH non-condensing (recommended); 25 °C maximum dewpoint Non-operating (Storage) temperature range: 40 °C to 60 °C (-40 °F to 140 °F) In the presence of high electromagnetic fields, it is possible the output from the HP Photosmart may be slightly distorted HP recommends using a USB cable less than or equal to 3 m (10 feet) in length to minimize injected noise due to potential high electromagnetic fields Paper specifications Type Plain paper Legal paper Index cards Hagaki cards Envelopes 5 x 7 inch (13 x 18 cm) Photo paper Paper weight Up to 20 lb. (up to 75 gsm) Up to 20 lb. (up to 75 gsm) 110 lb. index max (200 gsm) 110 lb. index max (200 gsm) 20 to 24 lb. (75 to 90 gsm) 145 lb. (236 gsm) 4 x 6 inch (10 x 15 cm) Photo paper 145 lb. (236 gsm) 8.5 x 11 inch (216 x 279 mm) Photo paper \* 40 Maximum capacity.

145 lb. (236 gsm) Up to 40 Up to 40 Paper tray\* Up to 125 (20 lb. paper) Up to 125 (20 lb. paper) Up to 40 Up to 40 Up to 15 Up to 40 Technical information Technical information NOTE: For a complete list of supported media sizes, see the printer driver. Print specifications · Print speeds vary according to the complexity of the document ··· Panorama-size printing Method: drop-on-demand thermal inkjet Language: PCL3 GUI Scan specifications · Image editor included ··· Twain-compliant software interface Resolution: up to 1200 x 2400 ppi optical; 19200 ppi enhanced (software) For more information about ppi resolution, see the scanner software. Color: 48-bit color, 8-bit grayscale (256 levels of gray) Maximum scan size from glass: 21.6 x 29.7 cm (8.5 x 11.7 inches) Copy specifications · Digital image processing ··· Maximum number of copies varies by model Copy speeds vary according to the complexity of the document and model Maximum copy enlargement ranging from 200-400% (depends on model) Maximum copy reduction ranging from 25-50% (depends on model) Cartridge yield Visit [www.hp.com/go/learnaboutsupplies](http://www.hp.com/go/learnaboutsupplies) for more information on estimated cartridge yields. Print resolution To find out about the printer resolution, see the printer software. Environmental product stewardship program Technical information Hewlett-Packard is committed to providing quality products in an environmentally sound manner. Design for recycling has been incorporated into this product. The number of materials has been kept to a minimum while ensuring proper functionality and reliability. Dissimilar materials have been designed to separate easily. Fasteners and other connections are easy to locate, access, and remove using common tools. High priority parts have been designed to access quickly for efficient disassembly and repair. For more information, visit HP's Commitment to the Environment Web site at: [www.hp.com/hpinfo/globalcitizenship/environment/index.html](http://www.hp.com/hpinfo/globalcitizenship/environment/index.html) This section contains the following topics: ······ Eco-Tips Paper use Plastics Material safety data sheets Power consumption Recycling program HP inkjet supplies recycling program Disposal of waste equipment by users in private households in the European Union Chemical Substances Battery disposal in the Netherlands Environmental product stewardship program 41 Chapter 10 ··· Battery disposal in Taiwan Attention California users EU battery directive Eco-Tips HP is committed to helping customers reduce their environmental footprint. HP has provided the Eco-Tips below to help you focus on ways to assess and reduce the impact of your printing choices. In addition to specific features in this product, please visit the HP Eco Solutions web site for more information on HP's environmental initiatives.

[www.hp.com/hpinfo/globalcitizenship/environment/](http://www.hp.com/hpinfo/globalcitizenship/environment/) Your product's Eco features · Smart Web printing: The HP Smart Web Printing interface includes a Clip Book and Edit Clips window where you can store, organize, or print clips you have gathered from the Web. · Energy Savings information: To determine the ENERGY STAR® qualification status for this product, see Power consumption. Recycled Materials: For more information regarding recycling of HP products, please visit: [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) Paper use This product is suited for the use of recycled paper according to DIN 19309 and EN 12281:2002. Plastics Plastic parts over 25 grams are marked according to international standards that enhance the ability to identify plastics for recycling purposes at the end of product life. Material safety data sheets Material safety data sheets (MSDS) can be obtained from the HP Web site at: [www.hp.com/go/msds](http://www.hp.com/go/msds) Power consumption Hewlett-Packard printing and imaging equipment marked with the ENERGY STAR® logo is qualified to the U.S. Environmental Protection Agency's ENERGY STAR specifications for imaging equipment. The following mark will appear on ENERGY STAR qualified imaging products: Technical information 42 Additional ENERGY STAR qualified imaging product model information is listed at: [www.hp.com/go/energystar](http://www.hp.com/go/energystar) Recycling program HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit: Technical information [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) HP inkjet supplies recycling program HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge.

com/ go/energystar Recycling program HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit: Technical information [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) HP inkjet supplies recycling program HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge.

com/ go/energystar Recycling program HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit: Technical information [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) HP inkjet supplies recycling program HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge.

com/ go/energystar Recycling program HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit: Technical information [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) HP inkjet supplies recycling program HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge.

com/ go/energystar Recycling program HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit: Technical information [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) HP inkjet supplies recycling program HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge.



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

For more information, go to the following Web site: [www.hp.com/hpinfo/globalcitizenship/environment/recycle/](http://www.hp.com/hpinfo/globalcitizenship/environment/recycle/) Disposal of waste equipment by users in private households in the European Union Disposal of Waste Equipment by Users in Private Households in the European Union This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment.

The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Évacuation des équipements usagés par les utilisateurs dans les foyers privés au sein de l'Union européenne La présence de ce symbole sur le produit ou sur son emballage indique que vous ne pouvez pas vous débarrasser de ce produit de la même façon que vos déchets courants. Au contraire, vous êtes responsable de l'évacuation de vos équipements usagés et, à cet effet, vous êtes tenu de les remettre à un point de collecte agréé pour le recyclage des équipements électriques et électroniques usagés. Le tri, l'évacuation et le recyclage séparés de vos équipements usagés permettent de préserver les ressources naturelles et de s'assurer que ces équipements sont recyclés dans le respect de la santé humaine et de l'environnement.

Pour plus d'informations sur les lieux de collecte des équipements usagés, veuillez contacter votre mairie, votre service de traitement des déchets ménagers ou le magasin où vous avez acheté le produit. Entsorgung von Elektrogeräten durch Benutzer in privaten Haushalten in der EU Dieses Symbol auf dem Produkt oder dessen Verpackung gibt an, dass das Produkt nicht zusammen mit dem Restmüll entsorgt werden darf. Es obliegt daher Ihrer Verantwortung, das Gerät an einer entsprechenden Stelle für die Entsorgung oder Wiederverwertung von Elektrogeräten aller Art abzugeben (z.B. ein Wertstoffhof).

Die separate Sammlung und das Recyceln Ihrer alten Elektrogeräte zum Zeitpunkt ihrer Entsorgung trägt zum Schutz der Umwelt bei und gewährleistet, dass sie auf eine Art und Weise recycelt werden, die keine Gefährdung für die Gesundheit des Menschen und der Umwelt darstellt. Weitere Informationen darüber, wo Sie alte Elektrogeräte zum Recyceln abgeben können, erhalten Sie bei den örtlichen Behörden, Wertstoffhöfen oder dort, wo Sie das Gerät erworben haben. Smaltimento di apparecchiature da rottamare da parte di privati nell'Unione Europea Questo simbolo che appare sul prodotto o sulla confezione indica che il prodotto non deve essere smaltito assieme agli altri rifiuti domestici. Gli utenti devono provvedere allo smaltimento delle apparecchiature da rottamare portandole al luogo di raccolta indicato per il riciclaggio delle apparecchiature elettriche ed elettroniche. La raccolta e il riciclaggio separati delle apparecchiature da rottamare in fase di smaltimento favoriscono la conservazione delle risorse naturali e garantiscono che tali apparecchiature vengano rottamate nel rispetto dell'ambiente e della tutela della salute. Per ulteriori informazioni sui punti di raccolta delle apparecchiature da rottamare, contattare il proprio comune di residenza, il servizio di smaltimento dei rifiuti locale o il negozio presso il quale è stato acquistato il prodotto. Eliminación de residuos de aparatos eléctricos y electrónicos por parte de usuarios domésticos en la Unión Europea Este símbolo en el producto o en el embalaje indica que no se puede desechar el producto junto con los residuos domésticos. Por el contrario, si debe eliminar este tipo de residuo, es responsabilidad del usuario entregarlo en un punto de recogida designado de reciclado de aparatos electrónicos y eléctricos. El reciclaje y la recogida por separado de estos residuos en el momento de la eliminación ayudará a preservar recursos naturales y a garantizar que el reciclaje proteja la salud y el medio ambiente. Si desea información adicional sobre los lugares donde puede dejar estos residuos para su reciclado, póngase en contacto con las autoridades locales de su ciudad, con el servicio de gestión de residuos domésticos o con la tienda donde adquirió el producto.

Likvidace vysloužilého zařízení uživateli v domácnosti v zemích EU Tato značka na produktu nebo na jeho obalu označuje, že tento produkt nesmí být likvidován prostým vyhozením do běžného domovního odpadu. Odpovídáte za to, že vysloužilé zařízení bude předáno k likvidaci do stanovených sbírných míst určených k recyklaci vysloužilých elektrických a elektronických zařízení. Likvidace vysloužilého zařízení samostatným sběrem a recyklací napomáhá zachování přírodních zdrojů a zajišťuje, že recyklace probíhá způsobem chránícím lidské zdraví a životní prostředí. Další informace o tom, kam můžete vysloužilé zařízení předat k recyklaci, můžete získat od úřadů místní samosprávy, od společnosti provádějící svoz a likvidaci domovního odpadu nebo v obchodě, kde jste produkt zakoupili. Bortskaffelse af affaldsudstyr for brugere i private husholdninger i EU Dette symbol på produktet eller på dets emballage indikerer, at produktet ikke må bortskaffes sammen med andet husholdningsaffald. I stedet er det dit ansvar at bortskaffe affaldsudstyr ved at aflevere det på dertil beregnede indsamlingssteder med henblik på genbrug af elektrisk og elektronisk affaldsudstyr. Den separate indsamling og genbrug af dit affaldsudstyr på tidspunktet for bortskaffelse er med til at bevare naturlige ressourcer og sikre, at genbrug finder sted på en måde, der beskytter menneskers helbred samt miljøet. Hvis du vil vide mere om, hvor du kan aflevere dit affaldsudstyr til genbrug, kan du kontakte kommunen, det lokale renovationsvæsen eller den forening, hvor du købte produktet.



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>

Afvoer van afgedankte apparatuur door gebruikers in particuliere huishoudens in de Europese Unie Dit symbool op het product of de verpakking geeft aan dat dit product niet mag worden afgevoerd met het huishoudelijk afval. Het is uw verantwoordelijkheid uw afgedankte apparatuur af te leveren op een aangewezen inzamelpunt voor de verwerking van afgedankte elektrische en elektronische apparatuur.

De gescheiden inzameling en verwerking van uw afgedankte apparatuur draagt bij tot het sparen van natuurlijke bronnen en tot het hergebruik van materiaal op een wijze die de volksgezondheid en het milieu beschermt. Voor meer informatie over waar u uw afgedankte apparatuur kunt inleveren voor recycling kunt u contact opnemen met het gemeentehuis in uw woonplaats, de reinigingsdienst of de winkel waar u het product hebt aangeschaft. Eramajapidamistes kasutusekt kõrvaldatavate seadmete käitlemine Euroopa Liidus Kui tootel või toote pakendil on see sümbol, ei tohi seda toodet visata olmejäätmete hulka. Teie kohus on viia tarbetuks muutunud seade selleks ettenähtud elektri- ja elektroonikaseadmete utiliseerimiskohta. Utiliseeritavate seadmete eraldi kogumine ja käitlemine aitab säästa loodusvarasid ning tagada, et käitlemine toimub inimeste tervisele ja keskkonnale ohutult.

Lisateavet selle kohta, kuhu saate utiliseeritava seadme käitlemiseks viia, saate küsida kohalikust omavalitsusest, olmejäätmete utiliseerimispunkti või kauplusest, kust te seadme ostsite. Eesti Suomi Nederlands Dansk Cesky Español Italiano Deutsch Français English . . . . .

A hulladéanyagok kezelése a magánháztartásokban az Európai Unióban Ez a szimbólum, amely a termék vagy annak csomagolásán van feltüntetve, azt jelzi, hogy a termék nem kezelhet együtt az egyéb háztartási hulladékkal. Az Ön feladata, hogy a készülék hulladékaikat eljuttassa olyan kijelölt gyjthelyre, amely az elektromos hulladékok és az elektronikus berendezések újrahasznosításával foglalkozik. A hulladékok elkülönített gyjtése és újrahasznosítása hozzájárul a természeti erőforrások megrzéséhez, egyúttal azt is biztosítja, hogy a hulladék újrahasznosítása az egészségre és a környezetre nem ártalmas módon történik. Ha tájékoztatást szeretne kapni azokról a helyekről, ahol leadhatja újrahasznosításra a hulladékokat, forduljon a helyi önkormányzathoz, a háztartási hulladék begyjtésével foglalkozó vállalathoz vagy a termék forgalmazójához. Lietotju atbrvosans no nedergm iercm Eiropas Savienbas privtajs mjsaimniecbs Sis simbols uz ierces vai ts iepakojuma norda, ka so ierci nedrkst izmest kop ar prjiem mjsaimniecbas atkritumiem. Js esat atbildgs par atbrvosanos no nedergs ierces, to nododot nordtaj savksanas viet, lai tiktu veikta nederg elektrisk un elektronisk aprkojuma otrreizj prstrde. Specila nedergs ierces savksana un otrreizj prstrde paldz taupit dabas resursus un nodrosina tdu otrreizjo prstrdi, kas sarg cilvku veselbu un apkrtjo vidi. Lai iegtu papildu informciju par to, kur otrreizjai prstrdei var nogdt nedergo ierci, ldzu, sazinieties ar vietjo pasvaldbu, mjsaimniecbs atkritumu savksanas dienestu vai veikalu, kur iegdjties so ierci. Eiropos Sjungos vartotoji ir privaci nam ki atliekamos rangos ismetimas Sis simbolis ant produkto arba jo pakuots nurodo, kad produktas negali bti ismestas kartu su kitomis nam kio atliekomis. Js privalote ismesti savo atliekam rang atiduodami j atliekamos elektronikos ir elektros rangos perdirbimo punktus.

Jej atliekama ranga bus atskirai surenkama ir perdirbama, bus issaugomi natrals istekliai ir uztikrinama, kad ranga yra perdirbta zmogaus sveikat ir gamt tausojanciu bdu. Dl informacijos apie tai, kur galite ismesti atliekam perdirbti skirt rang kreipkitis atitinkam vietos tarnyb, nam kio atliek isvezimo tarnyb arba parduotuv, kurioje pirktote produkt. Utylizacja zuytego sprztu przez uytowników domowych w Unii Europejskiej Symbol ten umieszczony na produkcie lub opakowaniu oznacza, e tego produktu nie nalezy wyrzucac razem z innymi odpadami domowymi. Uytownik jest odpowiedzialny za dostarczenie zuytego sprztu do wyznaczonego punktu gromadzenia zuytych urzdze elektrycznych i elektronicznych. Gromadzenie osobno i recykling tego typu odpadów przyczynia si do ochrony zasobów naturalnych i jest bezpieczny dla zdrowia i rodowiska naturalnego. Dalsze informacje na temat sposobu utylizacji zuytych urzdze mona uzyska u odpowiednich wladz lokalnych, w przedsibiorstwie zajmujcym si usuwaniem odpadów lub w miejscu zakupu produktu. Descarte de equipamentos por usuários em residências da União Européia Este símbolo no produto ou na embalagem indica que o produto não pode ser descartado junto com o lixo doméstico. No entanto, é sua responsabilidade levar os equipamentos a serem descartados a um ponto de coleta designado para a reciclagem de equipamentos eletro-eletrônicos. A coleta separada e a reciclagem dos equipamentos no momento do descarte ajudam na conservação dos recursos naturais e garantem que os equipamentos serão reciclados de forma a proteger a saúde das pessoas e o meio ambiente. Para obter mais informações sobre onde descartar equipamentos para reciclagem, entre em contato com o escritório local de sua cidade, o serviço de limpeza pública de seu bairro ou a loja em que adquiriu o produto.

Postup používateov v krajinách Európskej únie pri vyhadzovaní zariadenia v domácom používaní do odpadu Tento symbol na produkte alebo na jeho obale znamená, že nesmie byť vyhodený s iným komunálnym odpadom. Namiesto toho máte povinnos odovzda toto zariadenie na zbernom mieste, kde sa zabezpečuje recyklácia elektrických a elektronických zariadení. Separovaný zber a recyklácia zariadenia urceného na odpad pomôže chráni prírodné zdroje a zabezpečí taký spôsob recyklácie, ktorý bude chráni ľudské zdravie a životné prostredie. alšie informácie o separovanom zbere a recyklácii získate na miestnom obecnom úrade, vo firme zabezpečujúcej zber vášho komunálneho odpadu alebo v predajni, kde ste produkt kúpili.



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>



Ravnanje z odpadno opremo v gospodinjstvih znotraj Evropske unije Ta znak na izdelku ali embalaži izdelka pomeni, da izdelka ne smete odlagati skupaj z drugimi gospodinjskimi odpadki.

Opadno opremo ste dolžni oddati na določenem zbirnem mestu za recikliranje odpadne elektricne in elektronske opreme. Z locenim zbiranjem in recikliranjem odpadne opreme ob odlaganju boste pomagali ohraniti naravne vire in zagotovili, da bo odpadna oprema reciklirana tako, da se varuje zdravje ljudi in okolje. Vec informacij o mestih, kjer lahko oddate odpadno opremo za recikliranje, lahko dobite na občini, v komunalnem podjetju ali trgovini, kjer ste izdelek kupili. Kassering av förbrukningsmaterial, för hem- och privatanvändare i EU Produkter eller produktförpackningar med den här symbolen får inte kasseras med vanligt hushållsavfall. I stället har du ansvar för att produkten lämnas till en behörig återvinningsstation för hantering av el- och elektronikprodukter.

Genom att lämna kasserade produkter till återvinning hjälper du till att bevara våra gemensamma naturresurser. Dessutom skyddas både människor och miljön när produkter återvinns på rätt sätt. Kommunala myndigheter, sophanteringsföretag eller butiken där varan köptes kan ge mer information om var du lämnar kasserade produkter för återvinning. Svenska Slovenscina Slovencina Português Polski Lietuviskai Environmental product stewardship program 43

Technical information Hävitettävien laitteiden käsittely kotitalouksissa Euroopan unionin alueella Tämä tuotteessa tai sen pakkauksessa oleva merkintä osoittaa, että tuotetta ei saa hävittää talousjätteiden mukana. Käyttäjän velvollisuus on huolehtia siitä, että hävitettävä laite toimitetaan sähkö- ja elektroniikkalaiteromun keräyspisteeseen. Hävitettävien laitteiden erillinen keräys ja kierrätys säästää luonnonvaroja. Näin toimimalla varmistetaan myös, että kierrätys tapahtuu tavalla, joka suojelee ihmisten terveyttä ja ympäristöä. Saat tarvittaessa lisätietoja jätteiden kierrätyspaikoista paikallisilta viranomaisilta, jäteyhtiöiltä tai tuotteen jälleenmyyjältä. Latviski Magyar Chapter 10 Chemical Substances HP is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at: [www.hp.com/go/reach](http://www.hp.com/go/reach).

hp.com/go/reach. Battery disposal in the Netherlands Dit HP Product bevat een lithium-manganees-dioxide batterij. Deze bevindt zich op de hoofdprintplaat.

Wanneer deze batterij leeg is, moet deze volgens de geldende regels worden afgevoerd. Battery disposal in Taiwan Attention California users The battery supplied with this product may contain perchlorate material. Special handling may apply. For more information, go to the following Web site: [www.dtscc.gov/hazardouswaste/perchlorate](http://www.dtscc.gov/hazardouswaste/perchlorate) Technical information 44 Technical information EU battery directive European Union Battery Directive This product contains a battery that is used to maintain data integrity of real time clock or product settings and is designed to last the life of the product. Any attempt to service or replace this battery should be performed by a qualified service technician. Directive sur les batteries de l'Union Européenne Ce produit contient une batterie qui permet de maintenir l'intégrité des données pour les paramètres du produit ou l'horloge en temps réel et qui a été conçue pour durer aussi longtemps que le produit. Toute tentative de réparation ou de remplacement de cette batterie doit être effectuée par un technicien qualifié. Batterie-Richtlinie der Europäischen Union Dieses Produkt enthält eine Batterie, die dazu dient, die Datenintegrität der Echtzeituhr sowie der Produkteinstellungen zu erhalten, und die für die Lebensdauer des Produkts ausreicht.

Im Bedarfsfall sollte das Instandhalten bzw. Austauschen der Batterie von einem qualifizierten Servicetechniker durchgeführt werden. Direttiva dell'Unione Europea relativa alla raccolta, al trattamento e allo smaltimento di batterie e accumulatori Questo prodotto contiene una batteria utilizzata per preservare l'integrità dei dati dell'orologio in tempo reale o delle impostazioni del prodotto e la sua durata si intende pari a quella del prodotto. Eventuali interventi di riparazione o sostituzione della batteria devono essere eseguiti da un tecnico dell'assistenza qualificato. Directiva sobre baterías de la Unión Europea Este producto contiene una batería que se utiliza para conservar la integridad de los datos del reloj de tiempo real o la configuración del producto y está diseñada para durar toda la vida útil del producto.

El mantenimiento o la sustitución de dicha batería deberá realizarla un técnico de mantenimiento cualificado. Smrnice Evropské unie pro nakládání s bateriemi Tento výrobek obsahuje baterii, která slouží k uchování správných dat hodiny reálného času nebo nastavení výrobku. Baterie je navržena tak, aby vydržela celou životnost výrobku. Jákýkoliv pokus o opravu nebo výmnu baterie by ml provést kvalifikovaný servisní technik. EU's batteridirektiv Produktet indeholder et batteri, som bruges til at vedligeholde dataintegriteten for realtidsur- eller produktindstillinger og er beregnet til at holde i hele produktets levetid. Service på batteriet eller udskiftning bør foretages af en uddannet servicetekniker. Richtlijn batterijen voor de Europese Unie Dit product bevat een batterij die wordt gebruikt voor een juiste tijdsaanduiding van de klok en het behoud van de productinstellingen. Bovendien is deze ontworpen om gedurende de levensduur van het product mee te gaan. Het onderhoud of de vervanging van deze batterij moet door een gekwalificeerde onderhoudstechnicus worden uitgevoerd. Euroopa Liidu aku direktiiv Toode sisaldab akut, mida kasutatakse reaalaja kella andmeühtsuse või toote sätete säilitamiseks.

Aku on valmistatud kestva terve toote kasutajaks. Akut tohib hooldada või vahetada ainult kvalifitseeritud hooldustehnik. Euroopan unionin paristodirektiivi Tämä laite sisältää pariston, jota käytetään reaaliaikaisen kellon tietojen ja laitteen asetusten säilyttämiseen.



[You're reading an excerpt. Click here to read official HP](http://yourpdfguides.com/dref/4173447)

[PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)

<http://yourpdfguides.com/dref/4173447>

Pariston on suunniteltu kestävän laitteen koko käyttöajan. Pariston mahdollinen korjaus tai vaihto on jätettävä pätevän huoltohenkilön tehtäväksi. . . . Az Európai unió telepek és akkumulátorok direktívája A termék tartalmaz egy elemet, melynek feladata az, hogy biztosítsa a valós idejű óra vagy a termék beállításainak adatintegritását. Az elem úgy van tervezve, hogy végig kitartson a termék használatá során. Az elem bármilyen javítását vagy cseréjét csak képzett szakember végezheti el.

Eiropas Savienbas Bateriju direktiva Produktam ir baterija, ko izmanto rel laika pulkstea vai produkta iestatjumu datu integrittes saglabšanai, un t ir paredzta visam produkta dzves ciklam. Jebkura apkope vai baterijas nomaia ir jveic atbilstosi kvalifictam darbiniekam. Euopos Sjungos baterij ir akumulatori direktiva Siame gaminyje yra baterija, kuri naudojama, kad bt galima prizirti realaus laiko laikrodzio veikim arba gaminio nuostatas; ji skirta veikti vis gaminio eksploataavimo laik. Bet kokius sios baterijos aptarnavimo arba keitimo darbus turi atlikti kvalifikuotas aptarnavimo technikas. Dyrektywa Unii Europejskiej w sprawie baterii i akumulatorów Produkt zawiera bateri wykorzystywan do zachowania integralnoci danych zegara czasu rzeczywistego lub ustawie produktu, która podtrzymuje dzialanie produktu.

Przegląd lub wymiana baterii powinny by wykonywane wylcznie przez uprawnionego technika serwisu. Diretiva sobre baterias da União Europeia Este produto contém uma bateria que é usada para manter a integridade dos dados do relógio em tempo real ou das configurações do produto e é projetada para ter a mesma duração que este. Qualquer tentativa de consertar ou substituir essa bateria deve ser realizada por um técnico qualificado. Smernica Európskej únie pre zaobchádzanie s batériami Tento výrobok obsahuje batériu, ktorá slúži na uchovanie správnych údajov hodín reálneho času alebo nastavení výrobu.

Batéria je skonštruovaná tak, aby vydržala celú životnosť výrobu.

Akýkovek pokus o opravu alebo výmenu batérie by mal vykona kvalifikovaný servisný technik. Direktiva Evropske unije o baterijah in akumulatorjih V tem izdelku je baterija, ki zagotavlja natančnost podatkov ure v realnem času ali nastavitev izdelka v celotni življenjski dobi izdelka. Kakršno koli popravilo ali zamenjavo te baterije lahko izvede le pooblašteni tehnik. EU:s batteridirektiv Produkten innehåller ett batteri som används för att upprätthålla data i realtidsklockan och produktinställningarna. Batteriet ska räkna produktens hela livslängd. Endast kvalificerade servicetekniker får utföra service på batteriet och byta ut det. . . . Directiva Uniunii Europene referitoare la baterii Acest produs conine o baterie care este utilizat pentru a menine integritatea datelor ceasului de timp real sau setrilor produsului i care este protecat s funcioneze pe întreaga durat de via a produsului. Orice lucrare de service sau de înlocuire a acestei baterii trebuie efectuat de un tehnician de service calificat.

Magyar Suomi Eesti Nederlands Dansk Cesky Español Italiano Deutsch Français English Român Svenska Slovencina Slovencina Português Environmental product stewardship program 45 Technical information Polski Lietuviškai Latviski Chapter 10 Regulatory notices The HP Photosmart meets product requirements from regulatory agencies in your country/region. This section contains the following topics: . . . . . Regulatory model identification number FCC statement VCCI (Class B) compliance statement for users in Japan Notice to users in Japan about the power cord Notice to users in Korea Notice to users in Germany Noise emission statement for Germany HP Photosmart Wireless B110 series declaration of conformity Regulatory model identification number For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is SDGOB-1011. This regulatory number should not be confused with the marketing name (HP Photosmart Wireless B110 series, etc.) or product numbers (CN245A, etc.). Technical information 46 Technical information FCC statement FCC statement The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. @@Increase the separation between the equipment and the receiver. @@@@This device complies with Part 15 of the FCC Rules. @@@@19 Technical information 48 Technical information HP Photosmart Wireless B110 series declaration of conformity DECLARATION OF CONFORMITY according to ISO/IEC 17050-1 and EN 17050-1 Manufacturer's Name: Manufacturer's Address: Hewlett-Packard Company 16399 West Bernardo Drive San Diego, CA 92127, USA DoC#: SDGOB-1011-Rev.

I declares, that the product Product Name: Regulatory Model Number:1) Product Options: Radio Module: Power Adapter: HP Photosmart Wireless eAll-in-One B110 Series Printer SDGOB-1011 ALL SDGOB-0892 (802.11g/b/n) 0957-2280, 0957-2289, 0957-2269 conforms to the following Product Specifications and Regulations: SAFETY: EMC: IEC 60950-1:2005 / EN60950-1:2006 / EN62311: 2008 CISPR 22: 2005 + A1: 2005 / EN55022: 2006 + A1:2007 Class B CISPR 24: 1997 +A1: 2001 + A2: 2002 / EN 55024:1998 + A1: 2001 + A2: 2003 Class B EN 301 489-1 V1.8.1:2008-04 / EN 301 489-17 V1.3. 2: 2008-04 IEC 61000-3-2: 2005 / EN 61000-3-2: 2006 IEC 61000-3-3: 1994 + A1: 2001 + A2: 2005 / EN 61000-3-3:1995 + A1: 2001 + A2: 2005 FCC Title 47 CFR, Part 15 Class B / ICES-003, Issue 4 EN 300 328 V1.7.1: 2006 Telecom: This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two Conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



[You're reading an excerpt. Click here to read official HP PHOTOSMART WIRELESS B110A user guide](http://yourpdfguides.com/dref/4173447)  
<http://yourpdfguides.com/dref/4173447>