



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HP PROBOOK 4530S. You'll find the answers to all your questions on the HP PROBOOK 4530S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HP PROBOOK 4530S
User guide HP PROBOOK 4530S
Operating instructions HP PROBOOK 4530S
Instructions for use HP PROBOOK 4530S
Instruction manual HP PROBOOK 4530S

HP Notebook
Reference Guide



[You're reading an excerpt. Click here to read official HP PROBOOK 4530S user guide](http://yourpdfguides.com/dref/5518699)
<http://yourpdfguides.com/dref/5518699>

Manual abstract:

S. and other countries. Java is a U.S. trademark of Sun Microsystems, Inc. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. The information contained herein is subject to change without notice. ©©©©HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: March 2011 First Edition: June 2010 Document Part Number: 607195-002 Product notice This reference guide describes features that are common to most models. Some features may not be available on your computer. Safety warning notice WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow.

Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950). iii iv Safety warning notice Table of contents 1 Introduction ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 1 Finding more information about your new computer

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 1 2 Networking (select models only)

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 2 *Creating a wireless connection ...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

2 Identifying wireless and network status icons

.....
.....
.....
.....

.....
.....
.....

..... 2 *Turning wireless devices on or off*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 4 *Using HP Connection Manager (select models only)*

.....
.....
.....
.....

.....
.....
.....

4 Using operating system controls

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
4 Using a WLAN

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 5 Connecting to an existing WLAN

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 5 Setting up a new WLAN

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 6 Protecting your WLAN

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....

. 6 Roaming to another network

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 6 Using HP Mobile Broadband (select models only) ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 7 Inserting a SIM ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 7 Removing a SIM

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.. 8 Using GPS (select models only) ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 8 Using Bluetooth wireless devices

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 8 Bluetooth and Internet Connection Sharing (ICS) .

.....
.....
.....
.....

.....
.....
.....

.. 8 Connecting to a wired network

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

. 9 Using a modem (select models only)

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 9 Connecting a modem cable

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 9 Connecting a country- or region-specific modem cable adapter

.....
.....

.. 11 Selecting a location setting ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 11 Viewing the current location selection

.....
.....
.....

.....
.....
.....

.. 11 Adding new locations when traveling

.....
.....
.....
.....

..... 12 Connecting to a local area network (LAN) (select models only) .

.....
.....

.....
.....
.....
.....
... 13 3 Multimedia .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
... 15 Using the media activity controls ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 15 v Audio

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... 15 Adjusting the volume ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
... 16 Checking audio functions on the computer ..

.....
.....

.....
.....
.....

.....
.....
.....

..... 16 Webcam (select models only)

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
... 18 Video ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

..... *19 VGA* .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

19 HDMI

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

20 Configuring audio for HDMI

.....
.....
.....

.....
.....
.....
.....

.....
.....

.... *20 Intel Wireless Display (select models only)* .

.....

.....
.....
.....
.....

.....
.... 21 4 Power management .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 22 Shutting down the computer ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 22 Setting power options .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

24 Viewing the current power plan

.....
.....
.....
.....
.....

... 24 Selecting a different power plan ..

.....
.....
.....
.....
.....

..... 24 Customizing power plans

.....
.....
.....
.....
.....
.....

.. 25 Setting password protection on wakeup ...

.....
.....
.....
.....
.....
.....

... 25 Using Power Assistant (select models only)

.....
.....
.....

.....
.....
.....
.....

..... 27 Using battery power .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 27 Finding additional battery information

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 27 Using Battery Check

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 28 Displaying the remaining battery charge ..

.....
.....
.....
.....

.....
.....

.....

.....

.....

.....

.....

... 28 Maximizing battery discharge time

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 28 Managing low battery levels ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 28 Identifying low battery levels

.....

.....

.....

.....

.....

.....

.....

.....

..... 28 Resolving a low battery level ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 29 Resolving a low battery level when external power is available

.. 29 Resolving a low battery level when a charged battery is available ... 29 Resolving a low battery level when no power source is available 29 Resolving a low battery level when the computer cannot exit Hibernation .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 29 *Conserving battery power*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 29 *Storing a battery* .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 30 *Disposing of a used battery*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 30 *Replacing the battery*

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 30 Using external AC power

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 30 vi Testing an AC adapter

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 32 Switching between graphics modes (select models only)

.....
.....
.....

.....
.....
.....

.....

. 32 5 External cards and devices

.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 33 Using Media Card Reader cards (select models only) ..

.....
.....
.....
.....
.....
.....
.....
.....

.... 33 Inserting a digital card

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 33 Removing a digital card ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 34 Using PC Cards (select models only) .

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *34 Configuring a PC Card*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *35 Inserting a PC Card*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *36 Removing a PC Card*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *37 Using ExpressCards (select models only)*

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
. 37 Configuring an ExpressCard

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

37 Inserting an ExpressCard

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 38 Removing an ExpressCard

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 39 Using smart cards (select models only) .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

.. 39 Inserting a smart card

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 40 Removing a smart card

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 40 Using a USB device ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 40 Connecting a USB device

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *41 Removing a USB device .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *54 Using RAID (select models only)*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

54 7 Security

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.... 55 Protecting the computer

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 55 Using passwords

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 56 Setting passwords in Windows .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 56 Setting passwords in Computer Setup .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.. *57 Managing a BIOS administrator password ...*
.....

.....
.....
.....

.....
.....
.....
..... *57 Entering a BIOS administrator password .*

.....
.....
.....

.....
.....
.....
..... *58 Managing a Computer Setup DriveLock password ...*

.....
.....
.....

.....
.....
.....
..... *58 Setting a DriveLock password*

.....
.....
.....

.....
.....
.....

.....
..... *59 Entering a DriveLock password*
.....

.....
.....
.....

.....
.....
.....
..... *60 Changing a DriveLock password*

.....
.....
.....

.....
.....

.....
.....
.....

... 60 Removing DriveLock protection

.....
.....
.....

.....
.....
.....

60 Using Computer Setup Auto DriveLock

.....

.....
.....
.....

.....
.....
.....

.. 61 Entering an Automatic DriveLock password

.....
.....
.....

.....
.....
.....

..... 61 Removing Automatic DriveLock protection

.....
.....
.....

.....
.....
.....

61 Using antivirus software

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 63 Using firewall software ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 64 Installing critical security updates

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 65 Using HP ProtectTools Security Manager (select models only) .

.....

.....

.....

.....

.....

.....

..... 66 Installing an optional security cable

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 67 Using the fingerprint reader (select models only)

.....

.....

.....

.....
.....
.....
.....

..... 68 Locating the fingerprint reader

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 68 8 Maintenance

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 69 Cleaning your computer

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 70 *Cleaning products* .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 70 *viii Cleaning procedures* .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 70 *Cleaning the display*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 70 *Cleaning the sides and cover*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 70 *Cleaning the TouchPad and keyboard*

.....
.....
.....

.....
.....
.....

... 71 Cleaning a tablet PC pen and pen holder ..

.....
.....
.....
.....

71 Updating programs and drivers

.....
.....
.....
.....
.....
.....
.....
.....

..... 71 Using SoftPaq Download Manager

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 72 9 Computer Setup (BIOS) and System Diagnostics

.....
.....
.....
.....
.....
.....
.....
.....

. 73 Using Computer Setup

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

73 Starting Computer Setup

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 73 Navigating and selecting in Computer Setup .

.....
.....
.....
.....
.....
.....
.....
.....

... 73 Restoring factory settings in Computer Setup ..

.....
.....
.....
.....
.....
.....
.....
.....

..... 74 Updating the BIOS

.....
.....
.....
.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.... 75 Determining the BIOS version .

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 75 Downloading a BIOS update .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 75 Using System Diagnostics

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

76 10 MultiBoot

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *77 About the boot device order .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

77 Enabling boot devices in Computer Setup

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *78 Considering boot order changes .*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *... 79 Choosing MultiBoot preferences ..*

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

..... 80 Setting a new boot order in Computer Setup ...

.....
.....
.....

.....
.....
.....

..... 80 Dynamically choosing a boot device using the F9 prompt

.....
.....
.....

.....
.....
.....

..... 80 Setting a MultiBoot Express prompt

.....
.....
.....

.....
.....
.....

.....
.....

.. 81 Entering MultiBoot Express preferences ...

.....
.....

.....
.....

.....
.....
.....

.. 81 11 Management

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *82 Using Client Management Solutions*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... *82 Configuring and deploying a software image*

.....
.....
.....

.....
.....
.....
.....

.....
.....

... *82 Managing and updating software* ..

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

83 HP Client Manager for Altiris (select models only)

.....
.....
.....

.....
.....
.....

... *83 HP CCM (Client Configuration Manager) (select models only)*

.....

....
... 85 HP SSM (System Software Manager) .

.....

.....

....

....

.....

.....

....

....

.. 85 Using Intel Active Management Technology (select models only)

.....

....

....

.....

.....

....

86 Enabling the iAMT solution

.....

.....

....

....

.....

.....

....

....

.....

.....

....

....

. 87 Using the MEBx setup utility menus

.....

....

....

.....

.....

....

....

.....

... 87 Appendix A Traveling with the computer ..

....

.....

.....

....

....

.....

.....

....

....

.....

.....

....

....

..... 89 ix Appendix B Troubleshooting resources

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 91 Appendix C Electrostatic Discharge ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 92 Index ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 93 x 1 Introduction This guide contains general information about HP notebook computers. NOTE: Some of the features described in this guide may not be available on your computer.

[You're reading an excerpt. Click here to read official HP PROBOOK](#)



[4530S user guide](#)

<http://yourpdfguides.com/dref/5518699>

Finding more information about your new computer The following user guides and reference material are provided with your computer, either in print, on the computer hard drive, or on an optical disc or SD Card: □ Setup Instructions poster—Guides you through setting up your computer and turning it on. The poster is included in the box with the computer.

NOTE: Refer to the poster for the location of your user guides and reference material. □ □ Getting Started—Contains information about your computer, including product-specific features, backup and recovery, maintenance, and specifications. Help and Support—Contains information about the operating system, drivers, troubleshooting tools, and technical support. To access Help and Support, select Start > Help and Support. For country- or region-specific support, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. Safety & Comfort Guide—Describes proper workstation setup and proper posture, health, and work habits for computer users. It also provides important electrical and mechanical safety information. To access this guide, select Start > Help and Support > User Guides. This guide is also available on the Web at <http://www.hp.com/ergo>. Regulatory, Safety and Environmental Notices—Contains safety and regulatory information, and battery disposal information. To access the notices, select Start > Help and Support > User Guides.

□ □ Finding more information about your new computer 1 2 Networking (select models only) Your computer supports two types of Internet access: □ □ Wireless—Refer to Creating a wireless connection on page 2. Wired—Refer to Connecting to a wired network on page 9. NOTE: You must set up Internet service before you can connect to the Internet. Creating a wireless connection Your computer may be equipped with one or more of the following wireless devices: □ □ □ Wireless local area network (WLAN) device HP Mobile Broadband Module (wireless wide area network (WWAN) device) Bluetooth® device For more information on wireless technology, refer to the information and Web site links provided in Help and Support. Identifying wireless and network status icons Windows® 7 Icon Name Wireless (connected) Description Indicates that one or more wireless devices are on. Wireless (disconnected) Indicates that all wireless devices are off. HP Connection Manager (select models only) Opens HP Connection Manager, which enables you to create and manage WWAN connections (select models only), and monitor the status of WLAN and Bluetooth connections. Indicates that one or more network devices are connected to the network. Wired network (connected) 2 Chapter 2 Networking (select models only) Network (disabled/ disconnected) Indicates that all network devices are disabled in Windows Control Panel. Network (connected) Indicates that one or more network devices are connected to a network. Network (disconnected) Indicates that network devices are not connected to a network. Network (disabled/ disconnected) Indicates that no wireless connections are available. Windows Vista® Icon Name Wireless (connected) Description Indicates that one or more wireless devices are on. Wireless (disconnected) Indicates that all wireless devices are off. HP Connection Manager (select models only) Opens HP Connection Manager, which enables you to create and manage WWAN connections (select models only), and monitor the status of WLAN and Bluetooth connections.

Indicates that one or more WLAN devices are connected to a network. Indicates that one or more WLAN devices are not connected to a network. Wireless network connection (connected) Wireless network connection (disconnected) Network status (connected) Connected to the wired network. Network status (disconnected) Not connected to the wired network. Creating a wireless connection 3 Turning wireless devices on or off You can use the wireless button or HP Connection Manager (select models only) to turn on and turn off wireless devices.

NOTE: A computer may have a wireless button, a wireless switch, or a wireless key on the keyboard. The term wireless button is used throughout this guide to refer to all types of wireless controls. Refer to the Getting Started guide for information on identifying the location of the wireless button on your computer.

To turn off wireless devices using HP Connection Manager: □ Right-click the HP Connection Manager icon in the notification area, at the far right of the taskbar, and then click the power button next to the desired device. – or – Select Start > All Programs > HP > HP Connection Manager, and then click the power button next to the desired device. Using HP Connection Manager (select models only) HP Connection Manager provides a central location for managing your wireless devices, an interface for connecting to the Internet using HP Mobile Broadband, and an interface for sending and receiving SMS (text) messages. HP Connection Manager allows you to manage the following devices: □ □ □ Wireless local area network (WLAN)/WiFi Wireless wide area network (WWAN)/HP Mobile Broadband Bluetooth® HP Connection Manager provides information and notifications on connection status, power status, SIM details, and SMS messages. Status information and notifications are provided in the notification area, at the far right of the task bar. To open HP Connection Manager: □ Click the HP Connection Manager icon in the task bar. – or – Click Start > All Programs > HP > HP Connection Manager.

For more information, refer to the HP Connection Manager software Help. Using operating system controls The Network and Sharing Center allows you to set up a connection or network, connect to a network, manage wireless networks, and diagnose and repair network problems. To use operating system controls: □ Select Start > Control Panel > Network and Internet > Network and Sharing Center. For more information, select Start > Help and Support. 4 Chapter 2 Networking (select models only) Using a WLAN A wireless connection connects the computer to Wi-Fi networks, or WLANs. A WLAN is composed of other computers and accessories that are linked by a wireless router or a wireless access point. Connecting to an existing WLAN Windows 7 1. 2. 3. 4. Be sure that the WLAN device is on. (Refer to Turning wireless devices on or off on page 4). Click the network icon in the notification area, at the far right of the taskbar. Select your WLAN from the list. Click Connect.

If the network is a security-enabled WLAN, you are prompted to enter a network security code. Type the code, and then click OK to complete the connection. NOTE: If no WLANs are listed, you may be out of range of a wireless router or access point. NOTE: If you do not see the WLAN you want to connect to, click Open Network and Sharing Center, and then click Set up a new connection or network.



[You're reading an excerpt. Click here to read official HP PROBOOK 4530S user guide](http://yourpdfguides.com/dref/5518699)
<http://yourpdfguides.com/dref/5518699>

A list of options is displayed.

You can choose to manually search for and connect to a network or to create a new network connection. Windows Vista 1. 2. 3. Be sure that the WLAN device is on. (Refer to Turning wireless devices on or off on page 4.) Select Start > Connect to. Select your WLAN from the list. If the network is unsecured, a warning is displayed. Click Connect Anyway to accept the warning and complete the connection.

If the network is a security-enabled WLAN, you are prompted to enter a network security code. Type the code, and then click Connect to complete the connection. NOTE: If no WLANs are listed, you may be out of range of a wireless router or access point. NOTE: If you do not see the WLAN you want to connect to, click Show all connections. A list of available networks is displayed. You can choose to connect to an existing network or you can create a new network connection. After the connection is made, you can place the mouse pointer over the network icon in the notification area, at the far right of the taskbar, to verify the name and status of the connection. NOTE: The functional range (how far your wireless signals travel) depends on WLAN implementation, router manufacturer, and interference from other electronic devices or structural barriers such as walls and floors. Using a WLAN 5 Setting up a new WLAN Required equipment: A broadband modem (either DSL or cable) (purchased separately) (1) and high-speed Internet service purchased from an Internet service provider (ISP) A wireless router (purchased separately) (2) NOTE: Some cable modems include a built-in router. Check with your ISP to see if you need a separate router.

The wireless computer (3) The illustration below shows an example of a wireless network installation that is connected to the Internet. NOTE: When setting up a wireless connection, be sure that your computer and wireless router are synchronized. To synchronize your computer and wireless router, turn your computer and wireless router off and then back on. As your network grows, additional wireless and wired computers can be connected to the network to access the Internet. For help in setting up your WLAN, refer to the information provided by your router manufacturer or your ISP.

Protecting your WLAN When you set up a WLAN or access an existing WLAN, always enable security features to protect your network from unauthorized access. WLANs in public areas (hotspots) like coffee shops and airports may not provide any security. If you are concerned about the security of your computer in a hotspot, limit your network activities to e-mail that is not confidential and basic Internet surfing. Wireless radio signals travel outside the network, so other WLAN devices can pick up unprotected signals. You can take the following precautions to protect your WLAN: Firewall—A firewall checks both data and requests for data that are sent to your network, and discards any suspicious items.

Firewalls are available in both software and hardware. Some networks use a combination of both types. Wireless encryption—Wi-Fi Protected Access (WPA) uses security settings to encrypt and decrypt data transmitted over the network. WPA uses Temporal Key Integrity Protocol (TKIP) to dynamically generate a new key for every packet. It also generates different sets of keys for each computer on the network. Roaming to another network When you move your computer within range of another WLAN, Windows attempts to connect to that network. If the attempt is successful, your computer is automatically connected to the new network. If 6 Chapter 2 Networking (select models only) Windows does not recognize the new network, follow the same procedure you used initially to connect to your WLAN. Using HP Mobile Broadband (select models only) HP Mobile Broadband enables your computer to use wireless wide area networks (WWANs) to access the Internet from more places and over larger areas than it can by using WLANs. Using HP Mobile Broadband requires a network service provider, which in most cases is a mobile phone network provider.

When used with mobile network provider service, HP Mobile Broadband gives you the freedom to stay connected to the Internet, send e-mail, or connect to your corporate network whether you are on the road or outside the range of Wi-Fi hotspots. NOTE: You may need the HP Mobile Broadband Module serial number to activate mobile broadband service. Refer to the Getting Started guide for the location of the serial number. Some mobile network service providers require the use of a subscriber identity module (SIM). A SIM contains basic information about you or your computer, such as a personal identification number (PIN), as well as network information. Some computers include a preinstalled SIM. If the SIM is not preinstalled, it may be included with the HP Mobile Broadband information provided with your computer, or it may be provided separately by the mobile network service provider. For information on inserting and removing the SIM, refer to Inserting a SIM on page 7 and Removing a SIM on page 8. For information on HP Mobile Broadband and how to activate service with a preferred mobile network service provider, refer to the HP Mobile Broadband information included with your computer. For additional information, see the HP Web site at <http://www.hp.com/go/mobilebroadband> (U.S. only). Inserting a SIM NOTE: To identify the SIM slot location, refer to the Getting Started guide.

1. Shut down the computer. If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system. Close the display.

Disconnect all external devices connected to the computer. Unplug the power cord from the AC outlet. Remove the battery. Insert the SIM into the SIM slot, and gently press the SIM into the slot until it is firmly seated. CAUTION: When inserting a SIM, position the card to match the icon next to the SIM slot on the computer. If a SIM is inserted incorrectly, it could damage the SIM and the SIM connector. To reduce the risk of damage to the connector, use minimal force when inserting a SIM. 7. Replace the battery. NOTE: HP Mobile Broadband is disabled if the battery is not replaced.

2. 3. 4. 5. 6. Using HP Mobile Broadband (select models only) 7 8. 9. Reconnect external power and external devices. Turn on the computer. Removing a SIM NOTE: To identify the SIM slot location, refer to the Getting Started guide.

1. Shut down the computer. If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system. Close the display.

Disconnect all external devices connected to the computer. Unplug the power cord from the AC outlet. Remove the battery. Press in on the SIM, and then remove it from the slot. Replace the battery.

Reconnect external power and external devices. Turn on the computer.



[You're reading an excerpt. Click here to read official HP PROBOOK 4530S user guide](http://yourpdfguides.com/dref/5518699)
<http://yourpdfguides.com/dref/5518699>

2. 3. 4. 5. 6. 7. 8. 9.

Using GPS (select models only) Your computer may be equipped with a Global Positioning System (GPS). GPS satellites deliver location, speed, and direction information to GPS-equipped systems. For more information, refer to the HP GPS and Location software Help. Using Bluetooth wireless devices A Bluetooth device provides short-range wireless communications that replace the physical cable connections that traditionally link electronic devices such as the following: Computers Phones Imaging devices (cameras and printers) Audio devices Bluetooth devices provide peer-to-peer capability that allows you to set up a personal area network (PAN) of Bluetooth devices. For information on configuring and using Bluetooth devices, refer to the Bluetooth software Help. Bluetooth and Internet Connection Sharing (ICS) HP does not recommend setting up one computer with Bluetooth as a host and using it as a gateway through which other computers may connect to the Internet. When two or more computers are 8 Chapter 2 Networking (select models only) connected using Bluetooth, and Internet Connection Sharing (ICS) is enabled on one of the computers, the other computers may not be able to connect to the Internet using the Bluetooth network. The strength of Bluetooth is in synchronizing information transfers between your computer and wireless devices including cellular phones, printers, cameras, and PDAs. The inability to consistently connect two or more computers to share the Internet through Bluetooth is a limitation of Bluetooth and the Windows operating system. Connecting to a wired network Using a modem (select models only) A modem must be connected to an analog telephone line using a 6-pin, RJ-11 modem cable (purchased separately).

In some countries or regions, a specific modem cable adapter is also required. Jacks for digital PBX systems may resemble analog telephone jacks, but they are not compatible with the modem. **WARNING!** To reduce the risk of electric shock, fire, or damage to the equipment, do not plug a modem or telephone cable into the RJ-45 (network) jack. If the modem cable contains noise suppression circuitry (1), which prevents interference from TV and radio reception, orient the circuitry end of the cable (2) toward the computer. Connecting a modem cable 1.

Plug the modem cable into the modem jack (1) on the computer. Connecting to a wired network 9 2. Plug the modem cable into the RJ-11 telephone wall jack (2). 10 Chapter 2 Networking (select models only) Connecting a country- or region-specific modem cable adapter Telephone jacks vary by country or region. To use the modem and the modem cable outside the country or region in which you purchased the computer, you must obtain a country- or region-specific modem cable adapter.

To connect the modem to an analog telephone line that does not have an RJ-11 telephone jack, follow these steps: 1. 2. 3. Plug the modem cable into the modem jack (1) on the computer. Plug the modem cable into the modem cable adapter (2). Plug the modem cable adapter (3) into the telephone wall jack. Selecting a location setting Viewing the current location selection Windows 7 1. 2. 3. 4.

Select Start > Control Panel. Click Clock, Language, and Region. Click Region and Language. Click the Location tab to display your location. Windows Vista 1. 2. 3. Select Start > Control Panel. Click Clock, Language, and Region. Click Regional and Language Options.

Your location is displayed under Location. Connecting to a wired network 11 Adding new locations when traveling On a new computer, the only location setting available to the modem is a location setting for the country or region in which you purchased the computer. As you travel to different countries or regions, set the internal modem to a location setting that meets the operating standards of the country or region in which you are using the modem. As you add new location settings, they are saved by the computer so that you can switch among settings at any time. You can add multiple location settings for any country or region.

CAUTION: To reduce the risk of losing your home country or region settings, do not delete your current modem country or region settings. To enable modem use in other countries or regions while preserving your home country or region configuration, add a new configuration for each location in which you will use the modem. **CAUTION:** To reduce the risk of configuring the modem in a way that violates the telecommunications regulations and laws of the country or region you are visiting, select the country or region in which the computer is located. The modem may not function properly if the correct country or region selection is not made. Windows 7 1.

2. Select Start > Device and Printers. Right-click the device that represents your computer, and click Modem settings. **NOTE:** You must set up an initial (current) location area code before you can view the Dialing Rules tab. If you do not have a location already set up, you are prompted to enter the location when you click Modem settings. 3. 4. 5. 6. 7.

8. 9. Click the Dialing Rules tab. Click New. The New Location window opens. In the Location name box, type a name (such as home or work) for the new location setting. Select a country or region from the Country/region list. (If you select a country or region that is not supported by the modem, the country/region selection for USA or UK is displayed.) Enter the area code, a carrier code (if necessary), and the number for an outside line (if necessary). Next to Dial using, click Tone or Pulse.

Click OK to save your new location setting. 10. Do one of the following: To set your new location setting as the current location, click OK. To select another location setting as the current location setting, select your preference from the settings in the Location list, and then click OK. **NOTE:** You can use the preceding procedure to add location settings for places within your own country or region as well as in other countries or regions.

For example, you could add a setting named Work that includes dialing rules for accessing an outside line. 12 Chapter 2 Networking (select models only) Windows Vista 1. 2. 3. 4.

5. 6. 7. 8. 9. Select Start > Control Panel. Click Hardware and Sound. Click Phone and Modem Options. Click the Dialing Rules tab. Click New.

The New Location window opens. In the Location name box, type a name (such as home or work) for the new location setting. Select a country or region from the Country/region list. (If you select a country or region that is not supported by the modem, the country/region selection for USA or UK is displayed.) Enter the area code, a carrier code (if necessary), and the number for an outside line (if necessary). Next to Dial using, click Tone or Pulse. 10. Click OK to save your new location setting. 11. Do one of the following: To set your new location setting as the current location, click OK.

To select another location setting as the current location setting, select your preference from the settings in the Location list, and then click OK.



[You're reading an excerpt. Click here to read official HP PROBOOK](http://yourpdfguides.com/dref/5518699)

[4530S user guide](http://yourpdfguides.com/dref/5518699)

<http://yourpdfguides.com/dref/5518699>

NOTE: You can use the preceding procedure to add location settings for places within your own country or region as well as in other countries or regions. For example, you could add a setting named Work that includes dialing rules for accessing an outside line. Connecting to a local area network (LAN) (select models only) Connecting to a LAN requires an 8-pin, RJ-45 network cable (purchased separately). If the network cable contains noise suppression circuitry (1), which prevents interference from TV and radio reception, orient the circuitry end of the cable (2) toward the computer.

To connect the network cable: 1. Plug the network cable into the network jack (1) on the computer. Connecting to a wired network 13 2. Plug the other end of the network cable into a network wall jack (2). WARNING! To reduce the risk of electric shock, fire, or damage to the equipment, do not plug a modem cable or telephone cable into an RJ-45 (network) jack.

14 Chapter 2 Networking (select models only) 3 Multimedia Your computer may include the following: Integrated speaker(s) Integrated microphone(s) Integrated webcam Preinstalled multimedia software Multimedia buttons or keys Using the media activity controls Depending on your computer model, you may have the following media activity controls that allow you to play, pause, fast forward, or rewind a media file: Media buttons Media hotkeys (specific keys pressed in combination with the fn key) Media keys Refer to the Getting Started guide for information about your computer's media activity controls. Audio Your computer provides a variety of audio-related functions: Play music. Record sound. Download music from the Internet. Create multimedia presentations. Transmit sound and images with instant messaging programs. Stream radio programs. Create (burn) audio CDs using the installed optical drive (select models only) or on an optional external optical drive (purchased separately). Using the media activity controls 15 Adjusting the volume Depending on your computer model, you can adjust the volume using the following: Volume buttons Volume hotkeys (specific keys pressed in combination with the fn key) Volume keys WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the Regulatory, Safety and Environmental Notices.

NOTE: Volume can also be controlled through the operating system and some programs. NOTE: Refer to the Getting Started guide for information on what type of volume controls your computer has. Checking audio functions on the computer NOTE: For best results when recording, speak directly into the microphone and record sound in a setting free of background noise. Windows 7 To check the audio functions on your computer, follow these steps: 1. 2. Select Start > Control Panel > Hardware and Sound > Sound. When the Sound window opens, click the Sounds tab. Under Program Events, select any sound event, such as a beep or alarm, and click the Test button. You should hear sound through the speakers or through connected headphones. To check the recording functions on your computer, follow these steps: 1.

2. 3. Select Start > All Programs > Accessories > Sound Recorder. Click Start Recording and speak into the microphone. Save the file to your desktop. Open a multimedia program and play back the sound. To confirm or change the audio settings on your computer, select Start > Control Panel > Hardware and Sound > Sound. Windows Vista To check the audio functions on your computer, follow these steps: 1. 2. Select Start > Control Panel > Hardware and Sound > Sound.

When the Sound window opens, click the Sounds tab. Under Program, select any sound event, such as a beep or alarm, and click the Test button. You should hear sound through the speakers or through connected headphones. 16 Chapter 3 Multimedia To check the recording functions on your computer, follow these steps: 1. 2. 3. Select Start > All Programs > Accessories > Sound Recorder. Click Start Recording and speak into the microphone. Save the file to your desktop. Open a multimedia program and play back the sound.

To confirm or change the audio settings on your computer, select Start > Control Panel > Audio. Audio 17 Webcam (select models only) Some computers include an integrated webcam. With the preinstalled software, you can use the webcam to take a photo or record a video. You can preview and save the photo or video recording. The webcam software enables you to experiment with the following features: Capturing and sharing video Streaming video with instant message software Taking still photos For information on how to access the webcam, refer to the Getting Started guide. For information on using the webcam, select Start > Help and Support. 18 Chapter 3 Multimedia Video Your computer may have one or more of the following external video ports: VGA HDMI (High Definition Multimedia Interface) NOTE: Refer to the Getting Started guide for information about your computer's video ports. VGA The external monitor port, or VGA port, is an analog display interface that connects an external VGA display device such as an external VGA monitor or a VGA projector to the computer. To connect a VGA display device, connect the device cable to the external monitor port. NOTE: For product-specific instructions on switching the screen image, refer to your Getting Started guide.

Video 19 HDMI The HDMI port connects the computer to an optional video or audio device, such as a high-definition television, or to any compatible digital or audio component. NOTE: To transmit video signals through the HDMI port, you need an HDMI cable (purchased separately). One HDMI device can be connected to the HDMI port on the computer. The information displayed on the computer screen can be simultaneously displayed on the HDMI device. To connect a video or audio device to the HDMI port: 1.

Connect one end of the HDMI cable to the HDMI port on the computer. 2. Connect the other end of the cable to the video device, and then refer to the device manufacturer's instructions for additional information. NOTE: For product-specific instructions on switching the screen image, refer to your Getting Started guide. Configuring audio for HDMI To configure HDMI audio, first connect an audio or video device, such as a high-definition TV, to the HDMI port on your computer.

Then configure the default audio playback device as follows: 1. 2. 3. Right-click the Speakers icon in the notification area, at the far right of the taskbar, and then click Playback devices. On the Playback tab, click either Digital Output or Digital Output Device (HDMI). Click Set Default, and then click OK. To return audio to the computer speakers, follow these steps: 1. 2. 3. Right-click the Speakers icon in the notification area, at the far right of the taskbar, and then click Playback devices.



[You're reading an excerpt. Click here to read official HP PROBOOK 4530S user guide](http://yourpdfguides.com/dref/5518699)
<http://yourpdfguides.com/dref/5518699>

On the Playback tab, click Speakers. Click Set Default, and then click OK. 20 Chapter 3 Multimedia Intel Wireless Display (select models only) Intel® Wireless Display allows you to share your computer content wirelessly on your TV. To experience wireless display, a wireless TV adapter (purchased separately) is required. Content that asserts output protection, such as DVD and Blu-ray discs, will not play on Intel Wireless Display. For details about using the wireless TV adapter, refer to the manufacturer's instructions. NOTE: Be sure that wireless is enabled on your computer before using the wireless display. Video 21 4 Power management NOTE: A computer may have a power button or a power switch. The term power button is used throughout this guide to refer to both types of power controls. Shutting down the computer CAUTION: Unsaved information is lost when the computer shuts down.

The shut down command closes all open programs, including the operating system, and then turns off the display and computer. Shut down the computer under any of the following conditions: When you need to replace the battery or access components inside the computer When you are connecting an external hardware device that does not connect to a Universal Serial Bus (USB) port When the computer will be unused and disconnected from external power for an extended period Although you can shut down the computer with the power button, the recommended procedure is to use the Windows shut down command: NOTE: If the computer is in the Sleep state or in Hibernation, you must first exit Sleep or Hibernation before shutdown is possible. 1. 2. Save your work and close all open programs.

Windows 7—Select Start > Shut down. Windows Vista—Select Start, click the arrow next to the Lock button, and then click Shut Down. NOTE: If you have been registered to a network domain, the button you click is called Shut Down instead of Turn Off Computer. If the computer is unresponsive and you are unable to use the preceding shutdown procedures, try the following emergency procedures in the sequence provided: Press ctrl+alt+delete, and then click the Power button. Press and hold the power button for at least 5 seconds.

Disconnect the computer from external power and remove the battery. 22 Chapter 4 Power management Setting power options Using power-saving states The computer has two power-saving states that are enabled at the factory: Sleep and Hibernation. When Sleep is initiated, the power lights blink and the screen clears. Your work is saved to memory, letting you exit Sleep faster than exiting Hibernation. If the computer is in the Sleep state for an extended period or if the battery reaches a critical battery level while in the Sleep state, the computer initiates Hibernation. When Hibernation is initiated, your work is saved to a hibernation file on the hard drive and the computer turns off. CAUTION: To reduce the risk of possible audio and video degradation, loss of audio or video playback functionality, or loss of information, do not initiate Sleep or Hibernation while reading from or writing to a disc or an external media card. NOTE: You cannot initiate any type of networking connection or perform any computer functions while the computer is in the Sleep state or in Hibernation. Initiating and exiting Sleep The system is set at the factory to initiate Sleep after a period of inactivity when running on battery power or on external power. Power settings and timeouts can be changed using Power Options in Windows Control Panel.

With the computer on, you can initiate Sleep in any of the following ways: Briefly press the power button. Close the display. Windows 7—Select Start, click the arrow next to the Shut down button, and then click Sleep. Windows Vista—Select Start, click the arrow next to the Lock button, and then click Sleep. To exit Sleep: Briefly press the power button. If the display is closed, open the display. Press a key on the keyboard. Tap or swipe the TouchPad. When the computer exits Sleep, the power lights turn on and your work returns to the screen as it was before you stopped working. NOTE: If you have set a password to be required on wakeup, you must enter your Windows password before your work will return to the screen.

Initiating and exiting Hibernation The system is set at the factory to initiate Hibernation after a period of inactivity when running on battery power or on external power, or when the battery reaches a critical battery level. Setting power options 23 Power settings and timeouts can be changed in Windows Control Panel. To initiate Hibernation: Windows 7—Select Start, click the arrow next to the Shut down button, and then click Hibernate. Windows Vista—Select Start, click the arrow next to the Lock button, and then click Hibernate. To exit Hibernation: Briefly press the power button. The power lights turn on and your work returns to the screen where you stopped working. NOTE: If you have set a password to be required on wakeup, you must enter your Windows password before your work will return to the screen. Using the power meter The power meter is located in the notification area, at the far right of the taskbar. The power meter allows you to quickly access power settings and view the remaining battery charge. To display the percentage of remaining battery charge and the current power plan, move the pointer over the power meter icon.

To access Power Options, or to change the power plan, click the power meter icon and select an item from the list. Different power meter icons indicate whether the computer is running on battery or external power. The icon also displays a message if the battery has reached a low or critical battery level. Using power plans A power plan is a collection of system settings that manages how the computer uses power. Power plans can help you conserve power or maximize performance. Viewing the current power plan Use any of the following methods: Click the power meter icon in the notification area, at the far right of the taskbar. Windows 7—Select Start > Control Panel > System and Security > Power Options. Windows Vista—Select Start > Control Panel > System and Maintenance > Power Options. Selecting a different power plan Use any of the following methods: Click the power meter icon in the notification area, and then select a power plan from the list. Windows 7—Select Start > Control Panel > System and Security > Power Options, and then select an item from the list.

Windows Vista—Select Start > Control Panel > System and Maintenance > Power Options, and then select an item from the list. 24 Chapter 4 Power management Customizing power plans Windows 7 1. Click the power meter icon in the notification area, and then click More power options. – or – Select Start > Control Panel > System and Security > Power Options.



[You're reading an excerpt. Click here to read official HP PROBOOK 4530S user guide](http://yourpdfguides.com/dref/5518699)
<http://yourpdfguides.com/dref/5518699>

2. 3. 4. Select a power plan, and then click Change plan settings. Change the settings as needed. To change additional settings, click Change advanced power settings and make your changes.

Windows Vista 1. Click the power meter icon in the notification area, and then click More power options. – or – Select Start > Control Panel > System and Maintenance > Power Options. 2. 3.

4. Select a power plan, and then click Change plan settings. Change the settings as needed. To change additional settings, click Change advanced power settings and make your changes. Setting password protection on wakeup To set the computer to prompt for a password when the computer exits Sleep or Hibernation, follow these steps: Windows 7 1.

2. 3. 4. Select Start > Control Panel > System and Security > Power Options. In the left pane, click Require a password on wakeup. Click Change Settings that are currently unavailable. Click Require a password (recommended). NOTE: If you need to create a user account password or change your current user account password, click Create or change your user account password, and then follow the onscreen instructions. If you do not need to create or change a user account password, go to step 5. 5.

Click Save changes. Windows Vista 1. 2. 3. Select Start > Control Panel > System and Maintenance > Power Options. In the left pane, click Require a password on wakeup. Click Change Settings that are currently unavailable. Setting power options 25 4. 5. Click Require a password (recommended).

Click Save changes. 26 Chapter 4 Power management Using Power Assistant (select models only) Power Assistant allows you to configure system settings to optimize your computer's power consumption and battery charge. Power Assistant provides tools and information to help you make informed decisions on power management: Power consumption predictions in hypothetical system configurations Predefined power profiles Usage details and graphs showing power consumption trends over time To start Power Assistant when Windows is running: Select Start > All Programs > HP > HP Power Assistant. – or – Press fn+f6 (select models only). For more information about using, configuring, and managing Power Assistant, refer to the Power Assistant software Help.

Using battery power WARNING! To reduce potential safety issues, use only the battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP. The computer runs on battery power whenever it is not plugged into external AC power. Computer battery life varies, depending on power management settings, running programs, display brightness, external devices connected to the computer, and other factors. Keeping the battery in the computer whenever the computer is plugged into AC power charges the battery and also protects your work in case of a power outage. If the computer contains a charged battery and is running on external AC power, the computer automatically switches to battery power if the AC adapter is disconnected from the computer or an AC power loss occurs.

NOTE: When you disconnect AC power, the display brightness is automatically decreased to save battery life. For information on increasing or decreasing display brightness, refer to the Getting Started guide. Select computer models can switch between graphic modes to increase battery life. For more information, refer to Switching between graphics modes (select models only) on page 32. Finding additional battery information Help and Support provides the following tools and information about the battery: Battery Check tool to test battery performance Information on calibration, power management, and proper care and storage to maximize battery life Information on battery types, specifications, life cycles, and capacity To access battery information: Select Start > Help and Support > Learn > Power Plans: Frequently Asked Questions. Using Power Assistant (select models only) 27 Using Battery Check Battery Check in Help and Support provides information on the status of the battery installed in the computer. To run Battery Check: 1. Connect the AC adapter to the computer. NOTE: The computer must be connected to external power for Battery Check to work properly. 2.

3. Select Start > Help and Support > Troubleshoot > Power, Thermal and Mechanical. Click the Power tab, and then click Battery Check. Battery Check examines the battery and its cells to see if they are functioning properly, and then reports the results of the examination. Displaying the remaining battery charge Move the pointer over the power meter icon in the notification area, at the far right of the taskbar. Maximizing battery discharge time Battery discharge time varies depending on the features you use while on battery power. Maximum discharge time gradually decreases as the battery storage capacity naturally degrades. Tips for maximizing battery discharge time: Lower the brightness on the display. Remove the battery from the computer when it is not being used or charged. Store the battery in a cool, dry location.

Select the Power saver setting in Power Options. Managing low battery levels The information in this section describes the alerts and system responses set at the factory. Some low-battery alerts and system responses can be changed using Power Options in Windows Control Panel. Preferences set using Power Options do not affect lights. Identifying low battery levels When a battery that is the sole power source for the computer reaches a low or critical battery level, the following behavior occurs: The battery light (select models only) indicates a low or critical battery level.

NOTE: For additional information about the battery light, refer to the Getting Started guide. – or – The power meter icon in the notification area shows a low or critical battery notification. 28 Chapter 4 Power management NOTE: For additional information about the power meter, refer to Using the power meter on page 24. The computer takes the following actions for a critical battery level: If Hibernation is enabled and the computer is on or in the Sleep state, the computer initiates Hibernation. If Hibernation is disabled and the computer is on or in the Sleep state, the computer remains briefly in the Sleep state, and then shuts down and loses any unsaved information.

Resolving a low battery level Resolving a low battery level when external power is available Connect one of the following devices: AC adapter Optional docking or expansion device Optional power adapter purchased as an accessory from HP Resolving a low battery level when a charged battery is available 1. 2. 3. Turn off the computer or initiate Hibernation. Replace the discharged battery with a charged battery. Turn on the computer. Resolving a low battery level when no power source is available Initiate Hibernation.



[You're reading an excerpt. Click here to read official HP PROBOOK](http://yourpdfguides.com/dref/5518699)

[4530S user guide](http://yourpdfguides.com/dref/5518699)

<http://yourpdfguides.com/dref/5518699>

b. Gently press in on the ExpressCard (1) to unlock it. Pull the ExpressCard out of the slot (2). Using smart cards (select models only) NOTE: The term smart card is used throughout this chapter to refer to both smart cards and Java™ Cards. A smart card is a credit card-sized accessory that carries a microchip containing memory and a microprocessor. Like personal computers, smart cards have an operating system to manage input and output, and they include security features to protect against tampering. Industry-standard smart cards are used with the smart card reader (select models only). A PIN is needed to gain access to the contents of the microchip. For more information about smart card security features, refer to Help and Support.

Using smart cards (select models only) 39 Inserting a smart card 1. Hold the card label-side up, and gently slide the card into the smart card reader until the card is seated. 2. Follow the on-screen instructions for logging on to the computer using the smart card PIN. Removing a smart card □ Grasp the edge of the smart card, and then pull it out of the smart card reader. Using a USB device Universal Serial Bus (USB) is a hardware interface that can be used to connect an optional external device, such as a USB keyboard, mouse, drive, printer, scanner, or hub. Some USB devices may require additional support software, which is usually included with the device. For more information about device-specific software, refer to the manufacturer's instructions. These instructions may be provided with the software, on disc, or on the manufacturer's Web site. The computer has at least 1 USB port that supports USB 1.

0, 1.1, 2.0, or 3.0 devices. Your computer may also have a powered USB port that provides power to an external device if it is used with a powered USB cable.

An optional docking device or USB hub provides additional USB ports that can be used with the computer. 40 Chapter 5 External cards and devices Connecting a USB device CAUTION: To reduce the risk of damage to a USB connector, use minimal force to connect the device. □ Connect the USB cable for the device to the USB port. NOTE: The following illustration may look slightly different on your computer. You will hear a sound when the device has been detected.

NOTE: The first time you connect a USB device, a message in the notification area lets you know that the device is recognized by the computer. Removing a USB device CAUTION: To reduce the risk of damage to a USB connector, do not pull on the cable to remove the USB device. CAUTION: To reduce the risk of loss of information or an unresponsive system, use the following procedure to safely remove the USB device. 1. 2. 3. To remove a USB device, save your information and close all programs associated with the device. @@Remove the device. Using 1394 devices (select models only) IEEE 1394 is a hardware interface that connects a high-speed multimedia or data storage device to the computer. Scanners, digital cameras, and digital camcorders often require a 1394 connection.

Some 1394 devices may require additional support software, which is usually included with the device. For more information about device-specific software, refer to the manufacturer's instructions. The 1394 port also supports IEEE 1394a devices. Using 1394 devices (select models only) 41 Connecting a 1394 device CAUTION: To reduce the risk of damage to a 1394 port connector, use minimal force to connect the device. □ To connect a 1394 device to the computer, connect the 1394 cable for the device to the 1394 port. You will hear a sound when the device has been detected. Removing a 1394 device CAUTION: To reduce the risk of loss of information or an unresponsive system, stop the 1394 device before removing it. CAUTION: To reduce the risk of damage to a 1394 connector, do not pull on the cable to remove the 1394 device. 1. 2.

3. To remove a 1394 device, save your information and close all programs associated with the device. @@Remove the device. Using an eSATA device (select models only) An eSATA port connects an optional high-performance eSATA component, such as an eSATA external hard drive. Some eSATA devices may require additional support software, which is usually included with the device.

For more information about device-specific software, refer to the manufacturer's instructions. NOTE: The eSATA port also supports an optional USB device. 42 Chapter 5 External cards and devices Connecting an eSATA device CAUTION: To reduce the risk of damage to an eSATA port connector, use minimal force to connect the device. □ To connect an eSATA device to the computer, connect the eSATA cable for the device to the eSATA port. You will hear a sound when the device has been detected.

Removing an eSATA device CAUTION: To reduce the risk of damage to an eSATA connector, do not pull on the cable to remove the eSATA device. CAUTION: To reduce the risk of loss of information or an unresponsive system, use the following procedure to safely remove the device. 1. 2. 3. To remove an eSATA device, save your information and close all programs associated with the device. @@Remove the device. Using an eSATA device (select models only)

43 Using a serial device (select models only) Select computer models include a serial port that connects optional devices such as a serial modem, mouse, or printer. Some serial devices may require additional support software, which is usually included with the device. For more information about device-specific software, refer to the manufacturer's instructions.

□ To connect a serial device, connect the device cable to the serial port on the computer. Using optional external devices NOTE: For more information about required software and drivers, or to learn which computer port to use, refer to the manufacturer's instructions. To connect an external device to the computer: CAUTION: To reduce the risk of damage to the equipment when connecting a powered device, be sure that the device is turned off and the AC power cord is unplugged. 1. 2. 3. Connect the device to the computer. If you are connecting a powered device, plug the device power cord into a grounded AC outlet. Turn on the device. To disconnect an unpowered external device, turn off the device, and then disconnect it from the computer.

To disconnect a powered external device, turn off the device, disconnect it from the computer, and then unplug the AC power cord. Using optional external drives Removable external drives expand your options for storing and accessing information. A USB drive can be added by connecting the drive to a USB port on the computer. NOTE: HP external USB optical drives should be connected to the powered USB port on the computer. 44 Chapter 5 External cards and devices USB drives include the following types: □ □ □ □ 1.

44-megabyte diskette drive Hard drive module External optical drive (CD, DVD, and Blu-ray) MultiBay device Using the expansion port (select models only) The expansion port connects the computer to an optional docking or expansion device, so that additional ports and connectors can be used with the computer.



[You're reading an excerpt. Click here to read official HP PROBOOK](http://yourpdfguides.com/dref/5518699)

[4530S user guide](http://yourpdfguides.com/dref/5518699)

<http://yourpdfguides.com/dref/5518699>