



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HP SLATE 10 HD 3500EF SILVER. You'll find the answers to all your questions on the HP SLATE 10 HD 3500EF SILVER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HP SLATE 10 HD 3500EF SILVER**  
**User guide HP SLATE 10 HD 3500EF SILVER**  
**Operating instructions HP SLATE 10 HD 3500EF SILVER**  
**Instructions for use HP SLATE 10 HD 3500EF SILVER**  
**Instruction manual HP SLATE 10 HD 3500EF SILVER**

User Guide



[You're reading an excerpt. Click here to read official HP SLATE 10 HD 3500EF SILVER user guide](http://yourpdfguides.com/dref/5512765)  
<http://yourpdfguides.com/dref/5512765>

**Manual abstract:**

Windows is a U.S. registered trademark of Microsoft Corporation. The information contained herein is subject to change without notice. @@@@HP shall not be liable for technical or editorial errors or omissions contained herein. First Edition: September 2013 Document Part Number: 743472-001 Product notice This guide describes features that are common to most models. Some features may not be available on your tablet. Software terms By installing, copying, downloading, or otherwise using any software product preinstalled on this tablet, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase. For any further information or to request a full refund of the tablet, please contact your local point of sale (the seller).

Table of contents 1 The basics .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

. 1 Lock and unlock the screen ....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 1 2 Using the Home screen .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*2 3 Using apps and widgets .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 3 Using the on-screen keyboard .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*... 3 Using Gmail ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....  
.....  
.....

*. 3 Using the calendar .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 4 Using Google Now ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*4 Using the clock .....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 4 Downloading apps ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 4 Uninstalling apps ....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

. 4 4 Using the cameras ....

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 5 Taking your own photo .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 5 Recording a video .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 5 Taking a screenshot ..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 5 Viewing photos or videos ..*

.....  
.....  
.....

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*5 Printing photos .....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 5.5 Connecting to networks ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 7 Connect to a wireless network ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 7 Connect to Bluetooth (select models only) ....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 7 Connect to a mobile network (select models only) ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. 8 Activate data transfer ....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

... 8 Activate tethering or a portable hotspot (select models only) .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.... 8 Connect to a Miracast-compatible wireless display (select models only) .

.....  
.....  
.....  
.....



.....  
.....  
.....

.... 8 Connect to a Windows computer (select models only) .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

. 9 6 Using Settings ....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 10 WIRELESS & NETWORKS .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 10 DEVICE .....

.....  
.....  
.....

.....  
.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 10 PERSONAL .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 10 ACCOUNTS.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 11 iii SYSTEM .....

.....

.....

.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*11 7 Securing your tablet .....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 12 8 Backing up and recovering your data ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*... 13 Updating apps, widgets, and the operating system ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

..... 13 Back up and reset .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 13 Factory data reset .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 13 9 More HP resources .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 14 Index .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 15 iv 1 The basics NOTE: For basic operating instructions, see the printed Quick Start guide included in the box with your tablet.

IMPORTANT: Before using the tablet for the first time, connect it to external power, and then charge the battery for at least 15 minutes. To start using your tablet, follow these instructions: 1. After charging the battery, and while the battery image is displayed on the screen, turn on the tablet by pressing and holding the power button about 5 seconds until the HP logo is displayed. The first time you turn on the tablet, you will see a Welcome screen. IMPORTANT: If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the HP logo is displayed.

2. Follow the on-screen instructions to select a language, connect to a wireless network, and sign into your Google™ account. NOTE: If you do not have a Google account, you can create one now. When you sign into a Google account, the email, contacts, calendar events, and data associated with that account are synchronized with your tablet. @@@@ Swipe up from the bottom to display Google Now cards. @@@@ Touch an app to open it. @@@@ You can view the updated content without opening the widget. To see all apps, touch . . . To open an app, touch the icon. @@@@, and then touch the Widgets tab. @@@@ 2. 3. 4. Touch , and then touch .

Under ACCOUNTS, touch Add account. Touch Google, and then follow the on-screen instructions. @@@@ To display Google Now cards, swipe up from the bottom of the screen. Using the clock . . . Touch , and then touch the Clock icon. To add the Clock to the Home screen, touch and hold the Clock icon until it appears on the Home screen. To add an alarm, touch the Clock icon, touch Set alarm, and then follow the on-screen instructions. Downloading apps Download apps, music, books, games, and more from the Google Play Store. NOTE: Store. . . You must be connected to the Internet and signed into a Google account to access the Play , and then touch a category. Touch – or – Touch , and then type a keyword in the search field.

. . . To download and install an app, follow the on-screen instructions. Uninstalling apps 1. 2. 3. 4. Touch , and then touch . Under DEVICE, touch Storage, and then touch Apps. Touch the app that you want to uninstall, and then touch Uninstall. Touch OK, and then touch OK again. 4 Chapter 3 Using apps and widgets 4 Using the cameras Take your own photo or take screenshots with the front camera. Taking your own photo . . . Touch , ant (select models only) To share your product's mobile data connection via USB or as a portable Wi-Fi hotspot: 1. 2. 3. 4. Touch , and then touch . Under WIRELESS & NETWORKS, touch Mobile Networks, and then touch Tethering and portable hotspot. To set up a portable Wi-Fi hotspot, touch Mobile Hotspot. To share your product's mobile data connection, touch USB tethering. USB tethering works with Windows 7, Vista, or Linux. Connect to a Miracast-compatible wireless display (select models only) To connect to a Miracast-compatible wireless display: 1.

2. 3. Touch , and then touch . Under WIRELESS & NETWORKS, touch Miracast, and then touch Miracast wireless display. Follow the on-screen instructions. 8 Chapter 5 Connecting to networks Connect to a Windows computer (select models only) NOTE: USB tethering must be turned off before you can use USB to transfer files between your tablet and the computer. 1. Connect the micro USB cable to your tablet and to a Windows computer. The USB storage appears as a drive on the computer. You can copy files back and forth as you would with any other external device. 2. When you are finished, disconnect the USB cable. Connect to a Windows computer (select models only) 9 6 Using Settings Use Settings for connecting to networks, setting preferences, and finding information about your tablet. . . . Touch – or – . . . Swipe down from the top, and then touch . . . , and then touch . WIRELESS & NETWORKS . . . . . Wi-Fi—Enable or disable Wi-Fi, and connect to a wireless network so that you check email, search the Web, or access social media websites. Bluetooth—Enable or disable Bluetooth, and pair a Bluetooth device, such as a headset or keyboard, with your tablet. Data usage—View a graph of the data used during the selected period. The data usage by each installed app is also displayed. More. . . . —Enable or disable Airplane mode or VPN. DEVICE . . . . . Sound—Select Volumes, Default notification, and enable or disable Touch sounds and Screen lock sound. Display—Select Brightness, Wallpaper, Sleep, and Font size. Storage—View available space in tablet memory and SD™ card memory (if installed). Battery—View battery charge percentage and battery usage by various features. Apps—View downloaded apps and running apps. To view information or uninstall an app, touch the app.

[You're reading an excerpt. Click here to read official HP SLATE 10 HD 3500EF SILVER user guide](#)



<http://yourpdfguides.com/dref/5512765>

PERSONAL    Location access—Enable or disable Access to my location and Wi-Fi network location.

Security—Set preferences for SCREEN SECURITY, PASSWORDS, DEVICE ADMINISTRATION, and CREDENTIAL STORAGE. Language & input—Set preferences for Language, KEYBOARD & INPUT METHODS, SPEECH, and MOUSE/TRACKPAD. Backup & reset—Set preferences for BACKUP & RESTORE, and PERSONAL DATA. 10 Chapter 6 Using Settings ACCOUNTS Existing accounts are displayed.    Add an email account or another type of account—Under ACCOUNTS, touch + Add account, and then follow the on-screen instructions. Sync an account—Under ACCOUNTS, touch the name of the account. Touch the name of the account again, touch in the upper-right corner of the screen, and then touch Sync now. Remove an account—Under ACCOUNTS, touch the name of the account. Touch the name of the account again, touch in the upper-right corner of the screen, and then touch Remove account. SYSTEM    Date & time—Enable or disable Automatic date & time, and select preferences for time zone, time format, and date format. @@Developer options—Enable or disable various Developer options. CAUTION: Enabling this setting may cause errors on your tablet. @@@@Set a screen lock 1. 2. 3.

@@Under Choose screen lock, select one of the following types of screen locks, and then follow the on-screen instructions. NOTE: If you have previously set a screen lock, you must unlock the screen before changing the lock settings.     Slide—Unlock the screen by swiping to the right. Face Unlock (select models only)—Unlock the screen by looking at the screen. Pattern—Draw a simple pattern to unlock the screen.

Pin—Enter four or more numbers to unlock the screen. Password—Enter four or more letters or numbers. This option provides the most protection, if a strong password is selected. 12 Chapter 7 Securing your tablet 8 Backing up and recovering your data Updating apps, widgets, and the operating system HP recommends that you update your apps, widgets, and the operating system on a regular basis to the latest versions. Updates can resolve issues and bring new features and options to your tablet. Technology is always changing, and updating apps, widgets, and the operating system allows your tablet to run the latest technology available. For example, older apps and widgets might not work well with the most recent operating system. Go to the Google Play store to download the latest versions of HP and third-party apps and widgets. The operating system will download system updates automatically and notify you when it is ready to install these updates. If you want to update the operating system manually, go to <http://www.hp.com/support>.

hp.com/support. Back up and reset You can set preferences for backing up and restoring your data in case of loss. 1. 2. 3. Touch , and then touch . Under PERSONAL, touch Back up & reset. Under BACKUP & RESTORE, select one or more of the following:    Back up my data—Select the check box to enable backing up app data, Wi-Fi passwords, and other settings to Google servers. Backup account—Select a Google account for backing up data. Automatic restore—Select the check box to enable backed up settings and data to be restored when an app is reinstalled. Factory data reset To reset all settings and delete all data on the device: 1. 2. 3. Touch , and then touch .

Under PERSONAL, touch Back up & reset. Under PERSONAL DATA, select Factory data reset, and then follow the on-screen instructions. Updating apps, widgets, and the operating system 13 9 More HP resources To locate product details, how-to information, and more, use this table. Resource HP support For U.S.

support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to <http://welcome.hp.com/country/us/en/wwcontact.us.html>. Google For Google support, go to <http://www.google.com/mobile/android>.

com/mobile/android. Quick Start The Quick Start document is located in the document folder of the tablet box. Product Notices The Product Notices document is located in the document folder of the tablet box. Limited Warranty The warranty is located in the document folder of the tablet box. You can also go to <http://www.hp.com/go/orderdocuments>.  Warranty information about this tablet.  Important regulatory notices.  Important regulatory notices. Contents     Online chat with an HP technician. Email support. Find telephone numbers. Locate HP service center locations. Access Google online help and support.

14 Chapter 9 More HP resources Index A accounts 10 all apps icon 2 apps 3 B back icon 2 backup and recovery 13 battery 10 Beats Audio 10 Bluetooth 7, 10 C calendar 3 camera 5 clock 3 computer 7 D date & time 10 display 10 download 3 F Face Unlock 12 factory data reset 13 G Gmail PIN 12 printing 5 Product Notices 14 Q Quick Start 14 R recent apps icon S screen lock 12 screenshot 5 search icon 2 settings 10 sound 10 storage 10 V voice search icon 2 W warranty 14 wi-fi 7, 10 widgets 3 Windows 7 2 3 H home icon 2 I icons 2 L language N network 7 P password 12 photos 5 10 Index 15 .



[You're reading an excerpt. Click here to read official HP SLATE 10 HD 3500EF SILVER user guide](http://yourpdfguides.com/dref/5512765)  
<http://yourpdfguides.com/dref/5512765>