



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HUSQVARNA 125R. You'll find the answers to all your questions on the HUSQVARNA 125R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HUSQVARNA 125R
User guide HUSQVARNA 125R
Operating instructions HUSQVARNA 125R
Instructions for use HUSQVARNA 125R
Instruction manual HUSQVARNA 125R

EN Operator's manual, pp. 2-27
Travaux et réglages effectués conformément aux instructions de l'opérateur.
FR Manuel d'utilisation, pp. 28-53
Les opérations de réglage et de maintenance doivent être faites.
ES Manual de instrucciones, pp. 54-79
Las operaciones de ajuste y reparación deben hacerse de acuerdo a las instrucciones.

125R



[You're reading an excerpt. Click here to read official HUSQVARNA 125R user guide](http://yourpdfguides.com/dref/2811326)

<http://yourpdfguides.com/dref/2811326>

Manual abstract:

The machine's emission is specified in the Technical data section and on label. This product is in accordance with applicable EC directives. Use unleaded or quality leaded petrol and two-stroke oil mixed at a ratio of 2% (1:50). Beware of thrown objects and ricochets. The operator of the machine shall ensure, while working, that no persons or animals come closer than 15 metres. @@The blade is capable of amputating an arm or leg. Always keep people and animals at least 15 metres from the machine. Arrows which show limits for handle mounting. @@@@CAUTION! The stop switch automatically returns to the start position. @@Visual check.

Approved eye protection must always be used. Always wear approved protective gloves. Use anti-slip and stable boots. Only use non-metallic, flexible cutting attachments, i.e.

trimmer heads with trimmer line. 2 CONTENTS Contents KEY TO SYMBOLS Symbols

.....

.....

. 2 CONTENTS Contents

.....

.....

. 3 Note the following before starting 3 WHAT IS WHAT? What is what? .

.....

.....

. 4 GENERAL SAFETY PRECAUTIONS Important . .

.....

.....

.....

. . 5 Personal protective equipment 5 Machine's safety equipment . .

. 6 Cutting equipment

.....

.....

. . . 8 ASSEMBLY Fitting the handlebar

. 10 Fitting the harness and harness clamp 10 Fitting blades and trimmer heads . .

. . 11 Fitting a blade guard, grass blade and grass cutter . .

.....

.....

. . . . 11 Fitting the trimmer guard and trimmer head

.....

.....

. 12 FUEL HANDLING Fuel safety

.....

.....

. . . 13 Fuel . .

.....

.....

.....

. 13 Fuelling

.....

.....

. 14 STARTING AND STOPPING Check before starting

.....

. 15 Starting and stopping

. 15 WORKING TECHNIQUES General working instructions .

.....

. . 17 MAINTENANCE Carburetor

.....

20 Muffler

.....

.....

.....	20 Spark plug
.....
.....
.....	21 Air filter .
.....
.....
.....	21 Bevel gear
.....
.....
.....	21 Sharpening grass cutters and grass blades . .
.....
.....
.....	22 Maintenance schedule .
.....
.....	23 TECHNICAL DATA Technical data . . .
.....
.....
.....	24 EC-declaration of conformity (Applies to Europe only) . . .
.....	25 Note the following before starting: Please read the operator's manual carefully.

WARNING: Under no circumstances may the design of the machine be modified without the permission of the manufacturer. Always use genuine accessories. Non-authorized modifications and/or accessories can result in serious personal injury or the death of the operator or others. **WARNING:** A clearing saw, brushcutter or trimmer can be dangerous if used incorrectly or carelessly, and can cause serious or fatal injury to the operator or others. It is extremely important that you read and understand the contents of this operator's manual. **WARNING:** Long-term exposure to noise can result in permanent hearing impairment. So always use approved hearing protection. Husqvarna AB has a policy of continuous product development and therefore reserves the right to modify the design and appearance of products without prior notice.

3 WHAT IS WHAT? 8 1 2 3 5 7 28 17 10 4 18 19 20 22 6 16 14 1 15 13 11 12 27 9
21 23 4 21 25 26 4 24 What is what? 1. 2.
3. 4. 5. 6. 7.
8. 9. 10. 11. 12.

13. 14. 15. Blade Grease filler cap Bevel gear Cutting attachment guard Shaft Handlebar Throttle control Stop switch Throttle lock Harness clamp Cylinder cover Starter handle Fuel tank Choke control Primer bulb 16. 17. 18. 19. 20. 21. 22.

23. 24. 25. 26. 27. 28. 29. Air filter cover Handle adjustment Locking nut Support flange Support cup Drive disc Trimmer head Socket spanner Transport guard Allen key Harness Start throttle button Adjusting the throttle wire Operator's manual 29 4 GENERAL SAFETY PRECAUTIONS Important **IMPORTANT!** The machine is only designed for trimming grass, grass clearing and/or forestry clearing. The only accessories you can operate with this engine unit are the cutting attachments we recommend in the section on Technical data. Never use the machine if you are tired, if you have drunk alcohol, or if you are taking medication that could affect your vision, your judgement or your co-ordination.

Never use the machine in extreme weather conditions such as severe cold, very hot and/ or humid climates. Wear personal protective equipment. See instructions under the heading Personal protective equipment. Never use a machine that has been modified in any way from its original specification. Never use a machine that is faulty.

Carry out the checks, maintenance and service instructions described in this manual. Some maintenance and service measures must be carried out by trained and qualified specialists. See instructions under the heading Maintenance. All covers and guards must be fitted before starting. Make sure the spark plug cap and lead are not damaged.

Otherwise you could get an electric shock. The machine operator must ensure that no people or animals come closer than 15 metres while working. When several operators are working in the same area, the safety distance should be at least 15 metres. Personal protective equipment **IMPORTANT!** A clearing saw, brushcutter or trimmer can be dangerous if used incorrectly or carelessly, and can cause serious or fatal injury to the operator or others. It is extremely important that you read and understand the contents of this operator's manual. You must use approved personal protective equipment whenever you use the machine. Personal protective equipment cannot eliminate the risk of injury but it will reduce the degree of injury if an accident does happen. Ask your dealer for help in choosing the right equipment. **WARNING:** Listen out for warning signals or shouts when you are wearing hearing protection. Always remove your hearing protection as soon as the engine stops.

HELMET A helmet should be worn if the brush being cleared is taller than 2 metres. **HEARING PROTECTION** Wear hearing protection that provides adequate noise reduction. **WARNING:** Using an incorrect cutting attachment or an incorrectly filed blade can increase the risk of accidents. **WARNING:** Never allow children to use or be in the vicinity of the machine. As the machine is equipped with a spring-loaded stop switch and can be started by low speed and force on the starter handle, even small children under some circumstances can produce the force necessary to start the machine. This can mean a risk of serious personal injury. Therefore remove the spark plug cap when the machine is not under close supervision. **EYE PROTECTION** Always wear approved eye protection. If you use a visor then you must also wear approved protective goggles. Approved protective goggles must comply with EN 166 in EU countries.

GLOVES Gloves should be worn when necessary, e.g., when fitting cutting attachments. **BOOTS** Wear anti-slip and stable boots. 5 **GENERAL SAFETY PRECAUTIONS CLOTHING** Wear clothes made of a strong fabric and avoid loose clothing that can catch on shrubs and branches.



[You're reading an excerpt. Click here to read official HUSQVARNA
125R user guide
http://yourpdfguides.com/dref/2811326](http://yourpdfguides.com/dref/2811326)

Always wear heavy, long pants. Do not wear jewelry, shorts sandals or go barefoot. Secure hair so it is above shoulder level. FIRST AID KIT A first aid kit should be carried by operators of clearing saws, brushcutters or trimmers. Make sure the throttle control is locked at the idle setting when the throttle lock is released.

Machine's safety equipment This section describes the machine's safety equipment, its purpose, and how checks and maintenance should be carried out to ensure that it operates correctly. See the "What is what" section to locate where this equipment is positioned on your machine. The life span of the machine can be reduced and the risk of accidents can increase if machine maintenance is not carried out correctly and if service and/or repairs are not carried out professionally. If you need further information please contact your nearest service workshop. **IMPORTANT!** All servicing and repair work on the machine requires special training. This is especially true of the machine's safety equipment. If your machine fails any of the checks described below you must contact your service agent. When you buy any of our products we guarantee the availability of professional repairs and service. If the retailer who sells your machine is not a servicing dealer, ask him for the address of your nearest service agent. Press the throttle lock and make sure it returns to its original position when you release it.

Check that the throttle control and throttle lock move freely and that the return springs work properly. **WARNING:** Never use a machine that has faulty safety equipment! Follow the control, maintenance and service instructions described in this section. If your machine fails any of these checks contact your service agent to get it repaired. **Throttle lock** The throttle lock is designed to prevent accidental operation of the throttle control. When you press the lock (A) (i.e. when you grasp the handle) it releases the throttle control (B). When you release the handle, the throttle control and the throttle lock both move back to their original positions. This movement is controlled by two independent return springs. This arrangement means that the throttle control is automatically locked at the idle setting.

6 See instructions under the heading Start. Start the machine and apply full throttle. Release the throttle and check that the cutting attachment stops and remains at a standstill. If the cutting attachment rotates with the throttle in the idle position then the carburettor idle setting must be checked. See instructions under the heading Maintenance.

GENERAL SAFETY PRECAUTIONS **Stop switch** Make sure the engine stops when you push and hold the stop switch. **Harness quick release** There is an easily accessible, harness quick release fitted at the front in case of an emergency that requires you to free yourself from the machine and harness. See instructions under the heading Adjusting the harness. **Cutting attachment guard** This guard is intended to prevent loose objects from being thrown towards the operator. The guard also protects the operator from accidental contact with the cutting attachment.

Check that the harness straps are correctly positioned. Once the harness and machine have been adjusted, check that the harness quick release works correctly. **Muffler** The muffler is designed to reduce the noise level and to direct the exhaust gases away from the operator. Check that the guard is undamaged and not cracked. Replace the guard if it has been exposed to impact or is cracked. Always use the recommended guard for the cutting attachment you are using. See the "Technical data" section. Never use a cutting attachment without an approved guard. See the section on "Technical data". If an incorrect or faulty guard is fitted this can cause serious personal injury.

Use of incorrectly wound trimmer line or an incorrect cutting attachment increases the level of vibration. **WARNING:** In countries that have a warm and dry climate there is a significant risk of fire. We therefore fit certain mufflers with a spark arrestor mesh. Check whether the muffler on your machine is fitted with this kind of mesh. **Muffler bolts** Spark arrestor mesh armful vibration. S Only use the recommended cutting attachments. See the section on "Technical data".

Keep the teeth of the blade correctly sharpened! Follow our instructions and use the recommended file gauge. An incorrectly sharpened or damaged blade increases the risk of accidents. Check the cutting attachment for damage or cracks.

A damaged cutting attachment should always be replaced. S Smaller machines generally section on the drive disc/support flange engages correctly in the centre hole of the cutting attachment. If the cutting attachment is fitted incorrectly it can result in serious and/or fatal personal injury. **heads WARNING:** Never use a cutting attachment without an approved guard. See the section on Technical data.

If an incorrect or faulty guard is fitted this can cause serious personal injury. **IMPORTANT!** If a grass blade is to be used, the machine must be equipped with the correct handlebar, blade guard and harness. **11 ASSEMBLY** **Fitting the trimmer guard and trimmer head** S Fit the correct trimmer guard (A) for use with the trimmer head. Hook the trimmer guard/combination guard onto the fitting on the shaft and secure with the bolt (D). D B C A A S Fit the drive disc (B) on the output shaft.

S Turn the shaft until one of the holes in the drive disc aligns with the corresponding hole in the gear housing. S Insert hex wrench (C) in the hole to lock the shaft. S Screw on the trimmer head (H) in the opposite direction to the direction of rotation. @@If you have spilled fuel on it. Wipe off the spillage and allow remaining fuel to evaporate. 2. @@Wash any part of your body that has come in contact with fuel. Use soap and water. 3. If the machine is leaking fuel.

@@Always use a good quality petrol/oil mixture (at least 90 octane). @@@@Mixture 1:50 (2%). @@Contact your dealer when selecting an oil. Mixing ratio 1:33 (3%). @@S Never use oil intended for four-stroke engines. @@Bear in mind the risk of fire, explosion and inhaling fumes. **Fuel CAUTION!** @@@@S Always start by filling half the amount of the petrol to be used. Then add the entire amount of oil. Mix (shake) the fuel mixture. Add the remaining amount of petrol.

@@@The muffler gets very hot during and after use. This also applies during idling. @@Always shut off the engine before refueling. @@@Tighten the fuel cap carefully after refueling. @@Contamination in the tank can cause operating problems.

@@@@Always move the machine away from the refueling area before starting. Place the machine on a flat surface. @@@The safety distance is 15 meters. **Cold engine Primer bulb:** Press the primer bulb 10 times until fuel begins to fill the bulb. The primer bulb need not be completely filled. S Ensure the locking nut has not lost its captive force.



[You're reading an excerpt. Click here to read official HUSQVARNA 125R user guide](http://yourpdfguides.com/dref/2811326)
<http://yourpdfguides.com/dref/2811326>

The nut lock should have a locking force of at least 1.5 Nm. The tightening torque of the locking nut should be 35- Nm. -50 Choke: Move the blue engine choke lever over to the closed position. S Check that the trimmer head and trimmer guard are not damaged or cracked. Replace the trimmer head or trimmer guard if they have been exposed to impact or are cracked. Starting S Never use the machine without a guard nor with a defective guard. S All covers must be correctly fitted and undamaged before you start the machine. Hold the body of the machine on the ground using your left hand (CAUTION! Not with your foot!).

Firmly grip the starter rope handle with your right hand. DO NOT squeeze throttle trigger. Slowly pull out the cord until you feel some resistance (the starter pawls grip); then quickly and powerfully pull the cord. Never wrap the starter cord around your hand. Repeat pulling the cord until the engine attempts to start. Squeeze throttle trigger to release the choke. Continue to hold throttle trigger and pull starter rope until engine runs. 15 STARTING AND STOPPING choke lever to the closed position and repeat starting steps. CAUTION! Do not pull the starter cord all the way out and do not let go of the starter handle when the cord is fully extended. This can damage the machine.

NOTE: If engine dies, return blue engine For throttle handles with a start throttle lock: Set the throttle to the start position by first pressing the throttle lock and the throttle trigger, then pressing the start throttle button (A). Then release the throttle lock and the throttle trigger, followed by the start throttle button. The throttle function is now activated. To return the engine to idle, press the throttle lock and throttle trigger again. Warm engine With a warm engine, squeeze and hold the throttle trigger.

Pull starter rope sharply while squeezing throttle trigger until engine runs. Stopping Stop the engine by pushing and holding the stop switch in the STOP position until the engine stops. CAUTION! Do not put any part of your body in marked area. Contact can result in burns to the skin, or electrical shock if the spark plug cap has been damaged. Always use gloves.

Do not use a machine with damaged spark plug cap. CAUTION! The stop switch automatically returns to the start position. In order to prevent unintentional starting, the spark plug cap must be removed from the spark plug when assembling, checking and/or performing maintenance. WARNING: When the engine is started with the choke in the closed position the cutting attachment will start to rotate immediately. 16 WORKING TECHNIQUES General working instructions IMPORTANT! This section describes the basic safety precautions for working with trimmers. If you encounter a situation where you are uncertain how to proceed you should ask an expert. Contact your servicing dealer. Avoid all usage which you consider to be beyond your capability. You must understand the difference between forestry clearing, grass clearing and grass trimming before use. The ABC of clearing S S S S S Always use the correct equipment.

Make sure the equipment is well adjusted. Follow the safety precautions. Organise your work carefully. Always use full throttle when starting to cut with the blade. S Always use sharp blades. S Avoid stones. Basic safety rules 1. Look around you: S To ensure that people, animals or other things cannot affect your control of the machine. S To ensure that people, animals, etc., do not come into contact with the cutting attachment or loose objects that are thrown out by the cutting attachment.

S CAUTION! Do not use the machine unless you are able to call for help in the event of an accident. 2. Do not use the machine in bad weather, such as dense fog, heavy rain, strong wind, intense cold, etc. @@3. Make sure you can move and stand safely.

@@@@@@@@@You could get burned if you touch it. WARNING: Watch out for thrown objects. Always wear approved eye protection. Never lean over the cutting attachment guard. Stones, rubbish, etc.

can be thrown up into the eyes causing blindness or serious injury. Keep unauthorised persons at a distance. @@Stop the machine immediately if anyone approaches. @@@@Always stop the engine before cleaning. @@@@Switch off the engine before moving to another area. @@5. Never put the machine down with the engine running or while the cutting attachment is rotating. 17 WORKING TECHNIQUES Grass clearing using a grass blade Grass trimming with a trimmer head Trimming S Grass blades and grass cutters must not be used on woody stems. S A grass blade is used for all types of tall or coarse grass. S The grass is cut down with a sideways, swinging movement, where the movement from right- -left is the clearing stroke and -tothe movement from left- -right is the return -tostroke.

Let the left-hand side of the blade (between 8 and 12 o'clock) do the cutting. S Hold the trimmer head just above the ground at an angle. It is the end of the trimmer line that does the work. Let the trimmer line work at its own pace. Never press the trimmer line into the area to be cut. S If the blade is angled to the left when clearing grass, the grass will collect in a line, which makes it easier to collect, e.g. by raking. S Try to work rhythmically. Stand firmly with your feet apart.

Move forward after the return stroke and stand firmly again. S Let the support cup rest lightly against the ground. It is used to protect the blade from hitting the ground. S Reduce the risk of material wrapping around the blade by following these instructions: S Always work at full throttle. S Avoid the previously cut material during the return stroke.

S Stop the engine, unclip the harness and place the machine on the ground before you start to collect the cut material. S The trimmer line can easily remove grass and weeds up against walls, fences, trees and borders, however it can also damage sensitive bark on trees and bushes, and damage fence posts. S Reduce the risk of damaging plants by shortening the trimmer line to 10- cm and -12 reducing the engine speed. S When trimming you should use less than full throttle so that the trimmer line lasts longer and to reduce the wear on the trimmer head. Clearing S The clearing technique removes all unwanted vegetation.

Keep the trimmer head just above the ground and tilt it. Let the end of the trimmer line strike the ground around trees, posts, statues and the like. CAUTION! This technique increases the wear on the trimmer line. S The trimmer line wears quicker and must be fed forward more often when working against stones, brick, concrete, metal fences, etc., than when coming into contact with trees and wooden fences. 18 WORKING TECHNIQUES Cutting S The trimmer is ideal for cutting grass that is difficult to reach using a normal lawn mower. Keep the trimmer line parallel to the ground when cutting. Avoid pressing the trimmer head against the ground as this can ruin the lawn and damage the tool. WARNING: Neither the operator of the machine nor anyone else may attempt to remove the cut material while the engine is running or the trimmer line is rotating, as this can result in serious injury.



[You're reading an excerpt. Click here to read official HUSQVARNA 125R user guide](http://yourpdfguides.com/dref/2811326)
<http://yourpdfguides.com/dref/2811326>

Stop the engine and trimmer head before you remove material that has wound around the drive shaft as otherwise there is a risk of injury.

@@ You could get burned if you touch it. **WARNING:** Watch out for thrown objects. Always wear eye protection. Never lean over the cutting attachment guard. Stones, rubbish, etc. can be thrown up into the eyes causing blindness or serious injury. Keep unauthorized persons at a distance. @@ Stop the machine immediately if anyone approaches. S Do not allow the trimmer head to constantly come into contact with the ground during normal cutting. Constant contact of this type can cause damage and wear to the trimmer head.

Sweeping S The fan effect of the rotating line can be used for quick and easy clearing up. Hold the trimmer line parallel to and above the area to be swept and move the tool to and fro. S When cutting and sweeping you should use full throttle to obtain the best results. 19 **MAINTENANCE** The owner is responsible for the performance of all required maintenance as defined in the operator's manual. Idle Speed Screw-T Carburetor Your Husqvarna product has been designed and manufactured to specifications that reduce harmful emissions.

After the engine has used 8-10 tanks of fuel, the engine will be run- To ensure that it continues to run -in. at peak performance and to minimize harmful exhaust emissions after the run- peri-in od, ask your servicing dealer to adjust your carburetor. **WARNING:** The complete clutch, clutch cover, and shaft must be fitted before the machine is started, otherwise parts could come loose and cause personal injury. Function **WARNING:** If the idle speed cannot be adjusted so that the cutting attachment stops, contact your servicing dealer. Do not use the machine until it has been correctly adjusted or repaired.

Unit/Maintenance Safety Disconnect the spark plug before performing maintenance, except carburetor adjustments. Muffler S The carburetor governs the engine's speed via the throttle control. Air and fuel are mixed in the carburetor. S The T-screw regulates the throttle setting at idle speed. If the T-screw is turned clockwise this gives a higher idle speed; turning it counterclockwise gives a lower idle speed. Basic setting The muffler is designed to reduce the noise level and to direct the exhaust gases away from the operator. The exhaust gases are hot and can contain sparks, which may cause fire if directed against dry and combustible material. S The basic carburetor settings are adjusted during testing at the factory. Fine adjustment should be carried out by a skilled technician. **CAUTION!** If the cutting attachment rotates when the engine is idling the idle adjustment screw T should be turned counterclockwise until the cutting attachment stops.

Rec. idle speed: See "Technical data" section. Recommended max. speed: See "Technical data" section. Fine adjustment of the idle speed-T Mufflers are equipped with a special spark arrestor mesh. You should clean the mesh at least once a month. This is best done with a wire brush. If the mesh is damaged it should be replaced. A blocked mesh will cause the machine to overheat and result in damage to the cylinder and piston. Muffler bolts Spark arrestor mesh Adjust the idle speed using the idle adjustment screw- if it is necessary to readjust.

-T First, turn the idle adjustment screw-T clockwise until the cutting attachment starts to rotate. Then, turn the screw counterclockwise until the cutting attachment stops. The idle speed is correctly adjusted when the engine will run smoothly in every position. The idle speed should also be well below the speed at which the cutting attachment starts to rotate. 20 **CAUTION!** Never use a machine that has a faulty or loose muffler.

Ensure the muffler bolts are tight. **MAINTENANCE WARNING:** Mufflers get very hot during use and remain so for some time after stopping. This also applies at idle speed. Contact can result in burns to the skin. Remember the risk of fire! The inside of the muffler contain chemicals that may be carcinogenic.

Avoid contact with these elements in the event of a damaged muffler. Air filter **WARNING:** **WARNING:** Bear in mind that: Engine exhaust fumes contain carbon monoxide, which can cause carbon monoxide poisoning. For this reason you should not start or run the machine indoors, or anywhere that is poorly ventilated. The exhaust fumes from the engine are hot and may contain sparks which can start a fire. Never start the machine indoors or near combustible material! Spark plug The air filter must be regularly cleaned to remove dust and dirt in order to avoid: S Carburetor malfunctions S Starting problems S Loss of engine power S Unnecessary wear to engine parts S Excessive fuel consumption Clean the filter every 25 hours, or more regularly if conditions are exceptionally dusty. Cleaning the air filter The spark plug condition is influenced by: S Incorrect carburetor adjustment. S An incorrect fuel mixture (too much or incorrect type of oil). S A dirty air filter. @@@@ @@@@ @0,6 mm Remove the air filter cover and take out the filter. Wash it clean in warm, soapy water.

Rinse thoroughly. Ensure that the filter is dry before refitting it. An air filter that has been in use for a long time cannot be cleaned completely. The filter must therefore be replaced with a new one at regular intervals. A damaged air filter must always be replaced. Bevel gear The bevel gear is filled with the right quantity of grease at the factory. However, before using the machine you should check that the bevel gear is filled three-quarters full with grease. Use HUSQVARNA special grease. **CAUTION!** Always use the recommended spark plug type! @@ This continues to rotate even after the throttle has been released. @@@@ S Sharpen blades and cutters using a single-cut flat file.

@@ Never attempt to straighten a twisted blade so that it can be reused. Only use original blades of the specified type. 22 **MAINTENANCE** Maintenance schedule The following is a list of the maintenance that must be performed on the machine. Most of the items are described in the Maintenance section. The user must only carry out the maintenance and service work described in this Operator's Manual.

More extensive work must be carried out by an authorised service workshop. Maintenance Clean the outside of the machine. Make sure the throttle trigger lock and the throttle function correctly from a safety point of view. Check that the stop switch works correctly. Check that the cutting attachment does not rotate at idle.

Clean the air filter. Replace if necessary. Check that the guard is undamaged and not cracked. Replace the guard if it has been exposed to impact or is cracked. Check that the trimmer head is undamaged and not cracked. Replace the trimmer head if necessary. Check that the locking nut of the cutting equipment is tightened correctly. Check that nuts and screws are tight. Check that there are no fuel leaks from the engine, tank or fuel lines.



[You're reading an excerpt. Click here to read official HUSQVARNA 125R user guide](http://yourpdfguides.com/dref/2811326)

<http://yourpdfguides.com/dref/2811326>

Check the starter and starter cord.

Clean the outside of the spark plug. Remove it and check the electrode gap. Adjust the gap to 0,6 mm or replace the spark plug. Check that the spark plug is fitted with a suppressor. Clean the outside of the carburetor and the space around it. Check that the bevel gear is filled threequarters full with lubricant. Fill if necessary using special grease. Check the fuel filter from contamination and the fuel hose from cracks or other defects. Replace if necessary. Check all cables and connections.

Check the clutch, clutch springs and the clutch drum for wear. Replace if necessary by an authorized service workshop. Replace the spark plug. Check that the spark plug is fitted with a suppressor. Clean or replace the spark arrestor mesh on the muffler.

Daily Maintenance X X X X X X X X X X Weekly Maintenance Monthly Maintenance X X X X X X X X 23 TECHNICAL DATA Technical data Engine Cylinder displacement, cm³ Cylinder bore, mm Stroke, mm Idle speed, rpm Recommended max. fast idle speed, rpm Speed of output shaft, rpm Max. engine output, acc. to ISO 8893, kW Catalytic converter muffler Speed-regulated ignition system Ignition system Manufacturer/type of ignition system Spark plug

Electrode gap, mm Fuel and lubrication system Manufacturer/type of carburetor Zama Fuel tank capacity, litre Weight Weight without fuel, cutting attachment and guard, kg Noise emissions (see note 1) Sound power level, measured dB(A) Sound power level, guaranteed LWA dB(A) Noise levels (see note

2) Equivalent noise pressure level at the operators' ear, measured according to EN/ISO 11806 and ISO 7917, dB(A) Vibration levels Vibration levels at handles, measured according to EN/ISO 11806 and ISO 7916 FRONT HANDLE Idling, m/s² Racing, m/s² REAR HANDLE Idling, m/s² Racing, m/s² 125R 28 35 28.7 2800-3200 11000 8000 0,8 No Yes Walbro/CD Champion RCJ-6Y 0,6 Zama 0,4 4,8 109 114 100 3,9 5,6 2,9 8,5 Note 1: Noise emissions in the environment measured as sound power (LWA) in conformity with EC directive 2000/14/EC.

Note 2: Equivalent sound pressure level is calculated as the time-weighted energy total for sound pressure levels under various working conditions with the following time distribution: 1/2 idling and 1/2 max speed. NOTE! The noise pressure level at operator's ear and vibrations on the handles are measured with all the approved cutting attachments for the machine. The table indicates the lowest and highest values. Model 125R (M10 LH arbor shaft thread) - Centre hole in blades/cutters, 25,4 mm Approved accessories Grass blade/grass cutter Trimmer head Plastic blades Support cup Type Grass 255- 1 inch -4 (250 4-teeth) T25 Tricut 300 mm Fixed Cutting attachment guard, part. no. 503 93 42-02 537 33 83-02 531 00 38-11 - 24 DECLARATION OF CONFORMITY relating to 2000/14/EC EC Declaration of Conformity relating to 2000/14/EC We, Electrolux Home Products, Inc., Texarkana, TX, 75501, USA, Tél. : +1 903 223 4100, declare under sole responsibility that the Husqvarna model 125R brushcutter was assessed in accordance with Annex V of the DIRECTIVE and from serial numbers 2006-011N00001 and onwards, conforms to the provisions of the DIRECTIVE. The cutting width is 431 mm. The measured sound power is 109 dB and the guaranteed sound power is 114 dB.

Texarkana 06- -11 -01- Michael S. Bounds, Director Product Safety and Standards DECLARATION OF CONFORMITY relating to 98/37/EC EC Declaration of Conformity (Directive 98/37/EC, Annex II, A) (Only applies to Europe) We, Electrolux Home Products, Inc., Texarkana, TX, 75501, USA, Tél. : +1 903 223 4100, declare under sole responsibility that the Husqvarna model 125R brushcutter from serial numbers 2006-011N00001 and onwards, follows the provisions of the DIRECTIVES: 98/37/EC (machinery) and 89/336/EEC (electromagnetic compatibility), including amendments and is in conformity with the following standards: EN 12100- 2, EN ISO 11806:1997 and CISPR 12. SMP, The Swedish Machinery Testing Institute, Fyrisborgsgatan 3 S-754 50 Uppsala, Sweden, has carried out voluntary type approval. The certificate(s) are numbered: SEC/06/1099. Texarkana 06- -11 -01 Michael S. Bounds, Director Product Safety and Standards 25 Trimmer Head Line Loading Instructions 1 2 3 6m 20i 3m 10i 4 5 6 7 8 9 26 Plastic Blades (Tri Cut) 1 2 3 4 5 6 7 8 27 .



[You're reading an excerpt. Click here to read official HUSQVARNA 125R user guide](http://yourpdfguides.com/dref/2811326)
<http://yourpdfguides.com/dref/2811326>