



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HUSQVARNA CT130. You'll find the answers to all your questions on the HUSQVARNA CT130 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HUSQVARNA CT130
User guide HUSQVARNA CT130
Operating instructions HUSQVARNA CT130
Instructions for use HUSQVARNA CT130
Instruction manual HUSQVARNA CT130



CT130



Instruction manual

Please read these instructions carefully and make sure you understand them before using this machine.

Anleitungshandbuch

Bitte lesen Sie diese Anleitungen sorgfältig durch und vergewissern Sie sich, dass Sie diese verstehen, bevor Sie die Maschine in Betrieb nehmen.

Manuel d'instructions

Meris de lire très attentivement le manuel d'instructions. Assurez-vous d'avoir tout compris avant d'utiliser ce tracteur.

Manual de las instrucciones

Por favor lea cuidadosamente y comprenda estas instrucciones antes de usar esta máquina.

Manuale di istruzioni

Prima di utilizzare la macchina leggere queste istruzioni con attenzione ed accertarsi di averle comprese bene.

Instructieboekje

Lees deze instructies aandachtig en zorg dat u ze begrijpt voordat u deze machine gebruikt.



[You're reading an excerpt. Click here to read official HUSQVARNA CT130 user guide](http://yourpdfguides.com/dref/3467062)

<http://yourpdfguides.com/dref/3467062>

Manual abstract:

We reserve the right to make changes without prior notice. Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with the instructions to use the lawnmower. Local regulations may restrict the age of the operator. Never mow while people, especially children, or pets are nearby. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property. Such instruction should emphasize: - the need for care and concentration when working with ride-on machines; - control of a ride-on machine sliding on a slope will not be regained by the application of the brake. The main reasons for loss of control are: a) insufficient wheel grip; b) being driven too fast; c) inadequate braking; d) the type of machine is unsuitable for its task; e) lack of awareness of the effect of ground conditions, especially slopes; f) incorrect hitching and load distribution. While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.

Thoroughly inspect the area where the equipment is to be used and remove all objects which may be thrown by the machine. - Refuel outdoors only and do not smoke while refueling. - Add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot. - If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated.

Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. replace worn or damaged blades and bolts in sets to preserve balance. @@@@Mow only in daylight or in good artificial light. @@Do not use on slopes of more than 10°. Remember there is no such thing as a "safe" slope.

travel on grass slopes requires particular care. @@Use care when pulling loads or using heavy equipment. Use care when reversing. - Use counterweight(s) or wheel weights when suggested in the instruction handbook. Watch out for traffic when crossing or near roadways. Stop the blades from rotating before crossing surfaces other than grass. When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation. Never operate the lawnmower with defective guards, shields or without safety protective devices in place. Do not change the engine governor settings or overspeed the engine. Operating the engine at excessive speed may increase the hazard of personal injury.

Before leaving the operator's position: - disengage the power take-off and lower the attachments; - change into neutral and set the parking brake; - stop the engine and remove the key. Disengage drive to attachments, stop the engine, and disconnect the spark plug wire(s) or remove the ignition key - before cleaning blockages or unclogging chute; - before checking, cleaning or working on the lawnmower; - after striking a foreign object. Inspect the lawnmower for damage and make repairs before restarting and operating the equipment; - if the machine starts to vibrate abnormally (check immediately). Disengage drive to attachments when transporting or not in use. Stop the engine and disengage drive to attachment - before refueling; - before removing the grass catcher; - before making height adjustment unless adjustment can be made from the operator's position. Reduce the throttle setting during engine run-out and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing. Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Never store the equipment with petrol in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure. To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease.

If the fuel tank has to be drained, this should be done outdoors. @@When machine is to be parked, stored or left unattended, lower the cutting means unless a positive mechanical lock is used. CAUTION: Always disconnect spark plug wire and place wire where it cannot contact spark plug in order to prevent accidental starting when setting up, transporting, adjusting or making repairs. These symbols may appear on your machine or in the literature supplied with the product. Learn and understand their meaning.

These symbols may appear on your machine or in the literature supplied with the product. Learn and understand their meaning. Before the tractor can be used certain parts must be assembled, which for transportation reasons are enclosed in the packing. The picture shows which parts must be assembled. Make sure that the guide tabs in the cover fit the cover in respective holes.

Remove steering wheel adapter from steering wheel and slide adapter onto steering shaft. Check that the front wheels are aligned forward and place the wheel on the hub. Remove the hardware securing seat to the cardboard packing and set the hardware aside for assembly of seat to tractor. Pivot seat upward and remove from cardboard packing. remove the cardboard packing and discard. Place seat on seat pan so head of shoulder bolt is positioned over large slotted hole in pan (1). Push down on seat to engage shoulder bolt in slot and pull seat towards rear of tractor. the seat is adjustable for individual setting in relation to the clutch and brake pedal. Set the seat to the correct position by moving it forwards or backwards. Check that the flex is correctly connected to the safety switch (3) on the seat holder.

NOTE: If battery is put into service after month and year indicated on label, charge battery for minimum of one hour at 6-10 amps. WARNING: Before installing battery remove metal bracelets, wrist watch bands, rings, etc. from your person. Touching these items to battery could result in burns. WARNING: Positive terminal must be connected first to prevent sparks from accidental grounding. remove terminal caps and discard. Connect the red cable to + and then the black earth cable to -. Unhook the two (2) straps and pull chute out and away from tractor. @@ tighten securely. @@@@Secure the chute with the two hook straps.

NOTE: The strap hook must go through the discharge chute only. Do not allow the hook to enter the slot in the tractor back plate. @@@@@@Slide front and lower bagger tube assembly into the bagger assembly. @@@@@@If necessary, repeat the procedure until proper fit is attained. @@@@ Adjust gauge wheels with tractor on a flat level surface.

@@@Full speed lies between these two positions. @@The gear box has positions forward, neutral and reverse. @@Stop the machine before changing from reverse to forward gear, or the opposite. Gear changing between the forward gears must not take place when the machine is in motion.



[You're reading an excerpt. Click here to read official HUSQVARNA CT130 user guide](http://yourpdfguides.com/dref/3467062)
<http://yourpdfguides.com/dref/3467062>

Move the lever forward to connect the drive to the cutting unit, whereby the drive belt is tensioned and the blades begin to rotate.

If the lever is moved backwards the drive will be disconnected and the rotation of the blades slowed down by the action of the brake shoes on the pulley. Quick lifting/lowering of the cutting unit Pull the lever backwards to quickly lift the cutting unit when passing over irregularities in the lawn, etc. During transportation the cutting unit shall be in the highest position. Pull the lever back until it locks. to lower the unit: Pull the lever backwards (1). Push in the button (2) and then move the lever forward (3). There are three different positions for the ignition key: OFF All electric current broken. Never leave the key in the ignition lock when leaving the machine on its own. Press down the brake pedal to bottom position. 2.

Move the parking brake lever upwards and hold in this position. To release the parking brake all that is necessary is to push down the brake pedal. The cutting height is increased when it is turned clockwise. The wheel is easier to turn if the lever for lifting/lowering of the cutting unit is pulled backwards at the same time. The engine should be run of pure (not oil mixed) unleaded petrol. Do not fill beyond the lower edge of the filling hole. Proceed with care and fill up with petrol outdoors. Do not smoke when filling with petrol or fill up when the engine is warm. Do not overfill the tank since the petrol can expand and overflow. Make sure that the petrol cap is securely tightened after filling.

The combined oil refilling cap and the oil stick is accessible when the bonnet is lifted forwards. The oil level in the engine should be checked before each run. Replace the oil stick and screw tight. The oil level should lie between the two markings on the oil stick. If more oil is needed add SAE 30 oil to the "FULL" marking.

SAE 5W-30 oil should be used during the winter (below freezing point). The pressure in the front tires should be 1 bar (14 PSI) and 0. Make sure that the cutting unit is in the transport position (top position) and that the lever for connection/disconnection of the cutting unit is in the disconnection position. Press down the clutch/brake pedal completely and pening can be carried out with a file or grinding disc. nOTE! It is very important that both blades are sharpened equally to avoid imbalance.

IMPORTANT: The blades on your mower are not the same and must be installed on the correct side. It is suggested that you work on one blade at a time to ensure proper assembly of components. The center of this blade has a five (5) star pattern. The bolt that attaches this blade has normal Right Hand threads that loosens by turning (u) counter-clockwise and tightens by turning (z) clockwise. The center of this blade has a 6 star pattern. The bolt attaching this blade has Left Hand threads that loosens by turning (z) clockwise and tighten by turning (u) counterclockwise. For best results mower blades must be kept sharp. Raise mower to highest position to allow access to blades. Install new or resharpened blade with trailing edge up towards deck as shown. **IMPORTANT:** To ensure proper assembly, center hole in blade must align with star on mandrel assembly.

Reassemble hex bolt, lock washer and flat washer in exact order as shown. The brakes are located inside the right rear wheel. Adjust the distance if necessary by first loosening the lock nut (2) and then adjusting with the nut (1). Do not forget to tighten the lock nut after completing adjustment. Take off the belt from the engine pulley (1). 2. Remove the two rear retainer springs (2) and knock off the axle taps with a hammer. Pull the lever for lifting/lowering the cutting unit backwards. 5. Pull out the cutting unit from the machine.

Push in the cutting unit under the machine. Work off the belt from the unit's left pulley and then from the other wheels. 3. Pull the belt away from the cutting unit. Check that the air pressure is correct in all four tires.

make sure that the machine is on a horizontal surface. Lift up the cutting unit to its highest position. measure the distances A and B. To achieve best cutting results the cutting unit's front edge (B) should be about 10 mm (0. 375") lower than the back edge (A).

Adjust in the following way to raise the back edge: 1. Loosen the nut (1) on both the left and right levers. 2. Screw the nut (2) the same number of turns on both levers. 3. When the correct distance (A) is obtained this setting is locked with the nut (1). At the midpoint of both sides of mower, measure height from bottom edge of mower to ground. Distance "A" should be the same or within 6mm (1/4") of each other. If adjustment is necessary, make adjustment on one side of mower only. @@@@ 4.

Work off the belt upwards from the pulley at the rear axle (4). 5. Take off the belt from the engine pulley (5). Use original belts only when replacing! @@@@Engine will not start Start motor will not turn engine Poor contact between cable and battery pole. Connection/disconnection level in wrong position. Too little or no oil in engine. Poor contact between battery poles and cables. Unbalance in one or both blades resulting from damage or poor balancing after sharpening. Different air pressures in tires on left and right side. The following steps should be taken when mowing season is over: · Clean the entire machine, especially underneath the cutting unit cover.

Touch up all chipped paint surfaces in order to avoid corrosion. Start the engine and allow it to run until it is out of fuel. Remove the spark plug and pour one table spoon of engine oil into the cylinder. Pull the engine over in order to distribute the oil. Protect the battery from low temperatures.

The machine should be stored indoors in a dry, dust-free place. Never use gasoline when cleaning. When ordering, we need the following information: Date of purchase, model, type and serial number of the mower. Always use original spare parts. .



[You're reading an excerpt. Click here to read official HUSQVARNA](http://yourpdfguides.com/dref/3467062)

[CT130 user guide](http://yourpdfguides.com/dref/3467062)

<http://yourpdfguides.com/dref/3467062>