



 
Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HUSQVARNA LT120. You'll find the answers to all your questions on the HUSQVARNA LT120 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HUSQVARNA LT120
User guide HUSQVARNA LT120
Operating instructions HUSQVARNA LT120
Instructions for use HUSQVARNA LT120
Instruction manual HUSQVARNA LT120



LT120/LT130

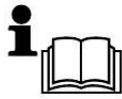

Instruction manual
Please read these instructions carefully and make sure you understand them before using this machine.

Anleitungshandbuch
Bitte lesen Sie diese Anleitungen sorgfältig durch und vergewissern Sie sich, daß Sie diese verstehen, bevor Sie die Maschine in Betrieb nehmen.

Manuel d'instructions
Merci de lire très attentivement le manuel d'instructions. Assurez-vous d'avoir tout compris avant d'utiliser ce tracteur.

Manual de las instrucciones
Por favor lea cuidadosamente y comprenda estas instrucciones antes de usar esta máquina.

Manuale di istruzioni
Prima di utilizzare la macchina leggete queste istruzioni con attenzione ed accertatevi di averle comprese bene.

Instructieboekje
Lees deze instructies aandachtig en zorg dat u ze begrijpt voordat u deze machine gebruikt.



[You're reading an excerpt. Click here to read official HUSQVARNA LT120 user guide](http://yourpdfguides.com/dref/3469315)

<http://yourpdfguides.com/dref/3469315>

Manual abstract:

Safety instructions Sicherheitsvorschriften Consignes de sécurité Veiligheidsvoorschriften Instrucciones de seguridad Norme di sicurezza Assembly instructions Montageanleitung Instructions de montage Montage-aanwijzingen Instrucciones de montaje Istruzioni per il montaggio Controls Bedienungsselemente Réglages Bedienungsorganen Mandos Comandi Start and operation Start und Betrieb Mise en marche et conduite Starten en rijden Arranque y manejo Messa in moto e guida Adjustment and maintenance Einstellugen und Wartung Réglage et entretien Afstellen en onderhoud Ajustes y mantenimiento Messa a punto e manutenzione Trouble shooting Fehlersuche Recherche des pannes Schema voor het zoeken van fouten Búsqueda de averías Ricerca guasti Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with the instructions to use the lawnmower. Local regulations may restrict the age of the operator. Never mow while people, especially children, or pets are nearby. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property. Such instruction should emphasize: - the need for care and concentration when working with ride-on machines; - control of a ride-on machine sliding on a slope will not be regained by the application of the brake. @@ While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals. @@ - Refuel outdoors only and do not smoke while refueling. - Add fuel before starting the engine.

Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot. - If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated. Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. @@@@ Mow only in daylight or in good artificial light. @@ Do not use on slopes of more than 14°.

Remember there is no such thing as a "safe" slope. travel on grass slopes requires particular care. To guard against overturning; - do not stop or start suddenly when going up or downhill; - engage clutch slowly, always keep machine in gear, especially when traveling downhill; - machine speeds should be kept low on slopes and during tight turns; - stay alert for humps and hollows and other hidden hazards; - never mow across the face of the slope, unless the lawnmower is designed for this purpose. Use care when pulling loads or using heavy equipment. Use care when reversing.

Watch out for traffic when crossing or near roadways. Stop the blades from rotating before crossing surfaces other than grass. When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation. Never operate the lawnmower with defective guards, shields or without safety protective devices in place. Do not change the engine governor settings or overspeed the engine. Operating the engine at excessive speed may increase the hazard of personal injury. Before leaving the operator's position: - disengage the power take-off and lower the attachments; - change into neutral and set the parking brake; - stop the engine and remove the key. @@@@ Disengage drive to attachments when transporting or not in use. @@@@ Allow the engine to cool before storing in any enclosure. To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease.

If the fuel tank has to be drained, this should be done outdoors. @@ When machine is to be parked, stored or left unattended, lower the cutting means unless a positive mechanical lock is used. CAUTION: Always disconnect spark plug wire and place wire where it cannot contact spark plug in order to prevent accidental starting when setting up, transporting, adjusting or making repairs. These symbols may appear on your tractor or in the literature supplied with the product. Learn and understand their meaning. These symbols may appear on your tractor or in the literature supplied with the product. Learn and understand their meaning. Remove box of parts Bag of parts (contents not shown full size) - Remove the hardware securing seat to the cardboard packing and set the hardware aside for assembly of seat to tractor. Pivot seat upward and remove from cardboard packing. Fit the seat to the seat pan as shown in the diagram.

Adjust the seat to give you a comfortable working position. @@@@ from your person. Touching these items to battery could result in burns. @@Close battery box door. @@@@Do not attempt to start tractor at this time.

Key switch: Is used to start engine. This control will increase or decrease the speed of the engine. @@NOTE: There will be an engine hesitation when the clutch engages. Mower lift lever: Use to raise or lower mower deck. @@@@@@@These fuels can cause internal damage to your tractor.

Starting the engine Turn ignition key to "start". Release key as soon as engine starts. @@Move the throttle lever half way between start and fast. @@@@@@@Failure to do so can result in gear box damage. @@ Drive tractor so that the grass is discharged onto side that has already been cut. NOTE: Wet grass may plug mower and leave a trail of grass clumps. Slow down when making turns. Quick tight turns will scalp the grass. Cutting tall grass may require several passes. Use a high cutting height when you first mow.

Operating your tractor on a hill WARNING: Never drive up or down hills with slopes greater than 14 degrees and do not drive across any slope. WARNING: Disconnect spark plug wire to prevent accidental starting before attempting any repair, inspection, or maintenance. Raise mower lift lever into highest (transport) position. Measure distance from top of mower deck to lower flange of chassis (dim. @@@@Level the mower side-to-side by adjusting the left rear lift link. @@@@@@@Level mower front to rear For best cutting results, the rear of the mower should be 1/4 to 3/8 inch higher than the front of the mower. Measure distance from ground line to lower flange of deck at right front and right rear (dim. Raise or lower rear of mower housing by adjusting right rear lift link. To raise rear of mower housing, loosen upper trunnion nut and tighten lower trunnion nut. To lower rear of mower housing, loosen lower trunnion nut and tighten upper trunnion nut.

NOTE: Periodic maintenance should be performed on a regular basis in order to keep your tractor in good running condition. WARNING: Disconnect spark plug wire to prevent accidental starting before attempting any repair, inspection, or maintenance. @@@@@@@Road test tractor to check if proper stopping distance was achieved. * Gear shift pivot * SAE 30 motor oil ** General purpose grease *** Refer to engine manual for engine oil specifications See B & S manual Turn front wheels fully to left or right.



[You're reading an excerpt. Click here to read official HUSQVARNA LT120 user guide](http://yourpdfguides.com/dref/3469315)
<http://yourpdfguides.com/dref/3469315>

*Thread belt below mower drive sheave and through engine belt keeper and engine pulley.
remove belt. Install new belt by reversing above procedure. reconnect mower drive belt at engine pulley. Make sure that belt is inside all belt keepers. Fill
tank with gasoline.*

*Push clutch/brake pedal into brake position Charge or replace battery Recharge or replace battery Move mower clutch lever to "disengaged" position
Replace ignition switch Replace interlock switch(es) Replace solenoid or starter Check for fault and replace fuse Check all wire connections and "ground"
points Engine clicks but won't start Place throttle control in "fast" position and run starter several times to clear out gas · Engine misses or lacks power Shift
to a lower gear or reduce load Drain gas tank and carburetor. Use fresh fuel Remove and clean air cleaner Make necessary carburetor adjustments Clean air
screen Add or change oil Replace spark plug(s) and adjust gap Replace fuel filter Major engine overhaul Shift to lower gear or reduce load Clean air screen
Add or change oil Clean engine cooling fins Remove and clean muffler or replace Remove and clean air filter Use fresh fuel and adjust carburetor Drain and
replace oil for proper temperature Engine will not shut down when operator leaves seat Any attempt by the operator to leave the seat with the engine running
and the mower .*



[You're reading an excerpt. Click here to read official HUSQVARNA](http://yourpdfguides.com/dref/3469315)

[LT120 user guide](http://yourpdfguides.com/dref/3469315)

<http://yourpdfguides.com/dref/3469315>