




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HUSQVARNA ROYAL 49 S/BBC. You'll find the answers to all your questions on the HUSQVARNA ROYAL 49 S/BBC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HUSQVARNA ROYAL 49 S/BBC
User guide HUSQVARNA ROYAL 49 S/BBC
Operating instructions HUSQVARNA ROYAL 49 S/BBC
Instructions for use HUSQVARNA ROYAL 49 S/BBC
Instruction manual HUSQVARNA ROYAL 49 S/BBC

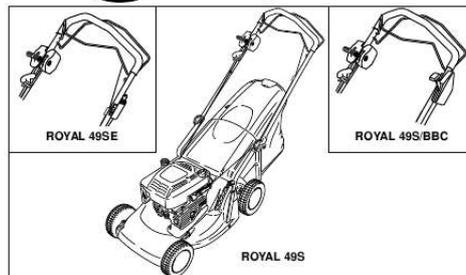

ROYAL 49S
ROYAL 49SE
ROYAL 49S/BBC



- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| GB Operator's Manual
Read the operator's manual carefully and make sure that you understand the contents before using the lawnmower. | SF Käyttöopas
Lue käyttöopas huolellia ja varmista, että ymmärrät sen sisällön ennen kuin käytät tätä leikkokoneita. |
| D Betriebsanleitung
Diese Betriebsanleitung muss sorgfältig durchgelesen werden. Stellen Sie sicher, daß Sie deren Inhalt vor Verwendung des Rasenmähers verstehen. | S Bruksanvisning
Läs bruksanvisningen noggramt och se till att du förstår innehållet innan du använder gräsklipparen. |
| F Manuel de l'utilisateur
Lire attentivement le manuel de l'utilisateur et veiller à bien comprendre son contenu avant d'utiliser la tondeuse. | DK Brugsvejledning
Læs brugsvejledningen grundigt, og sørg for at forstå indholdet, inden De tager græsklipperen i brug. |
| NL Handleiding voor de gebruiker
Lees de handleiding aandachtig door zodat u de inhoud goed begrijpt voordat u de grasmaaimachine in gebruik neemt. | E Manual del operador
Lea el manual del operador con atención y asegúrese de que comprende el contenido antes de utilizar el cortacésped. |
| N Bruksanvisning
Läs bruksanvisningen grundigt og vänta på att du förstår innehållet för du brukar gräsklipparen. | P Manual do Operador
Leia cuidadosamente o manual do operador e certifique-se de que compreende todo o seu conteúdo antes de usar a máquina de cortar relva. |
| | I Manuale d'uso
Leggere con attenzione il manuale d'uso e accertarsi di capirne il contenuto prima di usare il tosaerba. |

5118973-01



[You're reading an excerpt. Click here to read official HUSQVARNA ROYAL 49 S/BBC user guide](http://yourpdfguides.com/dref/3344124)

<http://yourpdfguides.com/dref/3344124>

Manual abstract:

Read operating instructions carefully before using the mower. Fill the engine with oil. The manufacturer reserves the right to carry out product modifications without further notice. Guarantee, complaint Guarantee and complaint matters are dealt with in accordance with the Sale of Goods Act. Further information may be obtained from your dealer or the supplier. If not used properly this lawnmower can be dangerous! This lawnmower can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this lawnmower. The operator is responsible for following the warning and safety instructions in this manual and on the lawnmower. Never use the mower unless the grassbox or guards provided by the manufacturer are in position. explanation of Symbols on your Husqvarna Royal 49S , 49SE & 49SBBC Fuel Safety WARNING - Petrol is highly flammable Store fuel in a cool place in a container specifically designed for the purpose. In general plastic containers are unsuitable refuel outdoors only and do not smoke while refuelling add fuel BEFORE starting the engine.

Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot if petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapours have dissipated replace all fuel tanks and container caps securely move the product away from the fuelling area before starting Safety Procedures when Charging the Battery (ROYAL 49SE) 1. Do not use the lawnmower if the charging cable is not in good condition. 3. @@ 4. Do not attempt to use this battery with any other charger.

5. @@ This is normal and means the charger is operating properly. 8. Do not cover the battery charger with anything during charging. 9.

@@ The charger will not operate below freezing point nor above 40oC. @@ Always keep the lawnmower on the ground when mowing. Tilting or lifting the lawnmower may cause stones to be thrown out Keep bystanders away. Do not mow whilst people especially children or pets are in the mowing area Beware or severing toes or hands. Do not put hands or feet near a rotating blade. @@ Blade continues to rotate after the machine is switched off. @@ Never allow children or people unfamiliar with these instructions to use the mower. Local regulations may restrict the age of the operator. 2. Only use the lawnmower in the manner and for the functions described in these instructions.

3. Never operate the lawnmower when you are tired, ill or under the influence of alcohol, drugs or medicine. 4. The operator or user is responsible for accidents or hazards occurring to other people or their property. The use of ear protection is recommended. 3. Make sure the lawn is clear of sticks, stones, bones, wire and debris; they could be thrown by the blade. 4. Before using always visually inspect to see that blades, blade bolts and cutter assembly are not worn or damaged. Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect.

2. Use the lawnmower only in daylight or good artificial light. 3. Avoid operating your lawnmower in wet grass, where feasible. 4.

Take care in wet grass, you may lose your footing. 5. @@ 6. Mow across the face of slopes, never up and down. Do not walk backwards when mowing, you could trip.

Never cut grass by pulling the mower towards you. 11. @@ 12. @@ 13. Do not overspeed the engine or alter governor settings. Excessive speed is dangerous and shortens lawnmower life. @@ 16. Do not tilt lawnmower when starting the engine 17. @@ 18. Never pick up or carry a lawnmower while the engine is running 19.

Spark plug wire may be hot - handle with care. 20. @@ 21. @@ Stop the engine, wait until the blade has stopped and disconnect the spark plug lead: before clearing a blockage; before checking, cleaning or working on the appliance; if you hit an object. Do not use your lawnmower until you are sure that the entire lawnmower is in a safe operating condition. Reduce the throttle setting during engine shut down and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing, maintenance and storage 1. Keep all nuts, bolts and screws tight to be sure the lawnmower is in safe working condition.

Only use the replacement blade, blade bolt, spacer and impeller specified for this product. 5.

Never store the lawnmower with fuel in the tank inside a building where fumes can reach an open flame or spark. 6. Allow the engine to cool before storing in any enclosure. 7. @@ 8.

If the fuel tank has to be drained, this should be done outdoors. 9. @@@@ @@@@ Locate cord in the pull cord guide on the lower handle. @@@@ Locate safety flap onto the top of the grassbox. @@@@ 2.

@@ 3. Use a good quality SAE 30 four stroke oil. 4. To fill with oil: F1 a) Remove oil filler cap. @@ 6. @@ petrol 1. Use fresh regular grade lead free petrol. 2. Do not fill the fuel tank when the engine is hot. 3.

Do not fill the fuel tank while smoking. 4. Do not fill the fuel tank while the engine is running. g1 5. @@ (G1) 6. @@ (G2) 7. Wipe away spillages before starting. @@ Priming is usually unnecessary when restarting a warm engine. However, cool weather may require priming to be repeated. Starting the engine for the first time 1.

@@@@ @@@@ Follow instructions in the Use - starting and stopping section. @@ Move the Engine Speed Control to the FAST '+' position before starting. (J1) 3. Pull the operator presence control (OPC) to release the brake on the engine and the J2 blade. (J2) 4.

Pull the recoil starter fully towards you until you feel the full resistance, return the handle slowly then pull the handle firmly towards you to its full extent. (J3) 5. After the engine has J3 started, allow to run for 30 seconds before commencing to use. engaging the Drive 1. Forward drive is engaged and disengaged with the Powerdrive lever at the top of the handle (J4).

2. Drive speed can be altered with the drive speed control. (J5) 3. Releasing the Powerdrive Lever stops the forward drive automatically. Turn the key and hold until the engine starts (K1). The key will return to the original position when released. 3. If the engine fails to start when you turn the key your battery may need charging. @@@@ 4. @@@@ Always use the correct mowing position (M1).

2. @@ 3. @@ Release collection bag from grassbox frame. @@ cutting Height Adjustment 1. The height of cut is altered by pulling the adjustment lever away from the location slots and moving to the selected position (M3). grass Collection Indicator 1. Your lawnmower has a grass collection indicator which tells you when the grassbox needs emptying. (M4) 2. When the indicator is at the top of the tube, grass is being collected. 3.

When the indicator starts to drop, it's time to empty the grassbox. Adopt a stationary position, keeping the lawnmower running for 10 seconds. Your lawnmower is supplied with a mulching plug. (M9) 2. Stop your lawnmower as described in Use starting and stopping, and disconnect the spark plug.



[You're reading an excerpt. Click here to read official HUSQVARNA ROYAL 49 S/BBC user guide](http://yourpdfguides.com/dref/3344124)
<http://yourpdfguides.com/dref/3344124>

IMPORTANT @@Cleaning IMPORTANT Never use water for cleaning your lawnmower. @@ 1. Remove grass from under the deck with a brush (N1 and N2). Please note If you have a machine fitted with BBC then you must remove both blade bolts with a hexagonal drive key. Always handle the blade with care - sharp edges could cause injury.

@@If the blade is cracked or damaged replace it with a new one. @@@@The unit is now ready for use. ENVIRONMENTAL INFORMATION Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) until the engine has cooled to avoid a potential fire hazard. @@Service Recommendations We strongly recommend that your product is serviced at least every twelve months, more often in a professional application. Certify that a sample of the above product has been tested and found to comply with directives: 89/392/EEC, 89/336/EEC DL5 6UP Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field semi anechoic chamber conditions was :- DL5 6UP Certify that a sample of the above product has been tested using ISO 5349 as a guide. Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries. .



[You're reading an excerpt. Click here to read official HUSQVARNA ROYAL 49 S/BBC user guide](http://yourpdfguides.com/dref/3344124)
<http://yourpdfguides.com/dref/3344124>