




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HUSQVARNA YT150. You'll find the answers to all your questions on the HUSQVARNA YT150 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HUSQVARNA YT150
User guide HUSQVARNA YT150
Operating instructions HUSQVARNA YT150
Instructions for use HUSQVARNA YT150
Instruction manual HUSQVARNA YT150



 YT150



Instruction manual
Please read these instructions carefully and make sure you understand them before using the machine.

Anleitungshandbuch
Bitte lesen Sie diese Anleitungen sorgfältig durch und vergewissern Sie sich, daß Sie diese verstehen, bevor Sie die Maschine in Betrieb nehmen.

Manuel d'instructions
Mettez de lire très attentivement le manuel d'instructions. Assurez-vous d'avoir tout compris avant d'utiliser ce tracteur.

Manual de las instrucciones
Por favor lea cuidadosamente y comprenda estas instrucciones antes de usar esta máquina.

Manuale di istruzioni
Prima di utilizzare la macchina leggete queste istruzioni con attenzione ed accertatevi di averle comprese bene.

Instructieboekje
Lees deze instructies aandachtig en zorg dat u ze begrijpt voordat u deze machine gebruikt.



[You're reading an excerpt. Click here to read official HUSQVARNA YT150 user guide](http://yourpdfguides.com/dref/3343392)

<http://yourpdfguides.com/dref/3343392>

Manual abstract:

We reserve the right to make changes without prior notice. Mow only in daylight or in good artificial light. **INSTRUCTIONS COULD RESULT IN SERIOUS INJURY** - Before attempting to start the engine, disengage all blade OR DEATH. Do not use on slopes of more than 10°. Remember there is no such thing as a "safe" slope. To guard against controls and the proper use of the equipment. overturning; - Never allow children or people unfamiliar with the ins- do not stop or start suddenly when going up or tructions to use the lawnmower. Local regulations may downhill; restrict the age of the operator. - engage clutch slowly, always keep machine in gear; - Never mow while people, especially children, or pets are especially when traveling downhill; nearby. - machine speeds should be kept low on slopes and - Keep in mind that the operator or user is responsible for during tight turns; accidents or hazards occurring to other people or their - stay alert for humps and hollows and other hidden property.

hazards; - All drivers should seek and obtain professional and - never mow across the face of the slope, unless the practical instruction. Such instruction should emphalawnmower is designed for this purpose. size: - Use care when pulling loads or using heavy equipment. - the need for care and concentration when working - Use only approved drawbar hitch points. With ride-on machines; - Limit loads to those you can safely control.

Use care when reversing. - Use counterweight(s) or wheel weights when sugThe main reasons for loss of control are: gested in the instruction handbook. a) insufficient wheel grip; - Watch out for traffic when crossing or near roadways. @@@@Operating the engine at excessive speed may long trousers. Do not operate the equipment when increase the hazard of personal injury.

Thoroughly inspect the area where the equipment is to - disengage the power take-off and lower the attachbe used and remove all objects which may be thrown by ments; the machine. Disconnect the spark plug wire(s) or remove the ignition - Refuel outdoors only and do not smoke while refukey eling. - before cleaning blockages or unclogging chute; - Add fuel before starting the engine. Never remove - before checking, cleaning or working on the the cap of the fuel tank or add petrol while the engine lawnmower; is running or when the engine is hot. - after striking a foreign object. Inspect the lawnmower - If petrol is spilled, do not attempt to start the engine for damage and make repairs before restarting and but move the machine away from the area of spillage operating the equipment; and avoid creating any source of ignition until petrol vapors have dissipated. Disengage drive to attachments when transporting or not - Before using, always visually inspect to see that the - Stop the engine and disengage drive to attachment blades, blade bolts and cutter assembly are not worn or damaged. On multi-bladed machines, take care as rotating one - before making height adjustment unless adjustment blade can cause other blades to rotate. Can be made from the operator's position. Operation the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing.

- Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect. Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Never store the equipment with petrol in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure. To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease. If the fuel tank has to be drained, this should be done outdoors. On multi-bladed machines, take care as rotating one blade can cause other blades to rotate. When machine is to be parked, stored or left unattended, lower the cutting means unless a positive mechanical lock is used. CAUTION: Always disconnect spark plug wire and place wire where it cannot contact spark plug in order to prevent accidental starting when setting up, transporting, adjusting or making repairs. These symbols may appear on your tractor or in the literature supplied with the product.

Learn and understand their meaning. These symbols may appear on your tractor or in the literature supplied with the product. Learn and understand their meaning. Before the tractor can be used certain parts must be assembled, which for transportation reasons are enclosed in the packing. The picture shows which parts must be assembled.

Make sure that the guide tabs in the cover fit the cover in respective holes. Remove steering wheel adapter from steering wheel and slide adapter onto steering shaft . Check that the front wheels are aligned forward and place the wheel on the hub. Place seat on seat pan so head of shoulder bolt is positioned over large slotted hole in pan (1). Push down on seat to engage shoulder bolt in slot and pull seat towards rear of tractor.

@@@Pivot seat upward and remove from cardboard packing. @@@@ from your person. Touching these items to battery could result in burns. @@ remove terminal caps and discard. Connect the red cable to + and then the black earth cable to -. Close battery box door. @@@@@@Quick lifting/lowering of the cutting unit 7. @@Full speed lies between these two positions. @@The gear box has positions forward, neutral and reverse. @@@@@@Pull the lever back until it locks.

to lower the unit: Pull the lever backwards (1). Push in the button (2) and then move the lever forward (3). @@@@Press down the brake pedal to bottom position. 2. Move the parking brake lever upwards and hold in this position. To release the parking brake all that is necessary is to push down the brake pedal. The cutting height is increased when it is turned clockwise. The wheel is easier to turn if the lever for lifting/lowering of the cutting unit is pulled backwards at the same time. The engine should be run of pure (not oil mixed) unleaded petrol. Do not fill beyond the lower edge of the filling hole. Proceed with care and fill up with petrol outdoors. Do not smoke when filling with petrol or fill up when the engine is warm. Do not overfill the tank since the petrol can expand and overflow. Make sure that the petrol cap is securely tightened after filling. The combined oil refilling cap and the oil stick is accessible when the bonnet is lifted forwards.

The oil level in the engine should be checked before each run. Replace the oil stick and screw tight. The oil level should lie between the two markings on the oil stick. If more oil is needed add SAE 30 oil to the "FULL" marking. SAE 5W-30 oil should be used during the winter (below freezing point).

Tire air pressure Check the tire pressure regularly. The pressure in the front tires should be 1 bar (14 PSI) and 0.



[You're reading an excerpt. Click here to read official HUSQVARNA](#)

[YT150 user guide](#)

<http://yourpdfguides.com/dref/3343392>

Make sure that the cutting unit is in the transport position (top position) and that the lever for connection/disconnection of the cutting unit is in the disconnection position. Press down the clutch/brake pedal completely and hold down. Turn the ignition key to "START position". nOTE! Do not run the start motor more than 5 seconds at once. If the engine will not start, wait about 10 seconds before the next try. Let the ignition key return to the "ON" position when the engine has started Push the gas control to the required speed. The machine is equipped with a safety switch which immediately breaks the current to the engine if the driver leaves the seat with engine running and with the connection/disconnection lever in position "connection". Lower the cutting unit by moving the lever forwards.

connect the cutting unit. Choose a driving speed which suits the terrain and required cutting results. Clear the lawn from stones and other objects which can be thrown away by the blades. localize and mark stones and other fixed objects to avoid collision. Begin with a high cutting height and reduce until the required cutting result is obtained. The cutting result is best with high engine speed (blades rotate quickly) and low gear (machine goes slowly). If the grass is too long and thick the drive speed can be increased by selecting a higher gear or reducing the motor speed, without affecting the cutting result. the best lawn is achieved if the grass is cut often. Cutting becomes more even and the cut grass is more evenly distributed over the surface. Total time taken is not greater, since higher drive speed can be selected without affecting the cutting results.

avoid cutting wet grass. The cutting results will be worse since the wheels will sink into the soft lawn. Spray the cutting unit with water underneath after use.

Do not drive in terrain at an angle of more than max. Only change gear when the machine is standing still to avoid damaging the gear box.

Drive in right turns so that the cut grass is thrown away from flower beds and paths, etc. For larger lawns the drive direction should be changed after 2-3 turns so that the cut grass is thrown towards the area that has already been cut as shown in the illustration. Use the left side of the machine to cut close to trees, bushes and paths, etc. The blade cuts about 15 mm inside the edge of the cover. Switching off the engine move the gas control to " ".

Disconnect the cutting unit by moving the connect/discon-nect lever downwards. @@@@Before servicing the engine or cutting unit the following shall be carried one 1. Poor contact between cable and battery pole. 3. Connection/disconnection level in wrong position. Too little or no oil in engine. Poor contact between battery poles and cables. @@Different air pressures in tires on left and right side. The following steps should be taken when mowing season is over: Â· Clean the entire machine, especially underneath the cutting unit cover. â· Touch up all chipped paint surfaces in order to avoid corrosion.

Start the engine and allow it to run until it is out of fuel. â· Remove the spark plug and pour one table spoon of engine oil into the cylinder. Pull the engine over in order to distribute the oil. Protect the battery from low temperatures. â· The machine should be stored indoors in a dry, dust-free place. wARNING! Never use gasoline when cleaning. use degreasing detergent and warm water instead. Service When ordering, we need the following information: Date of purchase, model, type and serial number of the mower. Always use original spare parts. .



[You're reading an excerpt. Click here to read official HUSQVARNA YT150 user guide](http://yourpdfguides.com/dref/3343392)

<http://yourpdfguides.com/dref/3343392>