



 
Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT BAN 34 NF P. You'll find the answers to all your questions on the INDESIT BAN 34 NF P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT BAN 34 NF P
User guide INDESIT BAN 34 NF P
Operating instructions INDESIT BAN 34 NF P
Instructions for use INDESIT BAN 34 NF P
Instruction manual INDESIT BAN 34 NF P

Istruzioni per l'uso

COMBINATO FRIGORIFERO/CONGELATORE



BAN 34 NF P

Sommario

Installazione, 2

Posizionamento e collegamento

Reversibilità apertura porte

Descrizione dell'apparecchio, 3-4

Pannello di controllo

Vista d'insieme

Accessori, 5

Avvio e utilizzo, 6-7

Avviare l'apparecchio

Sistema di raffreddamento

Utilizzare al meglio il frigorifero

Utilizzare al meglio il congelatore

Manutenzione e cura, 8

Escludere la corrente elettrica

Pulire l'apparecchio

Evitare muffe e cattivi odori

Sostituire la lampadina

Precauzioni e consigli, 9

Sicurezza generale

Simultaneo

Risparmiare e rispettare l'ambiente

Anomalie e rimedi, 10

Assistenza, 11

INDESIT



[You're reading an excerpt. Click here to read official INDESIT BAN 34 NF P user guide](http://yourpdfguides.com/dref/1849733)

<http://yourpdfguides.com/dref/1849733>

Manual abstract:

They contain important information for safe use, for installation and for care of the appliance. ! Please keep these operating instructions for future reference. Pass them on to possible new owners of the appliance. The compressor and condenser give off heat and require good ventilation to operate correctly and save energy. 3. Leave a space of at least 10 cm between the top part of the appliance and any furniture above it, and at least 5 cm between the sides and any furniture/side walls. 4. Ensure the appliance is away from any sources of heat (direct sunlight, electric stove, etc. In order to maintain the correct distance between the appliance and the wall behind it, fit the spacers supplied in the installation kit, following the instructions provided. If the floor is not perfectly horizontal, adjust the refrigerator by tightening or loosening the rear feet.

After the appliance has been transported, carefully place it vertically and wait at least 3 hours before connecting it to the electricity mains. Before inserting the plug into the electrical socket ensure the following: · The socket can withstand the maximum power of the appliance, which is indicated on the data plate located on the bottom left side of the fridge (e. The voltage must be in the range between the values indicated on the data plate located on the bottom left side (e. @@@@ ! @@When it is pressed, the SUPER COOL indicator light illuminates (see Start-up and use). SUPER COOL Yellow indicator light (rapid cooling) illuminates when the SUPER COOL button is pressed.

@@@When it is pressed, the SUPER FREEZE indicator light illuminates (see Start-up and use). ! The indicator lights are also used to indicate an unusual temperature increase in the freezer compartment (see Troubleshooting). The instructions contained in this manual are applicable to different model refrigerators. the diagrams may not directly represent the appliance purchased. For more complex features, consult the following pages.

SHELVES: with or without grill. Due to the special guides the shelves are removable and the height is adjustable (see diagram), allowing easy storage of large containers and food. Height can be adjusted without complete removal of the shelf. Check that OK appears clearly on the indicator light (see diagram). MULTI-USE* bin: to store food (such as cold meats) for a long time and also prevent odours from lingering in the refrigerator. FLEX COOL BOX* This is the new box to keep meat, fish and cheese fresh. When positioned in the "lower" part of the fridge compartment, it is ideal for meat and fish; when moved to the "top" part of the fridge, it is perfect for cheese. It can be taken out of the fridge when it is not needed. @@@@ 3. @@@@ @@@@ This is ideal for storing wine bottles.

@@When placing cans (onto the Play zone rack), make sure they do not touch the back of the refrigerator interior. The "Play Zone" can be used just like a normal shelf (when placed flat) and moved up or down along the fridge walls together with the rest of the shelf. It can be washed easily, and is also dishwasher safe. Before starting the appliance, follow the installation instructions (see Installation). ! Before connecting the appliance, clean the compartments and accessories well with lukewarm water and bicarbonate. ! The appliance comes with a motor protection control system which makes the compressor start approximately 8 minutes after being switched on. The compressor also starts each time the power supply is cut off whether voluntarily or involuntarily (blackout). @@ 3. @@@@After a few hours you will be able to put food in the refrigerator. @@@@ Remember that cooked foods do not last longer than raw foods.

@@@@@Close bottles and wrap food tightly. @@ 2. @@ 3. @@ 4. @@ 5.

Remove all food past its expiry date from the refrigerator. 6. @@@@These foods must be cooked and eaten (within 24 hours). @@@@ ! @@@@ The maximum quantity of food that may be frozen daily is indicated on the plate containing the technical properties located on the bottom left side of the refrigerator compartment (for example: Kg/24h: 4). To freeze (if the freezer is already operating): press the rapid freezing SUPER FREEZE button (corresponding yellow indicator light illuminates), insert the food and close the door.

The function is disabled automatically after 24 hours or when optimal temperatures have been reached (indicator light goes out); ! Do not open the door during freezing. ! If there is a power cut or malfunction, do not open the freezer door. This will help maintain the temperature inside the freezer, ensuring that foods are conserved for at least 9 -14 hours. Ice3 ice tray The fact that they are situated on the top part of the freezer drawers ensures greater cleanliness: the ice no longer comes into contact with the food placed inside the freezer compartment; furthermore, the dripping of the water during filling is avoided (a lid to cover up the hole after filling with water is also provided). Check that the tray is completely empty and fill it with water through the opening provided. 2. Take care not to exceed the level indicated (MAX WATER LEVEL). @@ 3. @@ 4. @@ 5.

@@@@ set the FREEZER OPERATION knob on 2. Pull the plug out of the socket ! If this procedure is not followed, the alarm may sound. This alarm does not indicate a malfunction. @@@@The freezer temperature must be set to the minimum value in order to preserve the food. A single acoustic signal informs you when it has been disabled. The external and internal parts, as well as the rubber seals may be cleaned using a sponge that has been soaked in lukewarm water and bicarbonate of soda or neutral soap. The back of the appliance may collect dust which can be removed by delicately using the hose of a vacuum cleaner set on medium power. The appliance must be switched off and the plug must be pulled out before cleaning the appliance. Replacing the light bulb To replace the light bulb in the refrigerator compartment, pull out the plug from the electrical socket. follow the instructions below.

Access the light bulb by removing the cover as indicated in the diagram. @@@@In order to maintain an odour free refrigerator and to prevent the formation of stains, food must always be covered or sealed properly. @@@@Keep packaging material out of the reach of children! The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the productf the external parts of the refrigerator become hot Check if the malfunction can be solved on your own (see Troubleshooting).

If after all the checks, the appliance still does not operate or the problem persists, call the nearest Service Centre model serial number Communicating: · Serial number (S/N) This information can be found on the data plate located on the bottom left side of the refrigerator compartment.



[You're reading an excerpt. Click here to read official INDESIT BAN 34 NF P user guide](http://yourpdfguides.com/dref/1849733)
<http://yourpdfguides.com/dref/1849733>

Never call on unauthorized technicians and always refuse spare parts which are not originals. Pour maintenir une distance optimale entre le produit et la paroi arrière, montez les cales d'espacement comprises dans le kit d'installation et suivez les instructions de la notice spécialement prévue. .



[You're reading an excerpt. Click here to read official INDESIT BAN](#)

[34 NF P user guide](#)

<http://yourpdfguides.com/dref/1849733>