



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT D41. You'll find the answers to all your questions on the INDESIT D41 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT D41
User guide INDESIT D41
Operating instructions INDESIT D41
Instructions for use INDESIT D41
Instruction manual INDESIT D41

Dishwasher

Instruction for installation and use
D 41

 INDESIT



[You're reading an excerpt. Click here to read official INDESIT D41 user guide](http://yourpdfguides.com/dref/3238310)
<http://yourpdfguides.com/dref/3238310>

Manual abstract:

This appliance complies with the following EEC directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications. 1. Carefully dispose of the packing material. 2. After removing the packing, check to make sure that the appliance is not damaged. If in doubt, contact a qualified professional. 3. The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. 4. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - During installation, the power supply cord must not be excessively or dangerously bent or flattened; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 5. Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open. 6. This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. 7. Do not touch the heating element during or after a wash cycle. 8. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 9. If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting." If you cannot resolve the problem, contact a service centre. @@@@44,5 cm. 60 cm. @@@@The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Loading the Salt into the Softener Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: 1. @@@@It is normal for a small amount of water to come out of the salt container. 4. Carefully screw the cap back on.

The salt container should be filled after about every 30 wash cycles. Warning: To prevent rust from forming, we advise you to load the salt before starting a wash cycle. Adjusting Salt Consumption The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimize and customize the level of salt consumption so that it remains at a minimum. Your Local Water Board can supply the degree of hardness of the water in your area. To adjust salt consumption, proceed as follows: 1) Unscrew the cap from the salt container. 2) There is a ring on the container with an arrow on it (see figure to the side), if necessary, rotate the ring in the anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used. It is recommended that adjustments be made in accordance with the following schema: Water Hardness Salt Autoconsumption (cycles/grams/kg) cycle 0 20 40 60 / 60 40 25 Clarke degrees °fH mmol/l Selector position 0 - 14 14 - 36 36 - 71 >71 0 - 17 18 - 44 0 - 1,7 1,8 - 4,4 / "-" MED "+" 45 - 89 4,5 - 8,9 > 8,9 > 8,9 3 GB Detergent and Rinse Aid Detergent Detergent specifically intended for use with dishwashers must be used. @@@@Loading the Rinse Aid To open the dispenser, turn the "C" cap in the anti-clockwise direction and then pour in the rinse aid, making sure not to overfill. The amount of rinse aid used for each cycle can be regulated by turning the "F" dose adjuster, located beneath the "C" cap, with a screwdriver. There are 6 different settings; the normal dosage setting is 2.

DBDC F 15 gr. 5 gr. CA Notice: To facilitate closing the cover, remove any excess detergent on the edges of the dispenser. Important: Proper dosage of the rinse aid improves drying. If drops of water remain on the dishes or spotting occurs, the dosage adjuster should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjuster to a lower setting. Warning Three-in-one dishwasher tablets are now available on the market, and combine the detergent, salt and rinse aid all in one. If the water in your area is hard or very hard, we still recommend you pour extra salt into the relevant dispenser to prevent the formation of white streaks on your dishes or on the appliance interior. In any case, please read the manufacturer's instructions provided on the packet. GB 4 Loading the Dishwasher Load examples Before placing the dishes in the dishwasher, remove the larger food particles to prevent the filter from becoming clogged, which results in reduced performance. If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they be allowed to soak before they are washed. This will eliminate the need for extra wash cycles. Pull out the racks to facilitate loading the dishwasher. How to Use the Lower Rack We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right. It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm.

- Pots, serving bowls, etc. must always be placed top down. - Deep pots should be slanted to allow the water to flow out. - Silverware should be placed in the silverware basket with the handles at the bottom; If the rack has side baskets, the spoons should be loaded individually into the appropriate slots (see Fig. @@@@How to adjust the Upper rack ... @@@@Close the tabs to lock the rack in place (see Fig. F) Top Rack Top Rack Lower Rack Lower Rack Fig. A 1 2 3 Fig.

@@@The "B" indicator light will come on. At this point, the appliance is on and ready to be programmed. Starting and selecting the cycle. @@@@The wash cycle can be interrupted by pressing the ON-OFF. You can then load additional dishes and turn the appliance back on. The cycle will start where it left off. At the end of the wash cycle... @@Set the knob to the Reset position to clear all settings. @@Turn off the water tap. Wait a few minutes before unloading the dishes: they are very hot! If you wait a little while, they dry better thanks to the steam. Empty the lower rack first. Make sure the wash cycle has ended before removing the dishes! There's been a power failure? Have you opened the dishwasher door? @@@@Cold rinse Rinse with hot water at 70°C. @@Standard daily cycle. 2 pre-washes with cold water. Extended wash at 55°C. Rinse with hot water at 70°C. @@Run cycle immediately after use.

No drying. Short wash at 45°C. Cold rinse. 15 gr. 4) Soak Preliminary wash cycle for dishes and pans awaiting completion of the load with the dishes from the next meal. Short cold wash to prevent food from drying onto the dishes.



[You're reading an excerpt. Click here to read official INDESIT D41 user guide](http://yourpdfguides.com/dref/3238310)
<http://yourpdfguides.com/dref/3238310>

7 GB Energy Saving Tips - It is important to try and run the dishwasher when it is fully loaded in order to save on energy. e socket correctly; - the power is on in the house; - the door is closed properly; - the ON-OFF switch is on "ON"; - the water supply is turned on. @@@@Is the wash cycle suitable for the dishes you have placed inside the appliance? Are the filter and microfilter clean? Can the sprayer arms turn freely? The Dishwasher Does Not Drain Have you checked whether: - the drain hose is crimped or bent. @@@@@@@If, despite all these checks, the dishwasher still does not function and/or the problem persists, contact the nearest authorised service centre and provide them with the following information: - the nature of the problem; - the model type number (Mod.

...) and the serial number (S/N ..

..), which are indicated on the plate located on the side of the inner part of the door. Never call on unauthorised technicians and refuse to allow parts to be installed that are not original spare parts. 9 GB Installation Positioning the Appliance Position the appliance in the desired location.

The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation. Levelling the Appliance Once the appliance is positioned, adjust the feet

(screwing them in or out) to adjust the height of the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance. @@@@@@@If this precaution is not taken, there is a risk that the Fig.2 water inlet can get blocked and damage the appliance. Hot Water Connection The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60° C. In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line.

Drain Hose Connection Insert the drain hose into a drain pipe with a minimum diameter of 4 cm., or let it run into the sink, making sure to avoid bending or crimping it. Use the special plastic support that comes with the appliance (see figure to the right). The free end of the hose must be at a height between 40 and 100 cm. and must not be immersed in water. Attention: The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain. E.



[You're reading an excerpt. Click here to read official INDESIT D41 user guide](#)

<http://yourpdfguides.com/dref/3238310>