



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT D61. You'll find the answers to all your questions on the INDESIT D61 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT D61**  
**User guide INDESIT D61**  
**Operating instructions INDESIT D61**  
**Instructions for use INDESIT D61**  
**Instruction manual INDESIT D61**

## Dishwasher

Instructions for installation and use  
**D 61**

 INDESIT



[You're reading an excerpt. Click here to read official INDESIT D61 user guide](http://yourpdfguides.com/dref/3238311)  
<http://yourpdfguides.com/dref/3238311>

**Manual abstract:**

This appliance complies with the following EEC directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications. 1. Carefully dispose of the packing material. 2. After removing the packing, check to make sure that the appliance is not damaged. If in doubt, contact a qualified professional. 3. The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. 4. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - During installation, the power supply cord must not be excessively or dangerously bent or flattened; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 5. Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open. 6. This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. 7. Do not touch the heating element during or after a wash cycle. 8. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 9. If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting." If you cannot resolve the problem, contact a service centre. @@@@60 cm. 60 cm. @@@@The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Loading the Salt into the Softener Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: 1. @@@@It is normal for a small amount of water to come out of the salt container. 4. Carefully screw the cap back on.

**Adjusting Salt Consumption** The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimize and customize the level of salt consumption so that it remains at a minimum. Your Local Water Board can supply the degree of hardness of the water in your area. To adjust salt consumption, proceed as follows: 1) Unscrew the cap from the salt container. 2) There is a ring on the container with an arrow on it (see figure to the side), if necessary, rotate the ring in the anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used. It is recommended that adjustments be made in accordance with the following schema: Water Hardness Salt consumption (grams/cycle) 0 20 40 60 Autonomy (cycles/2kg) / 60 40 25 Clarke degrees °dH mmol/l Selector position 0, 14 14, 36 0, 17 18, 44 0, 1,7 1,8, 4,4 / "-" MED "+" The salt container should be filled after about every 30 wash cycles. Warning: To prevent rust from forming, we advise you to load the salt before beginning a wash cycle. 36, 71 >71 45, 89 4,5, 8,9 > 8,9 3 GB Detergent and Rinse Aid ...

**Detergent** Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Wash Cycle Table." The detergent dispenser is located on the inside panel of the door. @@@@There are 6 different settings; the normal dosage setting is 4.

A F D C 22 gr. 8 gr. C B Dishwasher detergent in tablets is now available on the market, in which case you should place one tablet into container "D" and replace the lid. Those Institutes which carry out comparative tests should keep to the dosage indications contained in the wash cycle table. Notice: To facilitate closing the cover, remove any excess detergent on the edges of the dispenser.

**Important:** Proper dosage of the rinse aid improves drying. If drops of water remain on the dishes or spotting occurs, the dosage adjustor should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjustor to a lower setting. GB 4 Loading the Dishwasher Before placing the dishes in the dishwasher, remove the larger food particles to prevent the filter from becoming clogged, which results in reduced performance. If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they be allowed to soak before they are washed. This will eliminate the need for extra wash cycles. Pull out the racks to facilitate loading the dishwasher. How to Use the Lower Rack We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right. It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm. - Pots, serving bowls, etc.

must always be placed top down. - Deep pots should be slanted to allow the water to flow out. @@@@How to adjust the Upper rack ...

@@@@Close the tabs to lock the rack in place (see Fig. @@@@1. @@@2. Make sure that the water supply is turned on to full pressure. 3.

@@@@. @@@5. @@@6. Press the ON-OFF button, and the ON-OFF light will turn on. At this point, the wash cycle will begin.

@@@@Then, turn the dishwasher back on using the ON-OFF button. If you forget to load some of the dishes... The wash cycle can be interrupted by pressing the ON-OFF button.

You can then load additional dishes and turn the appliance back on. The cycle will start where it left off. At the end of the wash cycle...

@@@@Rinse with hot water at 70°C. @@@Standard daily cycle. 2 pre-washes with cold water. Extended wash a 65°C. Rinse with hot water at 70°C.

**Drying.** 8+22 gr. \* 3) Rapid Wash Economic, fast cycle to be used to on not very dirty dishes right after they are used. No drying cycle. Pre-wash of dishes, pots and pans while waiting for the load to be completed after the subsequent meal. Short wash at 65°C. Cold rinse. 22 gr. 4) Soak Short cold wash to prevent food residue from drying on the dishes. 7 GB Energy Saving Tips - It is important to try and run the dishwasher when it is fully loaded in order to save on energy.

In order to prevent odors from forming and food from caking onto the dishes, you can run the hold cycle. @@@@Do not run risks.

@@@@The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation. This dishwasher model can be built-in under the one worktop, and it therefore comes provided with an assembly kit complete with an instructions sheet.



**You're reading an excerpt. Click here to read official INDESIT D61 user guide**

<http://yourpdfguides.com/dref/3238311>

*Levelling the Appliance* Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the height of the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance. *Cold Water Connection* Connect the cold water supply hose to a threaded 3/4 (gas) connector, inserting the small filter supplied with the dishwasher and making sure that it is fastened tightly in place (see figure 2). If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of Fig.

*2 impurities.* If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance. *Drain Hose Connection* Insert the drain hose into a drain pipe with a minimum diameter of 4 cm., or let it run into the sink, making sure to avoid bending or crimping it. Use the special plastic support that comes with the appliance (see figure to the right). The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water. *Attention:* The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain. *Electrical Connection* After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is sized for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law). If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the plug, rather than using adaptors or the like as they could cause overheating and burns. Should the electricity supply cable be damaged, we recommend that you only contact authorised Technical Service Centres for the replacement.

*GB 10 Electrical Connection* *Electrical Connection* If your appliance is supplied with a 13 amp. fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instruction below. **WARNING: THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. *Disposing of the plug:* .



[You're reading an excerpt. Click here to read official INDESIT D61 user guide](#)

<http://yourpdfguides.com/dref/3238311>