



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT D63. You'll find the answers to all your questions on the INDESIT D63 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT D63**  
**User guide INDESIT D63**  
**Operating instructions INDESIT D63**  
**Instructions for use INDESIT D63**  
**Instruction manual INDESIT D63**

### Safety is a Good Habit to Get Into

**NOTICE**

Carefully read the instructions contained in this manual, as they provide important information which is essential to safe and proper installation, use and maintenance of the appliance.

**CE** This appliance complies with the following EEC directives:  
- 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications  
- 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications

- Carefully dispose of the packing material.
- After removing the packing, check to make sure that the appliance is not damaged. If in doubt, contact a qualified professional.
- The dishwasher must only be used by adults for the washing of household dishes and cooking utensils.
- Fundamental rules to follow when using the appliance:
  - Never touch the dishwasher when barefoot or with wet hands or feet.
  - We discourage the use of extension cords and multiple sockets.
  - During installation, the power supply cord must not be


excessively or dangerously bent or flattened.

- If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply.
- Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open.
- This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements.
- Do not touch the heating element during or after a wash cycle.
- Do not lean or sit on the door when it is open, as this could overturn the dishwasher.
- If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting." If you cannot resolve the problem, contact a service centre.
- Appliances which are no longer being used must be made inoperable by cutting the power supply cord and removing the door lock.

To maintain the **EFFICIENCY** and **SAFETY** of this appliance, we recommend:

- use only the **MANUFACTURER** Service
- use only **ORIGINAL** Spare Parts

### Close-up View (control panel)

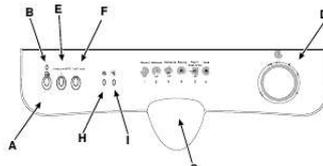

- |                                    |  |
|------------------------------------|--|
| <b>A</b> ON - OFF Button           | <b>E</b> "INTENSIVE 65°C" Button       |
| <b>B</b> ON - OFF Light            | <b>F</b> "HALF LOAD" Button            |
| <b>C</b> Handle For Opening Door   | <b>H</b> Low Salt Indicator Light      |
| <b>D</b> Knob For Selecting Cycles | <b>I</b> Low Rinse Aid Indicator Light |



[You're reading an excerpt. Click here to read official INDESIT D63 user guide](http://yourpdfguides.com/dref/3238312)  
<http://yourpdfguides.com/dref/3238312>

**Manual abstract:**

This appliance complies with the following EEC directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications. 1. Carefully dispose of the packing material. 2. After removing the packing, check to make sure that the appliance is not damaged. If in doubt, contact a qualified professional. 3. The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. 4. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - During installation, the power supply cord must not be excessively or dangerously bent or flattened; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 5. Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open. 6. This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. 7. Do not touch the heating element during or after a wash cycle. 8. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 9. If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting." If you cannot resolve the problem, contact a service centre. @@@@60 cm. 60 cm. @@@@The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Loading the Salt into the Softener Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: 1. @@@@It is normal for a small amount of water to come out of the salt container. 4. Carefully screw the cap back on.

**Adjusting Salt Consumption** The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimize and customize the level of salt consumption so that it remains at a minimum. Your Local Water Board can supply the degree of hardness of the water in your area. To adjust salt consumption, proceed as follows: 1) Unscrew the cap from the salt container. 2) There is a ring on the container with an arrow on it (see figure to the side), if necessary, rotate the ring in the anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used. It is recommended that adjustments be made in accordance with the following schema: Water Hardness Salt consumption (grams/cycle) 0 20 40 60 Autonomy (cycles/2kg) / 60 40 25 Clarke degrees °dH mmol/l Selector position 0, 14 14, 36 0, 17 18, 44 0, 1,7 1,8, 4,4 / "-" MED "+" The salt container must be filled when the "low salt" indicator light (located on the control panel) comes on. Warning: To prevent rust from forming, we advise you to load the salt before starting a wash cycle. 36, 71 >71 45, 89 4,5, 8,9 > 89 > 8,9 3 GB Detergent and Rinse Aid ... Detergent Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Wash Cycle Table." The detergent dispenser is located on the inside panel of the door. @@@@There are 6 different settings; the normal dosage setting is 3.

**Important:** Proper dosage of the rinse aid improves drying. If drops of water remain on the dishes or spotting occurs, the dosage adjustor should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjustor to a lower setting. A D C 22 gr. 8 gr.

**B Dishwasher detergent in tablets** is now available on the market, in which case you should place one tablet into container "D" and replace the lid. Those Institutes which carry out comparative tests should keep to the dosage indications contained in the wash cycle table. Notice: To facilitate closing the cover, remove any excess detergent on the edges of the dispenser. F C GB 4 **Loading the Dishwasher** Before placing the dishes in the dishwasher, remove the larger food particles to prevent the filter from becoming clogged, which results in reduced performance. If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they be allowed to soak before they are washed. This will eliminate the need for extra wash cycles. Pull out the racks to facilitate loading the dishwasher. **How to Use the Lower Rack** We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right. It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm. - Pots, serving bowls, etc.

must always be placed top down. - Deep pots should be slanted to allow the water to flow out. - The silverware basket can be doubled (see figure A) so that only one section may be used when the silverware load is light. This also makes space for additional pots and pans, and it can also be placed in the upper rack. - Silverware should be placed in the silverware basket with the handles at the bottom; If the rack has side baskets, the spoons should be loaded individually into the appropriate slots. Especially long utensils should be placed in the horizontal position at the front of the upper rack. @@@@How to adjust the Upper rack ... @@@@Close the tabs to lock the rack in place (see Fig.

F). @@@@1 2 3 Fig. @@@@1. @@@@2. Make sure that the water supply is turned on to full pressure. 3. @@@@4. @@@@5. @@@@6. Press the ON-OFF button, and the ON-OFF light will turn on.

At this point, the wash cycle will begin. @@@@Then, turn the dishwasher back on using the ON-OFF button. If you forget to load some of the dishes... The wash cycle can be interrupted by pressing the ON-OFF button. You can then load additional dishes and turn the appliance back on. The cycle will start where it left off. At the end of the wash cycle..

. @@@@This will allow you to save on water and electrical energy. @@@@Standard daily cycle. 2 pre-washes with cold water. Extended wash a 55°C. Rinse with hot water at 65°C. @@@@Pre-wash with hot water. Extended wash a 65°C. Rinse with cold water. Rinse with hot water at 65°C.

@@@@Extended wash at 55°C. @@@@Before calling for assistance, let us see what can be done first: have you forgot to press one of the buttons or to perform an essential operation? The Dishwasher Does Not Start Have you checked whether: - the plug is pushed into the socket correctly; - the power is on in the house; - the door is closed properly; - the ON-OFF switch is on "ON"; - the water supply is turned on.



[You're reading an excerpt. Click here to read official INDESIT D63 user guide](http://yourpdfguides.com/dref/3238312)  
<http://yourpdfguides.com/dref/3238312>

*The Dishwasher Does Not Load Water Have you checked whether: - the water is turned on and the hose is connected properly; - the water supply to the house is on and has sufficient pressure; - the water supply hose is crimped or bent; - the filter for the water supply hose is clogged. The Dishes Are Not Clean Have you checked whether: - the water is turned on and the hose is connected properly; - the water supply to the house is on and has sufficient pressure; - the water supply hose is crimped or bent; - the filter for the water supply hose is clogged. The Dishwasher Does Not Drain Have you checked whether: - the drain hose is crimped or bent.*

*Lime Deposits or a White Film Form on the Dishes Have you checked whether: - the lid to the salt container is closed properly; - the rinse aid dosage is correct. If, despite all these checks, the dishwasher still does not function and/or the problem persists, contact the nearest authorised service centre and provide them with the following information: - the nature of the problem; - the model type number (Mod. ... ) and the serial number (S/N ....), which are indicated on the plate located on the side of the inner part of the door. @@@@This dishwasher model can be built-in under the one worktop, and it therefore comes provided with an assembly kit complete with an instructions sheet. Levelling the Appliance Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the height of the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance. Cold Water Connection Connect the cold water supply hose to a threaded 3/4 (gas) connector, inserting the small filter supplied with the dishwasher and making sure that it is fastened tightly in place (see figure 2).*

*If the water pipes are new or A have not been used for an extended period of time, let the water run to make sure that the water is clear and free of Fig.2 impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance. Hot Water Connection The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60° C. In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line. Drain Hose Connection Insert the drain hose into a drain pipe with a minimum diameter of 4 cm., or let it run into the sink, making sure to avoid.*



[You're reading an excerpt. Click here to read official INDESIT D63 user guide](http://yourpdfguides.com/dref/3238312)

<http://yourpdfguides.com/dref/3238312>