



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT DI450. You'll find the answers to all your questions on the INDESIT DI450 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT DI450**  
**User guide INDESIT DI450**  
**Operating instructions INDESIT DI450**  
**Instructions for use INDESIT DI450**  
**Instruction manual INDESIT DI450**

**DI 450**

Dishwasher  
**Installation and use**

 **INDESIT**



[You're reading an excerpt. Click here to read official INDESIT DI450 user guide](http://yourpdfguides.com/dref/3238319)

<http://yourpdfguides.com/dref/3238319>



. @@@@ Turn off the water tap. Wait a few minutes before unloading the dishes: they are very hot! If you wait a little while, they dry better thanks to the steam. Empty the lower rack first. Make sure the wash cycle has ended before removing the dishes! @@@@ Are the filter and microfilter clean? Can the sprayer arms turn freely? The Dishwasher Does Not Drain Have you checked whether: - the drain hose is crimped or bent. Lime Deposits or a White Film Form on the Dishes Have you checked whether: - the lid to the salt container is closed properly; - the rinse aid dosage is correct. Error messages. Your dishwasher is equipped with a safety system which is able to detect any operating anomalies. These anomalies are reported by one or two wash cycle indicator lights "G" flashing rapidly. Take a note of which lights are flashing, turn the appliance off and call for technical assistance. Tap off alarm If you have forgotten to turn the water tap on, your appliance will remind you of this by sounding a few short beeps for a few minutes. Turn the tap on and your appliance will start up again after a few minutes. @@@@ Turn the appliance off, clean the filter thoroughly and reposition it in its seat as illustrated on this page. Then turn it back on. Repeat the programming operations and the selected wash cycle will start up again. Water load solenoid valve malfunction alarm. If indicator light 3 (Eco) flashes rapidly, TURN the dishwasher OFF AND BACK ON AGAIN after one minute. If the alarm persists, first turn off the water tap to avoid any flooding and then cut off the electricity supply and call for technical assistance. If, despite all these checks, the dishwasher still does not function and/or the problem persists, cur nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to remove it to re-route the mains cable through partitions, units etc. , please ensure that either: - the plug is replaced by a fused 13 amp re-wireable plug bearing the BSI mark of approval - or: - the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instruction for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow - Earth Blue - Neutral Brown - Live As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminal in your plug, proceed as follows: connect Green & Yellow wire to terminal marked "E" or coloured Green or Green & Yellow. Connect Brown wire to terminal marked "L" or coloured Red. Connect Blue wire to terminal marked "N" or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse. A 15 amp plug must be protected by a 15 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt about the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE BROWN GREEN AND YELLOW "NEUTRAL" ("N") "LIVE" ("L") "EARTH" ("E") GREEN & YELLOW BROWN 13 amp fuse BLUE CROSS-BAR CORD GRIP CAUTION: The dishwasher plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be done safely. Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above 11 GB Merloni Elettrodomestici Viale Aristide Merloni 47 60044 Fabriano Italy Tel +39 0732 6611 Fax +39 0732 662501 www.

merloni.com P07/2004 - 195045696.00 - Xerox Business Services - DocuTech .



[You're reading an excerpt. Click here to read official INDESIT DI450 user guide](#)  
<http://yourpdfguides.com/dref/3238319>