



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT DI62. You'll find the answers to all your questions on the INDESIT DI62 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT DI62**  
**User guide INDESIT DI62**  
**Operating instructions INDESIT DI62**  
**Instructions for use INDESIT DI62**  
**Instruction manual INDESIT DI62**

## Dishwasher

Instruction for installation and use  
**DI 62**

 **INDESIT**



[You're reading an excerpt. Click here to read official INDESIT DI62 user guide](http://yourpdfguides.com/dref/3238321)  
<http://yourpdfguides.com/dref/3238321>

**Manual abstract:**

This appliance complies with the following EEC directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications. 1. Carefully dispose of the packing material. 2. After removing the packing, check to make sure that the appliance is not damaged. If in doubt, contact a qualified professional. 3. The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. 4. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - During installation, the power supply cord must not be excessively or dangerously bent or flattened; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 5. Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open. 6. This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. 7. Do not touch the heating element during or after a wash cycle. 8. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 9. If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting." If you cannot resolve the problem, contact a service centre. @@@@59,5 cm. 57 cm. @@@@The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Loading the Salt into the Softener Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: 1. @@@@It is normal for a small amount of water to come out of the salt container. 4. Carefully screw the cap back on.

The salt container should be filled after about every 30 wash cycles. Warning: To prevent rust from forming, we advise you to load the salt before beginning a wash cycle. After pouring in the detergent, replace the lid, pressing down until it clicks. Dishwasher detergent in tablets is now available on the market, in which case you should place one tablet into container "D" and replace the lid. Notice: To facilitate closing the cover, remove any excess detergent on the edges of the dispenser. Rinse Aid This product makes dishes sparkle more as it improves their drying. The rinse aid container is situated on the inside of the appliance door; you should refill it when you see the container is empty by means of indicator light "D". (If your dishwasher is fitted with a "low rinse aid" indicator light, fill the container up when the indicator light flashes or lights up). Loading the Rinse Aid To open the dispenser, turn the "C" cap in the anti-clockwise direction and then pour in the rinse aid, making sure not to overfill. @@@@There are 6 different settings; the normal dosage setting is 4. Important: Proper dosage of the rinse aid improves drying. @@@@Add rinse aid to the corresponding container only if you are dissatisfied with the results on your dishes. In any case, please read the manufacturer's instructions provided on the packet. 3 GB Loading the Dishwasher Load examples Before placing the dishes in the dishwasher, remove the larger food particles to prevent the filter from becoming clogged, which results in reduced performance. If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they be allowed to soak before they are washed.

This will eliminate the need for extra wash cycles. Pull out the racks to facilitate loading the dishwasher. How to Use the Lower Rack We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right. It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm. - Pots, serving bowls, etc. must always be placed top down. - Deep pots should be slanted to allow the water to flow out. - Silverware should be placed in the silverware basket with the handles at the bottom; If the rack has side baskets, the spoons should be loaded individually into the appropriate slots (see figure A) Especially long utensils should be placed in the horizontal position at the front of the upper rack. How to Use the Upper Rack The upper rack is designed to hold more delicate and lighter dishware, such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). - Position the dishes and cookware so that they do not get moved by the spray of water. How to adjust the Upper rack ... @@@@Close the tabs to lock the rack in place (see Fig. F).

Lower Rack Upper Rack Lower Rack Upper Rack Fig. A 1 2 3 Fig. @@@@Your appliance is now on and awaiting instructions. Selecting a wash cycle ... Select the wash cycle by pressing button "P". @@@@Canceling or changing a cycle while it is underway ... @@@@You are now free to re-set the correct wash cycle. If you forgot to put some dishes in ... @@@@Put the dishes into the dishwasher and close the door.

The appliance will start up where it left off. There's been a power failure? Have you opened the dishwasher door? @@@@At the end of the wash cycle ... @@@@Turn off the water tap. Wait a few minutes before unloading the dishes: they are very hot! If you wait a little while, they dry better thanks to the steam. Empty the lower rack first. Warning! @@@@Cold rinse Rinse with hot water at 70°C. @@@@Standard daily cycle. 2 pre-washes with cold water. Extended wash at 50°C. Rinse with hot water at 70°C. @@@@Run cycle immediately after use. No drying.

Short wash at 45°C. @@@@Remove the Plug Before cleaning or performing maintenance, always remove the plug from the socket. Do not run risks. No Solvents or Abrasive Cleaning Products To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Rather, use only a cloth and warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers. When You Go on Holiday When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then removal will start up again after a few minutes. @@@@Levelling the Appliance Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the height of the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance.



[You're reading an excerpt. Click here to read official INDESIT DI62 user guide](http://yourpdfguides.com/dref/3238321)  
<http://yourpdfguides.com/dref/3238321>

*Cold Water Connection* Connect the cold water supply hose to a threaded 3/4 (gas) connector, inserting the small filter supplied with the dishwasher and making sure that it is fastened tightly in place (see figure 2). If the water pipes are new or Fig.2 have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance. *Hot Water Connection* The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60° C.

*In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. @@@@The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water. Attention: The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain. Electrical Connection* After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is sized for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law). If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the plug, rather than using adaptors or the like as they could cause overheating and burns.

*Caution: the dishwasher plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be done safely. Should the electricity supply cable be damaged, we recommend that you only contact authorised Technical Service Centres for the replacement. 9 GB Electrical*

*Connection* *Electrical Connection* If your appliance is supplied with a 13 amp. fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instruction below. **WARNING: THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. @@@@Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusabl.



[You're reading an excerpt. Click here to read official INDESIT DI62 user guide](http://yourpdfguides.com/dref/3238321)

<http://yourpdfguides.com/dref/3238321>