



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT DISR 57M19 CA EU. You'll find the answers to all your questions on the INDESIT DISR 57M19 CA EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT DISR 57M19 CA EU**

**User guide INDESIT DISR 57M19 CA EU**

**Operating instructions INDESIT DISR 57M19 CA EU**

**Instructions for use INDESIT DISR 57M19 CA EU**

**Instruction manual INDESIT DISR 57M19 CA EU**



**[You're reading an excerpt. Click here to read official INDESIT DISR 57M19 CA EU user guide](http://yourpdfguides.com/dref/5896599)**

**<http://yourpdfguides.com/dref/5896599>**

**Manual abstract:**

@@@ This appliance was designed for domestic use or similar applications, for example: - farmhouses; - use by guests in hotels, motels and other residential settings; - bed & breakfasts. Remove the appliance from all packaging and make sure it was not damaged during transportation. If it was damaged, contact the retailer and do not proceed any further with the installation process. Not pull on the cable. □ The water supply tap must be shut off and the plug should be removed from the electrical socket at the end of every cycle and before cleaning the appliance or carrying out any maintenance work. □ The maximum number of place settings is shown in the product sheet. □ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. □ Do not lean or sit on the open door: this may cause the appliance to overturn. □ The door should not be left open as it may create a dangerous obstacle. □ Keep detergent and rinse aid out of reach of children.

□ The packaging material should not be used as a toy. □ Knives and other utensils with sharp edges must be placed either with the points/blades facing downwards in the cutlery basket or horizontally on the tip-up compartments or in the tray/third basket, if available. General safety Disposal • This appliance should not be operated by children younger than 8 years, people with reduced physical, sensory or mental capacities, or inexperienced people who are not familiar with the product, unless they are given close supervision or instructions on how to use it safely and are made aware by a responsible person of the dangers its use might entail. □ Children must not play with the appliance. □ It is the user's responsibility to clean and maintain the appliance.

Children should never clean or maintain it unless they are given supervision. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. □ The appliance must be used to wash domestic crockery in accordance with the instructions in this manual. □ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms.

□ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket. Do 2 • To dispose of any packaging materials, follow local legislation so that the packagings may be reused. □ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of reusing and recycling the materials inside the machine, while preventing potential damage to the atmosphere and public health. The crossed-out dustbin symbol shown on all products reminds the owners of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Saving energy and respecting the environment Saving water and energy • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours with the Soak cycle Wash Cycles). (if available, see • Select a wash cycle that is suited to the type of crockery and to the soil level using the Table of Wash Cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels.

- If the load is smaller than usual activate the Half Load option (see Special wash cycles • If your electricity supply contract gives details of electricity-saving time bands, run the wash cycles when electricity prices are lower. The Delayed Start option can help you organise the wash cycles accordingly (see Special wash cycles and options, if available). EN Assistance PL Serwis Techniczny Before contacting Assistance: • Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting). □ Restart the programme to check whether the problem has ceased to exist. □ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians. Please have the following information to hand: • The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). 0 2800 A 130' 12 49 No Product Fiche Brand Model Rated capacity in standard place settings (1) Energy efficiency class on a scale from A+++ (low consumption) to D (high consumption) Energy consumption per year in kWh (2) Energy consumption of the standard cleaning cycle in kWh Power consumption of the off-mode in W Power consumption of the left-on mode in W Water consumption per year in litres (3) Drying efficacy class on a scale from G (low efficacy) to A (high efficacy) Programme time for standard cleaning cycle in minutes The duration of the left-on mode in minutes Noise in dB(A) Re 1pW Built-in model NOTES 1) The information on the label and fiche relates to the standard cleaning cycle, this programme is suitable to clean normally soiled tableware and it is the most efficient programme in terms of combined energy and water consumption. The standard cleaning cycle corresponds to the Eco cycle.

2) Based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption depends on how the appliance is used. 3) Based on 280 standard cleaning cycles. Actual water consumption depends on how the appliance is used. 13 Installation EN If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back.

wARNING: HAZARDOUS VOLTAGE! Under no circumstances should the water inlet hose be cut as it contains live electrical parts. Connecting the water supply Adaptation of the water supply for installation should only be performed by a qualified technician. The water inlet and outlet hoses may be positioned towards the right or the left in order to achieve the best possible installation. Make sure the dishwasher does not bend or squash the hoses. Electrical connection Connecting the water inlet hose • To a 3/4" gas cold or hot water connection point (max.

60°C). □ Run the water until it is perfectly clear. □ Screw the inlet hose tightly into position and turn off the tap. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). The water pressure must be within the values indicated in the Technical Data table - otherwise the dishwasher may be function properly. Make sure the hose is not bent or compressed. Before inserting the plug into the electrical socket, make sure that: • The socket is earthed and complies with current regulations; • the socket can withstand the maximum load of the appliance as shown on the data plate located on the inside of the door (see chapter Description of the appliance); • The power supply voltage falls within the values indicated on the data plate on the inside of the door.



[You're reading an excerpt. Click here to read official INDESIT DISR 57M19 CA EU user guide](http://yourpdfguides.com/dref/5896599)

<http://yourpdfguides.com/dref/5896599>

The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance). do not use extension cables or multiple sockets.

Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed. If the power supply cable is damaged, have it replaced by the manufacturer or its authorised Technical Assistance Service in order to prevent all potential hazards. (See Connecting the water outlet hose Assistance) The Company shall not be held responsible for any incidents, if these regulations are not observed. Connect the outlet hose to a drain duct with a minimum diameter of 2 cm. (A) The outlet hose connection must be at a height ranging from 40 to 80 cm from the floor or surface where the dishwasher rests. positioning and levelling MAX 80 cm MIN 40 cm 1. Position the dishwasher on a level sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating.

2. Before recessing the dishwasher, stick the adhesive transparent strip\* under the wooden shelf in order to protect it from any condensation which may form.

3. Place the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop\* (see the Assembly instruction sheet).

4\*. To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm. Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it. (see Building-in) Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside t this procedure every time you add salt to the container.

Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). Whenever you need to add salt, we recommend carrying out the procedure before the washing cycle is started. 1 - 9 Average autonomy salt dispenser with 1 wash cycle per day months 7 months 5 months 3 months 2 months 2/3 weeks EN Measuring out the refined salt For values between 0°f and 10°f, we do not recommend the use of salt. The rinse aid dispenser should be filled: • When the LOW RINSE AID indicator light on the panel/display is lit \*; • When the dark optical indicator on the dispenser door "E" becomes transparent. 1. Open the dispenser by turning the cap "G" in an anticlockwise direction. 2. Pour in the rinse aid, making sure it does not overflow from the dispenser. If this happens, clean the spill immediately with a dry cloth. 3.

Screw the cap back on. NEVER pour the rinse aid directly into the tub. Measuring out the rinse aid Adjusting the amount of rinse aid If you are not completely satisfied with the drying results, you can adjust the quantity of rinse aid used. turn the adjuster "F". A maximum of 4 levels can be set according to the dishwasher model. The factory setting is for a medium level.  If you see bluish streaks on the dishes, set a low number (1-2).  If there are drops of water or limescale marks on the dishes, set a high number (3-4). Setting the water hardness For perfect water softener operation, it is essential that the adjustment be based on the water hardness in your house. Ask your local water supplier for this information.

The factory setting is for medium water hardness.  Switch the dishwasher on using the On/Off button.  Switch it off using the On/Off button • Hold down the START/PAUSE button you hear a beep.  Switch it on using the On/Off button • The display shows the current selection level number and the salt indicator light.  Press button P to select the desired hardness level (see Hardness Table).

Switch it off using the On/Off button • Setting is complete! For 5 seconds until \* Only available in selected models. 17 Loading the racks EN Tips Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and containers. No preventive rinsing is needed under running water. Arrange the crockery so that it is held in place firmly and does not tip over; and arrange the containers with the openings facing downwards and the concave/convex parts placed obliquely, thus allowing the water to reach every surface and flow freely. Make sure that the lids, handles, trays and frying pans do not prevent the spray arms from rotating.

Place any small items in the cutlery basket. Since plastic dishes and non-stick frying pans usually retain more water drops, their drying will be not so good as that of ceramic or stainless-steel dishes. Lightweight items such as plastic containers should be placed in the upper rack and arranged so that they cannot move. After loading the appliance, make sure that the spray arms can rotate freely. Cutlery basket The basket is equipped with top grilles for improved cutlery arrangement. The cutlery basket should be positioned only at the front of the lower rack. Upper rack Load this rack with delicate and lightweight crockery such as glasses, cups, saucers and shallow salad bowls. Lower rack The lower rack can hold pans, lids, dishes, salad bowls, cutlery etc. Large plates and lids should ideally be placed at the sides. Adjustable position tip-up compartments\* The side tip-up compartments can be positioned at three different heights to optimize the arrangement of the crockery inside the rack.

Very soiled dishes and pans should be placed in the lower rack because in this sector the water sprays are stronger and allow a higher washing performance. Several dishwasher models are fitted with tip-up sectors\*. They can be used in a vertical position when arranging dishes or in a horizontal position (lower) to load pans and salad bowls easily. Some models are equipped with Vertical Zone, special pull-out supports\*in the rear of the rack that can be used to support frying pans and baking pans in a more vertical position, thus taking up less space. In order to use it, just get hold of the coloured grip and pull it upwards while rotating it forward. The supports can slide right and left to fit the size of the crockery. Wine glasses can be placed safely in the tip-up compartments by inserting the stem of each glass into the corresponding slot. For optimum drying results incline the tip-up compartments more. To change the inclination, pull up the tip-up compartment, slide it slightly and position it as you wish.



[You're reading an excerpt. Click here to read official INDESIT DISR](http://yourpdfguides.com/dref/5896599)

[57M19 CA EU user guide](http://yourpdfguides.com/dref/5896599)

<http://yourpdfguides.com/dref/5896599>

@@@NEVER raise or lower the rack on one side only.

@@@The cutlery tray can be removed (see Figure. @@@Their decorations are not resistant. @@@Crystal objects) can become opaque after a number of wash cycles too. @ • Use a delicate detergent suitable for crockery. @@@@The amount can be adjusted to the soil level.

@@ if tablets are used, one tablet will be enough. @@@@For further questions please ask the detergent producers. @@@@@ DO NOT USE washing up liquid. Using excessive detergent may result in foam residues remaining in the machine after the cycle has ended. To achieve the best washing and drying results, the combined use of detergent, rinse aid liquid and refined salt is required.

We recommend using detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. Open the door and pour in a suitable amount of detergent (see Measuring out the detergent. ) 4. Load the racks (see Loading the racks) and close the door. 5. Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles) by pressing the P button. Press the Start/Pause button to start the cycle (fixed light): a long beep signals the start of the wash cycle, the cycle indicator lights up and the display shows the cycle number and the time remaining until the end of the cycle. 8. Two short beeps and one long beep indicate the end of the wash cycle, the Start/Pause button switches off and the word END appears on the display. Wait for a few minutes before removing the crockery - to avoid burns.

Unload the racks, beginning with the lower level. The machine will switch off automatically during long periods of inactivity in order to minimise electricity consumption. AUTO WASH CYCLES\*: some models of dishwasher are equipped with a special sensor which can be used to assess the level of soiling and automatically select the most efficient and economic wash cycle accordingly. The duration of the auto wash cycles may vary due to the operation of the sensor. Changing a wash cycle in progress If a mistake was made in the wash-cycle selection process, it is possible to change the cycle provided that it has only just begun: Once the wash cycle has started, in order to change the wash cycle switch off the machine by pressing and holding the ON/OFF/Reset button. Switch it back on using the same button and select the desired wash cycle and options. Adding extra crockery Press the Start/Pause button and open the door, taking care to avoid the escaping steam. Then place the crockery inside the dishwasher. Press the Start/Pause button: The cycle will start again after a long beep has been emitted. If the delayed start has been set, at the end of the countdown the wash cycle will not start.

It will stay in Pause mode. Press the Start/Pause button to pause the machine; the wash cycle is stopped. At this stage the wash cycle cannot be changed.

Accidental interruptions If the door is opened during the wash cycle or there is a power cut, the cycle stops. It starts again from the point at which it was interrupted once the door has been shut or the electricity supply restored.

Based on the different conditions of use, the wash-cycle duration and data can change. The number and type of wash cycles and options may vary depending on the dishwasher model. EN Wash cycle Wash cycle which include drying Yes Yes Yes No Yes No No Options Delayed start – Half Load - Tabs Delayed start – Tabs Delayed start – Half Load Approximate duration of wash cycles h:min. The ECO wash cycle is the standard cycle to which the energy label data refers. It can be used to wash crockery with a normal soil level and is the most efficient cycle in terms of energy and water consumption for this type of crockery.

Cycle for delicate items, which are more sensitive to high temperatures 25 gr/ml – 1 Tab 6. Fast cycle to be used for slightly dirty dishes (ideal for 2 place settings) 21 gr/ml – 1 Tab 7. Pre-wash while awaiting completion of the load with the dishes from the next meal. 21 Special wash cycles and Options EN Notes: Optimum performance levels when using the "Daily" and "Rapid" cycles can be achieved by respecting the specified number of place settings. To reduce consumption even further, only run the dishwasher when it is full. Note for Test Laboratories: for information on comparative EN testing conditions, please send an email to the following address: assistenza\_en\_lvs@indesitcompany. Com Half load Option using the upper or lower rack If there are not many dishes to be washed, a half load cycle may be used in order to save water, electricity and detergent. Select the wash cycle and then press the HALF LOAD button: the indicator corresponding to the chosen rack lights up and the wash cycle starts only in the upper or lower rack. Remember to load the upper or lower rack only, and to reduce the amount of detergent accordingly. Wash options\* The OPTIONS may only be set, changed or reset after the wash cycle has been selected and before the Start/Pause button has been pressed.

Only the options which are compatible with the type of wash cycle set may be selected. If an option is not compatible with the selected wash cycle (see Table of wash cycles), the corresponding symbol flashes rapidly 3 times. If an option is selected which is not compatible with another (previously selected) option, it will flash 3 times and switch off, while the most recently selected option will remain active. To deselect an option which has been set by mistake, press the corresponding button again. multi-functional tablets Option (Tabs) This option optimises washing and drying results. When using multi-functional tablets, press the MULTI-FUNCTIONAL TABLETS button; the corresponding symbol will light up. If the button is pressed again, the option will be deselected. The "Multi-functional tablets" option results in a longer wash cycle. Delayed start Option It is possible to delay the start time of the cycle by a period of time between 1 and 24 hours: 1. Select the desired wash cycle and any other options required; press the DELAYED START button.

The indicator light will go on. Use the same button to select when the wash cycle will start (h01, h02 etc. ) 2. Confirm the selection using the START/PAUSE button to start the countdown. 3.

Once this time has elapsed, the DELAYED START indicator light goes off and the wash cycle begins. To deselect the DELAYED START option, press the DELAYED START button until the text OFF appears. The Delayed Start function cannot be set once a wash cycle has started. \* Only available in selected models. 22 Care and maintenance Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks.

□ Always unplug the appliance when cleaning it and when performing maintenance work.



[You're reading an excerpt. Click here to read official INDESIT DISR 57M19 CA EU user guide](http://yourpdfguides.com/dref/5896599)  
<http://yourpdfguides.com/dref/5896599>

□ The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products. □ Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar. Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They must be cleaned if you wish to achieve the best results in every wash. clean the filters regularly. The dishwasher must not be used without filters or if the filter is loose. □ After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig).

Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residues. EN Cleaning the dishwasher • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. □ Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours. Preventing unpleasant odours Food residue may become encrusted onto the spray arms and block the holes used to spray the water. It is therefore recommended that you check the arms from time to time and clean them with a small non-metallic brush. The two spray arms may both be removed. To remove the upper spray arm, turn the plastic locking ring in an anti-clockwise direction. The upper spray arm should be replaced so that the side with the greater number of holes is facing upwards.

Cleaning the spray arms C 1 A 3 The lower spray arm can be removed by pressing on the side tabs and pulling it upwards. @@@@Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap. @@- Re-place the filter and screw the water hose back into position. Cleaning the water inlet hose\* • Disconnect the appliance from the electricity supply and shut off the water tap.

□ Leave the door of the appliance ajar. □ When you return, run a wash cycle when the dishwasher is empty. \* Only available in selected models. 23 Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: Possible causes / Solutions: The dishwasher does not start • The water supply tap is not turned on. or cannot be controlled. □ Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the wash cycle. □ The appliance has not been plugged in properly or another electricity socket should be used. □ The dishwasher door has not been closed properly. the door won't close. No water drain out of the dishwasher. □ Make sure that the racks were inserted all the way. • The lock was released. Strongly push the door until a "clacking" noise is heard. □ The wash cycle has not finished yet.

□ Check the height of the drain hose. □ The dishes are rattling against each other or against the sprayer arms. Place the dishes properly and make sure the sprayer arms can rotate freely. □ Too much foam: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (See Detergent and dishwasher use. ) Do not prewash the dishes by hand. • No refined salt. □ Water hardness adjustment is not suitable: increase the relevant values. (See Refined Salt and Rinse Aid. ) • The salt and rinse-aid dispenser cap has not been closed properly. □ The rinse aid has been used up or the dosage is too low. • The rinse aid dosage is too high. □ A wash cycle without a drying programme has been selected. □ The crockery is made from non-stick material or plastic; the presence of water drops is normal. • The crockery has not been arranged properly. □ The sprayer arms cannot rotate freely, being hindered by the dishes. □ The wash cycle is too gentle (see Wash Cycles). □ Too much foam: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (See Detergent and dishwasher use. ) • The lid on the rinse aid compartment has not been closed correctly. • The filter is dirty or clogged up (see Care and maintenance. ) • The refined salt level is low (See Refined Salt and Rinse Aid. ) • Make sure that the height of the dishes is compatible with the rack adjustment. □ The holes in the sprayer arms are clogged up. (See Care and maintenance. ) • There is no water in the mains supply or the tap is shut off. • The water inlet hose is bent (see Installation). □ The filters are clogged up: they need cleaning. □ After checking and cleaning, switch the dishwasher on and off and start a new wash cycle. □ If the problem persists, turn off the water tap, remove the plug and call the Service Centre.

The dishwasher makes excessive noise. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly. The dishes are not clean. The dishwasher won't load any water. .



[You're reading an excerpt. Click here to read official INDESIT DISR 57M19 CA EU user guide](http://yourpdfguides.com/dref/5896599)  
<http://yourpdfguides.com/dref/5896599>