



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT DSR 57M19 A S EU. You'll find the answers to all your questions on the INDESIT DSR 57M19 A S EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT DSR 57M19 A S EU**

**User guide INDESIT DSR 57M19 A S EU**

**Operating instructions INDESIT DSR 57M19 A S EU**

**Instructions for use INDESIT DSR 57M19 A S EU**

**Instruction manual INDESIT DSR 57M19 A S EU**

## DSR 57M19

---

**GB** English

### Operating instructions

#### DISHWASHER - Contents

Operating instructions, 1  
Precautions and advice, 2  
Installation, 3-4  
Product Data, 4  
Electrical connection, 5  
Description of the appliance, 6  
Retired call and third aid, 7  
Loading the racks, 8-9  
Detergent and dishwasher use, 10  
Wash cycles, 11  
Special wash cycles and options, 12  
Care and maintenance, 13  
Troubleshooting, 14  
Guarantee, 15  
AfterSales Service, 16

 **INDESIT**

---



[You're reading an excerpt. Click here to read official INDESIT DSR 57M19 A S EU user guide](#)

<http://yourpdfguides.com/dref/5793364>

### Manual abstract:

@@@ This appliance was designed for domestic use or similar applications, for example: - farmhouses; - use by guests in hotels, motels and other residential settings; - bed & breakfasts. Remove the appliance from all packaging and make sure it was not damaged during transportation. If it was damaged, contact the retailer and do not proceed any further with the installation process. an attempt to perform the repair work yourself. • Do not lean or sit on the open door: this may cause the appliance to overturn. • The door should not be left open as it may create a dangerous obstacle. • Keep detergent and rinse aid out of reach of children. • The packaging material should not be used as a toy. • Knives and other utensils with sharp edges must be placed either with the points/blades facing downwards in the cutlery basket or horizontally on the tip-up compartments or in the tray/third basket, if available. • Connect the appliance to the water mains using the new supply hose provided with the appliance.

Do not re-use the old hose. • Install the back side of a free-standing dishwasher against a wall. Disposal • This appliance should not be operated by children younger than 8 years, people with reduced physical, sensory or mental capacities, or inexperienced people who are not familiar with the product, unless they are given close supervision or instructions on how to use it safely and are made aware by a responsible person of the dangers its use might entail. • Children must not play with the appliance. • It is the user's responsibility to clean and maintain the appliance.

Children should never clean or maintain it unless they are given supervision. • The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. • The appliance must be used to wash domestic crockery in accordance with the instructions in this manual. • The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms.

• Do not touch the appliance when barefoot. • When unplugging the appliance always pull the plug from the mains socket. Do not pull on the cable. • The water supply tap must be shut off and the plug should be removed from the electrical socket at the end of every cycle and before cleaning the appliance or carrying out any maintenance work. • The maximum number of place settings is shown in the product sheet. • If the appliance breaks down, do not under any circumstances touch the internal parts in 2 General safety • To dispose of any packaging materials, follow local legislation so that the packagings may be reused. • The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of reusing and recycling the materials inside the machine, while preventing potential damage to the atmosphere and public health. The crossed-out dustbin symbol shown on all products reminds the owners of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer.

Saving energy and respecting the environment Saving water and energy • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours with the Soak cycle (if available, see Wash Cycles). • Select a wash cycle that is suited to the type of crockery and to the soil level using the Table of Wash Cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels. - If the load is smaller than usual activate the Half Load option (see Special wash cycles and options, if available). • If your electricity supply contract gives details of electricity-saving time bands, run the wash cycles when electricity prices are lower. The Delayed Start option can help you organise the wash cycles accordingly (see Special wash cycles and options, if available). Installation If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back. WARNING: HAZARDOUS VOLTAGE! Under no circumstances should the water inlet hose be cut as it contains live electrical parts. GB Connecting the water supply Adaptation of the water supply for installation should only be performed by a qualified technician. The water inlet and outlet hoses may be positioned towards the right or the left in order to achieve the best possible installation.

Make sure the dishwasher does not bend or squash the hoses. Connecting the water inlet hose • To a 3/4" gas cold or hot water connection point (max. 60°C). • Run the water until it is perfectly clear. • Screw the inlet hose tightly into position and turn off the tap.

If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). The water pressure must be within the values indicated in the Technical Data table - otherwise the dishwasher may not function properly. Make sure the hose is not bent or compressed. Before inserting the plug into the electrical socket, make sure that: • The socket is earthed and complies with current regulations; • the socket can withstand the maximum load of the appliance as shown on the data plate located on the inside of the door (see chapter Description of the appliance); • The power supply voltage falls within the values indicated on the data plate on the inside of the door. • The socket is compatible with the plug of the appliance.

If this is not the case, ask an authorised technician to replace the plug (see Assistance). Do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed. If the power supply cable is damaged, have it replaced by the manufacturer or its authorised Technical Assistance Service in order to prevent all potential hazards. (See Electrical connection Connecting the water outlet hose Assistance) The Company shall not be held responsible for any incidents, if these regulations are not observed. Connect the outlet hose to a drain duct with a minimum diameter of 2 cm. (A) The outlet hose connection must be at a height ranging from 40 to 80 cm from the floor or surface where the dishwasher rests. Positioning and levelling MAX 80 cm MIN 40 cm 1. Position the dishwasher on a level sturdy floor.

If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position.



[You're reading an excerpt. Click here to read official INDESIT DSR 57M19 A S EU user guide](http://yourpdfguides.com/dref/5793364)  
<http://yourpdfguides.com/dref/5793364>

If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 2. Before recessing the dishwasher, stick the adhesive transparent strip\* under the wooden shelf in order to protect it from any condensation which may form. 3. Place the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop\* (see the Assembly instruction sheet). 4\*. To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm. Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it.

(see Building-in Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop\*, which guarantees antiflooding protection even in the event of a supply hose rupture. instruction sheet attached to the documentation) \* Only available in selected models. 3 GB Advice regarding the first wash cycle After the installation, remove the stoppers from the racks and the retaining elastic elements from the upper rack (if any).

The machine has a buzzer/set of tones (depending on the dishwasher model) to inform the user that a command has been implemented: power on, cycle end etc. The symbols/indicator lights/LEDs on the control panel/ display may vary in colour and may have a flashing or fixed light (depending on the dishwasher model). The display\* provides useful information concerning the type of wash cycle, drying/wash-cycle phase, remaining time, temperature etc. Water softener settings Before starting the first wash cycle, set the hardness level of the water from the mains supply. (see chapter Rinse aid and refined salt).

First load the softener tank with water, then introduce about 1 kg of salt. It is perfectly normal for water to flow out. As soon as this procedure is complete, run a wash cycle. Only use salt that has been specifically designed for dishwashers. After the salt has been poured into the machine, the LOW SALT indicator light\* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result. Technical data Dimensions Capacity Water supply pressure Power supply voltage Total absorbed power Fuse width 45cm height 85 cm depth 60 cm 10 standard place-settings 0,05 ÷ 1MPa (0.5 ÷ 10 bar) 7,25 psi – 145 psi See appliance data plate See appliance data plate See appliance data plate This dishwasher conforms to the following European Community Directives: -2006/95/EC (Low Voltage) -2004/108/EC (Electromagnetic Compatibility) -2009/125/EC (Comm. Reg. 1016/2010) (Ecodesign) -97/17/EC (Labelling) -2012/19/CE Waste Electrical and Electronic Equipment (WEEE) Product Data (product fiche) Product Fiche Brand Model Rated capacity in standard place settings (1) Energy efficiency class on a scale from A+++ (low consumption) to D (high consumption) Energy consumption per year in kWh (2) Energy consumption of the standard cleaning cycle in kWh Power consumption of the off-mode in W Power consumption of the left-on mode in W Water consumption per year in litres (3) Drying efficacy class on a scale from G (low efficacy) to A (high efficacy) Programme time for standard cleaning cycle in minutes The duration of the left-on mode in minutes Noise in dB(A) Re 1pW Built-in model INDESIT DSR 57M19 10 A+ 237 0.

83 0.5 5.0 2800 A 180 12 49 No NOTES 1) The information on the label and fiche relates to the standard cleaning cycle, this programme is suitable to clean normally soiled tableware and it is the most efficient programme in terms of combined energy and water consumption. The standard cleaning cycle corresponds to the Eco cycle. 2) Based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption depends on how the appliance is used. 3) Based on 280 standard cleaning cycles. Actual water consumption depends on how the appliance is used. 4 Electrical Connection Electrical Connection If your appliance is supplied with a 13 amp. fused plug it can be plugged into a 13 amp socket for immediate use.

Before using the appliance please read the instruction below. As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminal in your plug, proceed as follows: connect Green & Yellow wire to terminal marked "E" or coloured Green or Green & Yellow. Connect Brown wire to terminal marked "L" or coloured Red. Connect BluE on the dishes and on the machine's functional components. • It is important that the salt dispenser be never empty.

• It is important to set the water hardness. The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: • When the LOW RINSE AID indicator light in the control panel is lit \*; • When the green float\* on the cap of the salt dispenser is no longer visible. • See autonomy in the water hardness table. 1. Remove the lower rack and unscrew the container cap (anticlockwise).

2. Only the first time you do this: fill the water dispenser up to the edge. 3. Position the funnel (see figure) and fill the salt container right up to its edge (approximately 1 kg); it is not unusual for a little water to leak out. 4. Remove the funnel and wipe any salt residue away from the opening; rinse the cap under running water and then screw it on. It is advisable to perform this procedure every time you add salt to the container. Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). Whenever you need to add salt, we recommend carrying out the procedure before the washing cycle is started. Water Hardness Table level 1 2 3 4 5\* °dH 0-6 6 - 11 12 - 17 17 - 34 34 - 50 °FH 0 - 10 11 - 20 21 - 30 31 - 60 61 - 90 mmol/l 0-1 1.

1 - 2 2.1 - 3 3.1 - 6 6.1 - 9 Average autonomy salt dispenser with 1 wash cycle per day months 7 months 5 months 3 months 2 months 2/3 weeks GB Measuring out the refined salt For values between 0°f and 10°f, we do not recommend the use of salt. A setting of 5 may increase cycle duration. (°dH = hardness measured in German degrees - °f = hardness measured in French degrees – mmol/l = millimoles per litre) Rinse aid makes dish DRYING easier. The rinse aid dispenser should be filled: • When the LOW RINSE AID indicator light on the panel/display is lit \*; • When the dark optical indicator on the dispenser door "E" becomes transparent.



[You're reading an excerpt. Click here to read official INDESIT DSR 57M19 A S EU user guide](http://yourpdfguides.com/dref/5793364)  
<http://yourpdfguides.com/dref/5793364>

1. Open the dispenser by turning the cap "G" in an anticlockwise direction. 2.

Pour in the rinse aid, making sure it does not overflow from the dispenser. If this happens, clean the spill immediately with a dry cloth. 3. Screw the cap back on. NEVER pour the rinse aid directly into the tub.

Measuring out the rinse aid Adjusting the amount of rinse aid If you are not completely satisfied with the drying results, you can adjust the quantity of rinse aid used. Turn the adjuster "F". A maximum of 4 levels can be set according to the dishwasher model. The factory setting is for a medium level. • If you see bluish streaks on the dishes, set a low number (1-2).

• If there are drops of water or limescale marks on the dishes, set a high number (3-4). Setting the water hardness For perfect water softener operation, it is essential that the adjustment be based on the water hardness in your house. Ask your local water supplier for this information. The factory setting is for medium water hardness. • Switch the dishwasher on using the On/Off button. • Switch it off using the On/Off button • Hold down the START/PAUSE button you hear a beep. • Switch it on using the On/Off button • The display shows the current selection level number and the salt indicator light. • Press button P to select the desired hardness level (see Hardness Table). • Switch it off using the On/Off button • Setting is complete! for 5 seconds until \* Only available in selected models. 7 Loading the racks GB Tips Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and containers.

No preventive rinsing is needed under running water. Arrange the crockery so that it is held in place firmly and does not tip over; and arrange the containers with the openings facing downwards and the concave/convex parts placed obliquely, thus allowing the water to reach every surface and flow freely. Make sure that the lids, handles, trays and frying pans do not prevent the spray arms from rotating. Place any small items in the cutlery basket. Since plastic dishes and non-stick frying pans usually retain more water drops, their drying will be not so good as that of ceramic or stainless-steel dishes. Lightweight items such as plastic containers should be placed in the upper rack and arranged so that they cannot move. After loading the appliance, make sure that the spray arms can rotate freely. Cutlery basket The basket is equipped with top grilles for improved cutlery arrangement. The cutlery basket should be positioned only at the front of the lower rack. Upper rack Load this rack with delicate and lightweight crockery such as glasses, cups, saucers and shallow salad bowls.

Lower rack The lower rack can hold pans, lids, dishes, salad bowls, cutlery etc. Large plates and lids should ideally be placed at the sides. Adjustable position tip-up compartments\* The side tip-up compartments can be positioned at three different heights to optimize the arrangement of the crockery inside the rack. Several dishwasher models are fitted with tip-up sectors\*. They can be used in a vertical position when arranging dishes or in a horizontal position (lower) to load pans and salad bowls easily.

Some models are equipped with Vertical Zone, special pull-out supports\* in the rear of the rack that can be used to support frying pans and baking pans in a more vertical position, thus taking up less space. In order to use it, just get hold of the coloured grip and pull it upwards while rotating it forward. The supports can slide right and left to fit the size of the crockery. Very soiled dishes and pans should be placed in the lower rack because in this sector the water sprays are stronger and allow a higher washing performance. Wine glasses can be placed safely in the tip-up compartments by inserting the stem of each glass into the corresponding slot.

For optimum drying results incline the tip-up compartments more. To change the inclination, pull up the tipup compartment, slide it slightly and position it as you wish. \*Only available in selected models with different numbers and positions. 8 Tray\* Adjusting the height of the upper rack The height of the upper rack can be adjusted: high position to place bulky crockery in the lower rack and low position to make the most of the tip-up compartments by creating more space upwards. The height of the upper rack should be adjusted WHEN THE RACK IS EMPTY. NEVER raise or lower the rack on one side only. Some dishwasher models are fitted with a sliding tray which can be used to hold small crockery and cutlery. @@The cutlery tray can be removed. @@@@Their decorations are not resistant. @@• Copper and tin crockery.

• Crockery soiled with ash, wax, lubricating grease or ink. @@Some types of glass (e.g. @@• Chemical composition of detergent. @@• Use a delicate detergent suitable for crockery. @@@@The amount can be adjusted to the soil level. @@If tablets are used, one tablet will be enough. @@@@For further questions please ask the detergent producers. @@@@DO NOT USE washing up liquid. @@@@Turn the water tap on.

2. Press the ON/OFF button. 3. @@Load the racks (see Loading the racks) and close the door. 5.

Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles) by pressing the P button. 6. Select the wash options\* (see Options). 7. Press the Start/Pause button to start the cycle (fixed light): a long beep signals the start of the wash cycle, the cycle indicator lights up and the display shows the cycle number and the time remaining until the end of the cycle.

8. Two short beeps and one long beep indicate the end of the wash cycle, the Start/Pause button switches off and the word END appears on the display. Switch off the appliance by pressing Starting the dishwasher the ON/OFF button. 9. Wait for a few minutes before removing the crockery - to avoid burns. Unload the racks, beginning with the lower level. The machine will switch off automatically during long periods of inactivity in order to minimise electricity consumption. AUTO WASH CYCLES\*: some models of dishwasher are equipped with a special sensor which can be used to assess the level of soiling and automatically select the most efficient and economic wash cycle accordingly. The duration of the auto wash cycles may vary due to the operation of the sensor. Changing a wash cycle in progress If a mistake was made in the wash-cycle selection process, it is possible to change the cycle provided that it has only just begun: Once the wash cycle has started, in order to change the wash cycle switch off the machine by pressing and holding the ON/ OFF/Reset button.

Switch it back on using the same button and select the desired wash cycle and options. Adding extra crockery Press the Start/Pause button and open the door, taking care to avoid the escaping steam. Then place the crockery inside the dishwasher. Press the Start/Pause button: The cycle will start again after a long beep has been emitted.



[You're reading an excerpt. Click here to read official INDESIT DSR 57M19 A S EU user guide](http://yourpdfguides.com/dref/5793364)  
<http://yourpdfguides.com/dref/5793364>

If the delayed start has been set, at the end of the countdown the wash cycle will not start. It will stay in Pause mode. Press the Start/Pause button to pause the machine; the wash cycle is stopped. At this stage the wash cycle cannot be changed. Accidental interruptions If the door is opened during the wash cycle or there is a power cut, the cycle stops. It starts again from the point at which it was interrupted once the door has been shut or the electricity supply restored.

\* Only available in selected models. 10 Wash cycles Wash-cycle data is measured under laboratory conditions according to European Standard EN 50242. Based on the different conditions of use, the wash-cycle duration and data can change. The number and type of wash cycles and options may vary depending on the dishwasher model. GB Wash cycle Wash cycle which include drying Yes Yes Yes No Yes No No Options Delayed start – Half Load - Tabs Delayed start – Half Load - Tabs Delayed start – Half Load - Tabs Delayed start – Half Load - Tabs Delayed start – Half Load - Tabs Delayed start – Tabs Delayed start – Half Load Approximate duration of wash cycles h:min.

03:00' 02:30' 02:00' 01:00' 01:40' 00:25' 00:10' Water consumption (l/cycle) 10 14 13,5 10,5 10 8,5 4,0 Energy consumption (KWh/cycle) 0,83 1,3 1,15 0,95 0,95 0,5 0,01 1. Eco 2. Intensive 3. Normal 4. Daily 5.

Delicates 6. Rapid 7. Prewash Instructions on wash-cycle selection and detergent dosage 1. The ECO wash cycle is the standard cycle to which the energy label data refers. It can be used to wash crockery with a normal soil level and is the most efficient cycle in terms of energy and water consumption for this type of crockery. 4 gr/ml\*\*+ 21 gr/ml – 1 Tab (\*\*Quantity of pre-washing detergent) 2. Heavily soiled dishes and pans (not to be used for delicate items). 25 gr/ml – 1 Tab 3. Normally soiled pans and dishes. 4 gr/ml\*\*+ 21 gr/ml – 1 Tab 4.

Limited quantity of daily soiling (ideal for 4 place settings) 25 gr/ml – 1 Tab 5. Cycle for delicate items, which are more sensitive to high temperatures 25 gr/ml – 1 Tab 6. Fast cycle to be used for slightly dirty dishes (ideal for 2 place settings) 21 gr/ml – 1 Tab 7. Pre-wash while awaiting completion of the load with the dishes from the next meal. No detergent. Standby consumption: Left-on mode consumption: 5 W - Off mode consumption: 0.5 W. 11 Special wash cycles and Options GB Notes: Optimum performance levels when using the "Daily" and "Rapid" cycles can be achieved by respecting the specified number of place settings. To reduce consumption even further, only run the dishwasher when it is full. Note for Test Laboratories: for information on comparative EN testing conditions, please send an email to the following address: [assistenza\\_en\\_lvs@indesitcompany.com](mailto:assistenza_en_lvs@indesitcompany.com)

com Half load Option using the upper or lower rack If there are not many dishes to be washed, a half load cycle may be used in order to save water, electricity and detergent. Select the wash cycle and then press the HALF LOAD button: the indicator corresponding to the chosen rack lights up and the wash cycle starts only in the upper or lower rack. Remember to load the upper or lower rack only, and to reduce the amount of detergent accordingly. Wash options\* The OPTIONS may only be set, changed or reset after the wash cycle has been selected and before the Start/Pause button has been pressed. Only the options which are compatible with the type of wash cycle set may be selected.

If an option is not compatible with the selected wash cycle (see Table of wash cycles), the corresponding symbol flashes rapidly 3 times. If an option is selected which is not compatible with another (previously selected) option, it will flash 3 times and switch off, while the most recently selected option will remain active. To deselect an option which has been set by mistake, press the corresponding button again. Multi-functional tablets Option (Tabs) This option optimises washing and drying results. When using multi-functional tablets, press the MULTIFUNCTIONAL TABLETS button; the corresponding symbol will light up.

If the button is pressed again, the option will be deselected. The "Multi-functional tablets" option results in a longer wash cycle. Delayed start Option It is possible to delay the start time of the cycle by a period of time between 1 and 24 hours: 1. Select the desired wash cycle and any other options required; press the DELAYED START button. The indicator light will go on. Use the same button to select when the wash cycle will start (h01, h02 etc.) 2. Confirm the selection using the START/PAUSE button to start the countdown. 3. Once this time has elapsed, the DELAYED START indicator light goes off and the wash cycle begins.

To deselect the DELAYED START option, press the DELAYED START button until the text OFF appears. The Delayed Start function cannot be set once a wash cycle has started. \* Only available in selected models. 12 Care and maintenance Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks. • Always unplug the appliance when cleaning it and when performing maintenance work. • The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water. Do not use solvents or abrasive products. • Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar. Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They must be cleaned if you wish to achieve the best results in every wash.

Clean the filters regularly. The dishwasher must not be used without filters or if the filter is loose. • After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. 1).

2. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. 2); 3. Slide out the stainless-steel plate filter A. (fig. 3). 4. Inspect the trap and remove any food residues. NEVER REMOVE the wash-cycle pump protection (black detail) (fig.4). GB Cleaning the dishwasher • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. • Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours. Preventing unpleasant odours Food residue may become encrusted onto the spray arms and block the holes used to spray the water. It is therefore recommended that you check the arms from time to time and clean them with a small non-metallic brush.



[You're reading an excerpt. Click here to read official INDESIT DSR  
57M19 A S EU user guide  
http://yourpdfguides.com/dref/5793364](http://yourpdfguides.com/dref/5793364)



The two spray arms may both be removed. To remove the upper spray arm, turn the plastic locking ring in an anti-clockwise direction. The upper spray arm should be replaced so that the side with the greater number of holes is facing upwards. Cleaning the spray arms C 1 A 3 The lower spray arm can be removed by pressing on the side tabs and pulling it upwards. After cleaning the filters, re-place the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher. Leaving the machine unused for extended periods If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher. Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap. -

Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water.

- Re-place the filter and screw the water hose back into position. Cleaning the water inlet hose\* • Disconnect the appliance from the electricity supply and shut off the water tap. • Leave the door of the appliance ajar. • When you return, run a wash cycle when the dishwasher is empty. \* Only available in selected models.

13 Troubleshooting GB Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: Possible causes / Solutions: The dishwasher does not start • The water supply tap is not turned on, or cannot be controlled. • Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the wash cycle. • The appliance has not been plugged in properly or another electricity socket should be used.

• The dishwasher door has not been closed properly. The door won't close. No water drain out of the dishwasher. • Make sure that the racks were inserted all the way. • The lock was released. Strongly push the door until a "clacking" noise is heard. • The wash cycle has not finished yet. • The water drain hose is bent (see Installation). • The drain duct is clogged up. • The filter is clogged up with food residues.

• Check the height of the drain hose. • The dishes are rattling against each other or against the sprayer arms. Place the dishes properly and make sure the sprayer arms can rotate freely. • Too much foam: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. (See Detergent and dishwasher use.) Do not prewash the dishes by hand. • No refined salt. • Water hardness adjustment is not suitable: increase the relevant values. (See Refined Salt and Rinse Aid.) • The salt and rinse-aid dispenser cap has not been closed properly.

• The rinse aid has been used up or the dosage is too low. • The rinse aid dosage is too high. • A wash cycle without a drying programme has been selected. • The rinse aid has been used up. (See Refined Salt and Rinse Aid.

) • The rinse aid dispenser setting is not suitable. • The crockery is made from non-stick material or plastic; the presence of water drops is normal. • The crockery has not been arranged properly. • The sprayer arms cannot rotate freely, being hindered by the dishes. • The wash cycle is too gentle (see Wash Cycles).

• Too much foam: the detergent has not been measured out correctly or it is not suitable for use in dishwashers. @@@@ • The holes in the sprayer arms are clogged up. @@ • The water inlet hose is bent (see Installation). • The filters are clogged up: they need cleaning. @@ • After checking and cleaning, switch the dishwasher on and off and start a new wash cycle. • If the problem persists, turn off the water tap, remove the plug and call the Service Centre. The dishwasher makes excessive noise. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly.

The dishes are not clean. The dishwasher won't load any water. It is blocked with flashing lights. \* Only available in selected models. 14 Guarantee Guarantee 12 months Parts and Labour Guarantee Your appliance has the benefit of our manufacturer's guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you. This guarantee is subject to the following conditions: - - - - - The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.

Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: - - - Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory.

These included but not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NONDOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers.

There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on 08448 24 24 24 (Republic of Ireland 01 230 0800) Extended Guarantees We offer a selection of protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call.



[You're reading an excerpt. Click here to read official INDESIT DSR](#)

[57M19 A S EU user guide](#)

<http://yourpdfguides.com/dref/5793364>

15 After Sales Service GB 07/2014 jk - Xerox Fabriano 195126027.00 - NC After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us – the manufacturer. Essential Contact Information Indesit Service We are the largest service team in the UK and Ireland offering you access to 400 skilled telephone advisors and 1000 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 [www.indesitservice.co.uk](http://www.indesitservice.co.uk)

co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 [www.indesitservice.co.uk](http://www.indesitservice.co.uk) Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 [www.indesitservice.co](http://www.indesitservice.co).

uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling and Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug, and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into mains socket, and the door cannot be locked shut.

16 .



[You're reading an excerpt. Click here to read official INDESIT DSR 57M19 A S EU user guide](#)  
<http://yourpdfguides.com/dref/5793364>