



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT EDCE H G45 B. You'll find the answers to all your questions on the INDESIT EDCE H G45 B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT EDCE H G45 B
User guide INDESIT EDCE H G45 B
Operating instructions INDESIT EDCE H G45 B
Instructions for use INDESIT EDCE H G45 B
Instruction manual INDESIT EDCE H G45 B



[You're reading an excerpt. Click here to read official INDESIT EDCE H G45 B user guide](http://yourpdfguides.com/dref/5922485)
<http://yourpdfguides.com/dref/5922485>

Manual abstract:

Com This symbol reminds you to read this instruction manual. Keep this manual at hand for immediate reference whenever necessary. @@ sorting laundry Care labels Drying times Troubleshooting , 31 Assistance , 32 Spare parts Essential Contact Information Information on recycling and disposal ! Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance. 17 Installation Where to install the tumble dryer • Install the dryer far from gas ranges, stoves, radiators or hobs, as flames may damage it. If the dryer is installed below a worktop, en15 mm 15 mm sure there are 10 mm between the upper panel of the dryer and any objects above it, and 15 mm between the sides of the machine and the walls or furniture units adjacent to it. this ensures adequate air circulation. The appliance must be installed with the rear surface placed against a wall. Ventilation 10 mm EN Electrical connections Before plugging the appliance into the socket, check the following: • Make sure your hands are dry. □ The socket must have an earth connection. □ The socket must be able to withstand the machine's maximum power output as indicated on the rating plate (see Description of the tumble dryer) • The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer). □ The socket must be compatible with the dryer's plug. Should this not be the case, replace the plug or the socket. The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. ! Once installed, the dryer's electrical wire and plug must be within reach. ! The power cord must not be bent or squashed. ! If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard. ! The power must be regularly checked. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

(see Assistance). New or longer electric cords are supplied by authorised dealers at a supplementary cost. ! The manufacturer denies any responsibility should any of these rules not be followed. ! If in doubt about any of the above consult a qualified electrician. Preliminary information Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation. □ The room must be adequately ventilated while the dryer is running. Make sure that the dryer is installed in a room free of humidity and with adequate air circulation. The flow of air around the dryer is essential to allow water to condense during drying; the dryer will not function properly if it is placed in an enclosed space or inside a cabinet. ! Some condensation may form if the dryer is used in a small or cold room. ! We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door.

Water drain If your dryer is installed next to a drain the water can be plumbed into this drain. This does away with the need to empty the water container. If the dryer is stacked onto or installed next to a washing machine it can share the same drain. The height of the drain must be less than 3' (1 m) from the bottom of the dryer. Remove existing hose from position shown in picture A and fit a suitable length of hose and connect as shown in picture B. ! The drain tube has to be below 1 m from the bottom of the Dryer ! Make sure that the hose is not squashed or kinked when the dryer is in its final location. 1 2 2 1 Picture A Picture B 18 Less than 1m Maximum load sizes: maximum 8 kg EN Product Data - Regulation 392/2012. Brand Indesit Model EDCE H G45 B (FR) Rated capacity of cotton laundry for the "standard cotton programme" at full load - kg This household tumble drier is a Energy efficiency class on a scale from A+++ (low consumption) to D (high consumption) The weighted Annual Energy Consumption (AEc)* kWh 1) This household tumble drier is a Energy consumption full load; Edry - kWh 2) Energy consumption partial load; Edry½ - kWh 2) Power consumption: off-mode (Po) - Watts Power consumption: left-on mode (Pl) - Watts Duration of the 'left-on mode' for power management system minutes Prog. Time - weighted (Tr) full & partial load - minutes 3) Full load (Tdry) - minutes Partial load (Tdry½) - minutes Condensation efficiency class on a scale from G (least efficient) to A (most efficient) Average condensation efficiency - % weighted (Ct) full & partial load 3) full load (Cdry) partial load (Cdry½) Airborne acoustical noise emissions - dB(A) re 1 pW 8. 0 1) "Standard cotton" at full and partial load is the standard programme to which the information in the label and the fiche relates.

The standard cotton program is suitable to dry at cupboard level (0%) cotton laundry and is the most efficient programme in terms of energy consumption. Partial load is half the rated load. 2) based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. Energy consumption in kWh, for program "Synthetics" full load Programme time in minute, for program "Synthetics" full load Partial load for program "Synthetics" N/A 2.

1 90 19 Warnings EN ! This appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be followed carefully. General safety • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. □ This tumble dryer has been designed for home, and not professional, use. □ Do not touch the appliance while barefoot or with wet hands or feet.

□ Unplug the machine by pulling on the plug, not the cord. □ After using the dryer, turn it off and unplug it. Keep the door closed to make sure that children do not use it as a toy. □ Children should be supervised to ensure that they do not play with the dryer. □ Cleaning and user maintenance shall not be made by children without supervision. □ Children of less than 3 years should be kept away from the appliance unless continuously supervised. □ The appliance must be installed correctly and have proper ventilation. The air intake at the front of the dryer should never be obstructed (see Installation). □ Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base.



[You're reading an excerpt. Click here to read official INDESIT EDCE H G45 B user guide](http://yourpdfguides.com/dref/5922485)
<http://yourpdfguides.com/dref/5922485>

□ Check to see if the dryer is empty before loading it.

□ The back of the dryer could become very hot. Never touch it while in use. □ Do not use the dryer unless the filter, water container and condenser are securely in place (see Maintenance). □ Do not overload the dryer (see Laundry for maximum loads). □ Do not load items that are dripping wet. • Carefully check all instructions on clothing labels (see Laundry). □ Do not tumble dry large, very bulky items. □ Do not tumble dry acrylic fibres at high temperatures.

□ Do not turn off the dryer when there are still warm items inside. □ Clean the filter after each use (see Maintenance).

□ Empty the water container after each use (see Maintenance). □ Clean the condenser unit at regular intervals (see □ Maintenance). □ Do not allow lint to collect around the dryer. □ Always buy original spare parts and accessories (see Service). To minimise the risk of fire in your tumble dryer, the following should be observed: • Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle.

It is a fire hazard to dry items that HAVE NOT been washed with water. □ • Do not dry garments that have been treated with chemical products. □ Do not tumble dry items that have been spotted or soaked with vegetable or cooking oils, this constitutes a fire hazard. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil,

Oxidation creates heat.

If the heat cannot escape, items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics containing vegetable or cooking oil or those that have been contaminated with hair care products be placed in a tumble dryer they should first be washed with extra detergent - this will reduce, but not eliminate the hazard. They should not be removed from the dryer and piled or stacked while hot. □ Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances. Highly flammable 20 substances commonly used in domestic environments including cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer. □ • Do not tumble dry items containing foam rubber (also known as latex foam), or similarly textured rubber like materials. Foam rubber materials can, when heated, produce fire by spontaneous combustion. □ • Fabric softener or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener product.

□ Do not tumble dry undergarments that contain metal reinforcements eg. bras with metal reinforcing wires. Damage to the tumble dryer can result if the metal reinforcements come loose during drying. □ • Do not tumble dry rubber, plastic articles such as shower caps or babies waterproof covers, polythene or paper. □ Do not tumble dry rubber backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes. WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Save energy and respect the environment • Wring out all items to eliminate excess water before tumble drying (if you use a washing machine first, select a high spin cycle). Doing this will save time and energy during drying. □ Always dry full loads - you save energy: single items or small loads take longer to dry. □ Clean the filter after each use to contain energy consumption costs (see Maintenance).

EN 21 Care and maintenance EN Disconnecting the power supply Cleaning the filter after each cycle ! Disconnect the dryer when not in use or during cleaning and mainf the button is pressed for 3 seconds while the dryer is in use, the machine will switch off and the running cycle will reset. Programme selection knob Allows for setting the programme: turn until the indicator points towards the desired programme (see Starting and selecting a programme).

Options buttons Allows selection of the options available for the selected programme. The respective indicator lights turn on when the option has been selected (see Programmes and options). START/PAUSE button and indicator light When the green light flashes slowly, press the button to start the programme.

When the cycle is under way, the indicator light remains on. Press the button again to put the programme in the pause mode; the indicator light turns orange and starts flashing again. Press the button again to resume the programme from the point it was interrupted (see Starting and selecting a programme).

Display In section A, the selected "Timed drying" value is displayed; if the "Delay start" function was set, the time remaining to the start of the selected programme will appear. The duration of the selected programme is also displayed in this section.

In section B, the phase of the running programme is displayed: Sun icon Fan icon : Drying cycle : COOL TUMBLE cycle , Clean filter indicator light , EN In section C, the maintenance indicator lights are displayed (Empty water container indicator light Clean condenser unit indicator light) , see Indicator lights. C B A Indicator lights The indicator lights provide important information. They indicate the following: The "Empty water container" indicator light signals that the water container must be emptied. If the water container fills during the course of the programme, the LED lights up. The dryer automatically starts a cool air cycle and the START/PAUSE LED flashes orange. Press the START/PAUSE button to resume the cycle from the point it was interrupted. In order to avoid this procedure, always empty the water container after using the tumble dryer (see Maintenance). Before each programme, the "Clean filter" indicator light (see Maintenance). The "Clean condenser unit" indicator light signals the fundamental importance of cleaning the filter before each load signals the fundamental importance of cleaning the condenser regularly (see Maintenance). 25 How to carry out a drying cycle Starting and selecting a programme EN

1.

Plug the dryer into the power supply socket. 2. Select the programme according to the type of laundry (see Laundry). 3. Open the door, ensure that the filter is clean and securely placed and that the water container is empty and correctly slotted (see Maintenance). 4. Load the machine, making sure that no piece of laundry gets between the door and the relative seal. Press the ON/OFF button to switch on the machine.



[You're reading an excerpt. Click here to read official INDESIT EDCE](http://yourpdfguides.com/dref/5922485)

[H G45 B user guide](http://yourpdfguides.com/dref/5922485)

<http://yourpdfguides.com/dref/5922485>

6. After consulting the programme chart and the indications for each type of fabric (see Laundry), turn the Programme selection knob towards the programme corresponding to the type of laundry to be dried (see Programmes and options).

! Warning: If the position of the programme selection knob changes after pressing the START/PAUSE button, the selected programme will NOT be modified. To modify the programme, press the START/PAUSE button to put the programme in pause mode (the indicator light flashes orange), then select a new programme and the relative options. Press the START/PAUSE button to start the new programme. 7. Select the "Timed Drying" function by pressing the timed drying button until the required time is displayed (see Programmes and options).

8. If necessary, set the time of the delayed start and any other options (see Programmes and options). 9. Press the ALARM button to sound a buzzer signalling the end of the programme. 10.

Press the START/PAUSE button to start the drying cycle. The display will show the approximate time remaining. Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the START/PAUSE button to resume machine operation. The fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 12. At the end of the drying cycle the display shows END. The buzzer will beep 3 times to let you know that your programme is complete. (Note: If the SOUND option was selected the buzzer beeps 3 times every 30 seconds for 5 minutes). Open the door, remove the laundry then clean the filter and replace it.

Empty the water container and put it back in its slot (see Maintenance). If the clothes are not removed at the end of the cycle the automatic Anti Crease action will, on those programmes with this feature, continue to rotate the drum intermittently for up to 10 hours to minimise creasing. Opening the door or pressing the OFF button will stop the Anti Crease action. 13. Disconnect the dryer from the power supply. Automatic pre-post Anti Crease This is an automatic function which provides an anti crease treatment both before and after the drying programme. By periodically rotating the drum before the start of the drying cycle, when a delayed start is selected, the formation of creases is prevented. On certain programmes the drum also rotates periodically at the end of the drying cycle on. This post crease care action continues until either the door is opened or the OFF button is pressed. Standby mode This tumble dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press and hold the ON/OFF button until the dryer reactivates. The duration of the drying cycles can be checked on the display. 3. 7 Cotton ready to wear 8 Synthetics 9 Jeans Special Care 10 Baby&Delicates 11 Wool 12 Duvet 13 Gym kit 14 Special Shoes Post Dry 15 Crease Relax 16 Freshen UP 3 2 1 1,5 4 1 pair Memo - Key Lock. NOTES: 1 with this option the maximum load size is modified. refer to the option description.

@@@ Shake the pieces of clothing before introducing them into the dryer. @@@ even drier than Standard Cotton. Jeans □ This is a programme for jeans made from denim cotton. Before drying your jeans turn the front pockets inside out. □ Do not mix dark and light coloured items. @@@@ ! @@@@ Do not dry articles which have plastic covering. @@ it is suitable for loads of up to 1 kg (about 3 jerseys). We recommend turning the garments inside out before drying them. @@@@ e. The garment does not resume its original dimension and shape. This programme is not suited for acrylic items. @@@@ Place shoelaces inside the shoes then load with the tips of the shoes facing downwards and the soles frontwards. Drying times vary according to the shape and type of the shoe. If the shoes are not completely dry at the end of the programme, restart the programme. ! Do not dry shoes that have gel or flashing lights inside them.

Only dry shoes made of synthetic material or rope. Once the programme ends, remove the shoe rack and replace the filter into its holder. Crease Relax A short 10-minute programme that relaxes the garment's fibres in order to facilitate ironing and folding. This programme is particularly recommended for cotton or mixed cotton fabrics. For optimal results, do not overload the drum (the following values refer to the weight of dry garments): Fabric: maximum load Cotton and mixed cotton: 2.5 kg Synthetic garments: 2 kg Jeans: 2 kg Empty the dryer as soon as the programme ends; hang, fold or iron garments then place them in the wardrobe. If this is not possible, repeat the programme. As this is not a drying programme, it is not to be used for garments that are still wet. The effect produced by the programme varies according to the characteristics of the each fabric: fabrics such as acrylic fibres or Tencel® do not give the same results as traditional fibres (e. Freshen Up A short programme suitable for refreshing fibres and garments.

As this is not a drying programme, it is not to be used for garments that are still wet. □ It can be used on any load size but is more effective on smaller loads. 28 Options The options allow for customising the selected programme according to one's own needs. Timed drying After selecting a programme, press the "Timed drying" button to enter a drying time. Every time this button is pressed, the duration of the selected drying cycle appears on the display.

When pressed the first time, the highest allowed value for the selected cycle appears on the display. When pressed each of the following times, the set time is reduced until OFF appears. The buzzer will activate if the timed drying option is not available. Delay Timer The start of some programmes (see Programmes and options) may be delayed up to 24 hours. Before selecting a programme with a delayed start make sure that the water bottle is empty and the filter is clean.

The drum will rotate occasionally before the drying programme starts to prevent the formation of creases. Extra Care This is a special option designed to gently dry delicate clothes. Press this button to select the low temperature setting; the light next to the button will switch on. Activating this option will increase the duration of the cycles. EN Energy Saver An option designed to optimise the results when drying small loads (cotton loaded to a max. Memo This option allows you to store your cycle selection along with any associated options and to easily use a previously stored cycle. delayed start options cannot be stored. □ Press and hold the button MEMO for 3 second to store a cycle. You can press this button when the desired cycle and associated options have been selected either before the cycle has started or during the drying cycle. When you press and hold the Memo button the LED flashes as well as the time on the display and after 3 second a beep will confirm that the details have been stored.



[You're reading an excerpt. Click here to read official INDESIT EDCE H G45 B user guide](http://yourpdfguides.com/dref/5922485)
<http://yourpdfguides.com/dref/5922485>

□ To recall the stored cycle simply turn on the dryer, press the memo button and then start the cycle. It is possible to change any of the options in the normal way. Every 2 minutes the stored cycle number will appear on the display. If no cycle has been stored you will hear a beep when the Memo button is pressed.

□ A stored programme can be overwritten with a new programme just by repeating the steps outlined above. Key Lock Keep this button pressed for a few seconds after choosing the programme and the desired options. When the warning light is on, the other buttons and the knob are deactivated. To deactivate the block keep the button pressed and the warning light goes off. The ON/OFF button switches off the machine even if the function lock button is active. Not all options are available on all programmes (see Programmes and options).

Opening the door If the door is opened (or the START/PAUSE button is pressed) while a programme is running, the dryer stops and the following may occur:

- The START/PAUSE button flashes orange. □ When a delayed start is running, the delay countdown continues. It is necessary to press the START/PAUSE button to resume the “Delay start” programme. The “Delay start” indicator light flashes and the display visualises the time remaining to the start of the selected programme. □ It is necessary to press the START/PAUSE button to resume the programme.

The progress indicator lights signal the running phase and the START/PAUSE indicator light stops flashing and turns green. □ During the post anti-crease phase, the programme ends. Pressing the START/PAUSE button reactivates a new programme from the beginning. □ By turning the Programme selection knob, a new programme is selected and the START/PAUSE indicator light flashes green. This procedure can be used to select the COOL drying programme to cool garments if they are judged to be dry enough.

Press the START/PAUSE button to start the new programme. Note: If you have a power cut, switch off the power or remove the plug. When power is restored, plug in the machine, press and hold the ON/OFF button until the dryer reactivates, then press Start/Pause button. 29 Laundry EN Sorting laundry • Check the symbols on the care labels of the various garments to verify whether the garments can be safely tumble dried. □ Sort laundry according to the type of fabric.

□ Wring out garments to remove the maximum amount of water possible. ! Do not load the dryer when garments are dripping wet. Maximum load sizes Do not overload the drum. The following values indicate the weight of dry garments: Natural fibres: maximum 8 kg Synthetic fibres: maximum 4 kg ! Do not overload the dryer as this may result in reduced drying performance. Drying times Drying times are approximate and may vary depending on the following: • Amount of water retained by items after the spin cycle: towels and delicate items retain a lot of water.

□ Fabrics: items of the same fabric, but with different texture and thickness may have different drying times. □ Amount of laundry: single items and small loads may take longer to dry. □ Drying: if items are to be ironed, they can be removed from the dryer while still slightly damp. Items that require complete drying can be left longer. • Heat setting. □ Temperature of the room: the lower the temperature of the room, the longer it will take for the dryer to dry clothing. □ Bulk: certain bulky items require special care during the drying process. We suggest removing these items and replacing them in the dryer once they have been shaken out: repeat this procedure several times during the course of the drying cycle. All fabrics contain natural dampness which helps to keep them soft and fluffy. The drying times provided refer to the automatic Cupboard dry programmes.

The Timed drying settings are also indicated to enable you to select the most suitable timed option. The weight refers to dry items. Care labels Always check the care labels, especially when placing garments in the tumble dryer for the first time. Below are the most commonly used symbols: May be tumble dried.

Tumble dry – low heat.

Automatic drying times Cotton High Heat Drying times after 800-1000 rpm wash cycles 1 kg Automatic (hrs:mins) Timed (hrs:mins) Synthetics Low Heat Drying times after wash cycles at lower speeds 1 kg Automatic (hrs:mins) Timed (hrs:mins) Acrylics Low Heat Drying times after wash cycles at lower speeds 1 kg Automatic (hrs:mins) Timed (hrs:mins) 0:40 - 1:20 0:30 0:30 - 0:40 0:30 or 1:00 0:30-0:40 0:30 or 1:00 2 kg 0:40-0:55 0:40 or 1:20 3 kg 0:55-1:10 0:50 or 1:20 4 kg 1:10-1:20 1:00 or 1:40 5 kg 1:20-1:30 6 kg 1:35-2:00 7 kg 2:00-2:20 2:20 or 3:00 8 kg 2:10-2:40 2:40 or 3:00 1:20 or 2:00 2:00 or 2:40 2 kg 0:40 - 0:50 0:40 or 1:20 3 kg 0:50 - 1:10 1:00 or 1:30 4 kg 0:70 - 1:30 1:20 or 1:40 2 kg 1:00 - 1:40 1:00 30 Troubleshooting If you feel that the dryer is not working properly, consult the following troubleshooting suggestions before contacting the Technical Assistance Centre (see Assistance). The dryer does not start. □ •••••••• The plug has not been inserted far enough into the socket to make contact. There has been a power cut. the fuse has blown.

Try connecting another appliance to the same socket. If an extension cord is used, try connecting the dryer plug directly into the socket. The door has not been closed properly. The programme has not been set correctly (see How to carry out a drying cycle). The START/PAUSE button has not been pressed (see How to carry out a drying cycle). On machines equipped with “Locked” function, check the option is not enabled (see Programmes and options). □ The START/PAUSE button has been pressed; a short delay follows before the dryer starts running. Wait for the drying cycle to start; do not press the START/PAUSE button otherwise the dryer switches to the pause mode and the drying cycle will not start. The “Empty water container” indicator light flashes and the message appears “h2o” (see Maintenance). • The condenser needs to be cleaned (see Maintenance).

□ The heat setting is not suited to the type of fabric to be dried (see Programmes and options). □ An incorrect drying time was selected for the type of load (see Laundry). The “Empty water container” indicator light flashes, but the dryer has been running for a short time. □ The water container was probably not emptied before starting the programme. Do not wait for the signal for emptying the water container, but always check and empty it before starting a new drying programme (see Description of the tumble dryer). The “Empty water container” indicator light is on but the water container is not full. □ It is normal: the “Empty water container” indicator light flashes when the water container is full. If the indicator light is on but is not flashing, it is just a reminder to empty the container (see Description of the tumble dryer).



[You're reading an excerpt. Click here to read official INDESIT EDCE H G45 B user guide](http://yourpdfguides.com/dref/5922485)

<http://yourpdfguides.com/dref/5922485>

The programme is finished but the items are damper than expected. ! For safety reasons, the dryer programmes last a maximum of 5 hours. If an automatic programme has not detected the final dampness level required in this interval, the dryer completes the programme and stops. Check the above points and repeat the programme; if the items are still damp, contact the Technical Assistance Centre (see Assistance). The code "F" appears on the display followed by one or two numbers, the options indicator lights and the pause indicator light flash. □ If the display shows a fault, switch the appliance off and unplug it, then clean the filter and the Heat Pump Filter unit (see Maintenance). Reinsert the plug, switch the appliance on and start another programme. If the display still visualises a fault, contact the Technical Assistance Centre (see Assistance). If the display still visualises other numbers, mark the code and contact the Technical Assistance Centre (see Assistance). □ dOn" briefly appears on the display every 6 seconds. • The appliance is in "Demo" mode. Press the ON/OFF and START/PAUSE buttons and keep them pressed for 3 seconds.

The display visualises "dOn" for 3 seconds, then the dryer starts functioning normally. The "Remaining time" indicator changes during the drying cycle. □ The remaining time is constantly monitored during the drying cycle and is updated to show the best forecast. It is normal for the displayed time to increase during the cycle. The dryer is noisy during the first few minutes of operation. □ This is normal, especially if the dryer has not been used for a long time. If the noise persists during the entire cycle, contact the Technical Assistance Centre. The lights on the dryer control panel are off although the dryer is switched on. □ The dryer has gone into standby mode to save power. This occurs if you have left the dryer on or have had a power cut.

@@ Press the On/Off button and the lights will come on again. @@@@ Product Guarantee And Repair Information Guarantee 12 Months Parts and Labour Guarantee Your appliance has the benefit of our manufacturer's guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you: This guarantee is subject to the following conditions: - The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. - The appliance is used only on the electricity or gas supply printed on the rating plate. - The appliance has been used for normal domestic purposes only. - The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. - Any repair work must be undertaken by us or our appointed agent. - Any parts removed during repair work or any appliance that is replaced become our property. - The appliance is used in the United Kingdom or Republic of Ireland. The guarantee does not cover: - Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. - Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. - Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. Repairs and After Sales For product help and advice, repairs, spare parts or accessories, we're here to help.

Uk/shop Please remember to register your appliance at www. Uk to activate your 10 year parts guarantee. Please note, our advisors will require the following information: model number, serial number. This information can be found on the data plate located behind the door. Information on recycling and disposal As part of our continual commitment towards environmental protection, we reserve the right to use recycled quality components to reduce costs for our customers and to minimise materials wastage.

□ Disposing of the packaging materials: follow local regulations to allow for recycling of packaging materials. □ In order to minimise the risk of injury to children, remove the door and plug, then cut the power supply cord flush with the appliance. Dispose of these parts separately to prevent the appliance from being connected to a power supply socket. European Directive 2012/19/EC concerning Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling materials comprising the machine, while preventing potential damage to public health and the environment. The crossed-out wheeled bin symbol appears on all products to remind owners of the obligations regarding separate waste collection. Owners should contact their local authorities or appliance dealers for further information concerning the correct disposal of household appliances. This appliance conforms to the following EU directives: - 2006/95/EC (Low Voltage Directive) - 2004/108/EC (Electromagnetic Compatibility Directive). .



[You're reading an excerpt. Click here to read official INDESIT EDCE H G45 B user guide](http://yourpdfguides.com/dref/5922485)
<http://yourpdfguides.com/dref/5922485>