



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT EDPA 745 A1 ECO EU. You'll find the answers to all your questions on the INDESIT EDPA 745 A1 ECO EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT EDPA 745 A1 ECO EU**

**User guide INDESIT EDPA 745 A1 ECO EU**

**Operating instructions INDESIT EDPA 745 A1 ECO EU**

**Instructions for use INDESIT EDPA 745 A1 ECO EU**

**Instruction manual INDESIT EDPA 745 A1 ECO EU**



[You're reading an excerpt. Click here to read official INDESIT EDPA 745 A1 ECO EU user guide](http://yourpdfguides.com/dref/5833497)

<http://yourpdfguides.com/dref/5833497>

### Manual abstract:

Com This symbol reminds you to read this instruction manual. Keep this manual at hand for immediate reference whenever necessary. @@@@@/ Installation GB Where to put your dryer 10 mm • Place your dryer at a distance from gas ranges, stoves, heaters, or cooktops because flames can damage the appliance. The dryer should be installed in an 15 mm 15 mm ambient room temperature of between 20 to 23°C for optimum performance. But will function if the room is between 14 and 30°C. If you are going to install the appliance under a work counter, be sure to leave a 10 mm space between the top and any other objects on or above the machine and a 15 mm space between the sides and lateral furnishings or walls. This is to ensure proper air circulation. The appliance must be installed with the rear surface placed against a wall. □ When the dryer is in use, there has to be adequate ventilation. Make sure you put your dryer in an environment that is not damp and has proper air circulation throughout.

Airflow around the dryer is essential to condense the water produced during the washing, the dryer will not operate efficiently in an enclosed space or cupboard. ! If using the dryer in a small or cold room some condensation will be experienced. Substitute the existing one as indicated in figure B inserting it in the same place. ! The drain tube has to be below 1 m from the bottom of the Dryer. ! Once the Dryer has been installed please assure that the drain tube is not bent or kinked.

ventilation ! We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door. 1 Electrical connections Before plugging the appliance into the socket, check the following: • Make sure your hands are dry. □ The socket must have an earth connection. □ The socket must be able to withstand the machine's maximum power output as indicated on the rating plate (see Description of the tumble dryer) • The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer). □ The socket must be compatible with the dryer's plug.

Should this not be the case, replace the plug or the socket. The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. ! Once installed, the dryer's electrical wire and plug must be within reach. ! The power cord must not be bent or squashed. ! If the plug being replaced is a nonrewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard. ! The power must be regularly checked. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (see Assistance).

New or longer electric cords are supplied by authorised dealers at a supplementary cost. ! The manufacturer denies any responsibility should any of these rules not be followed. ! If in doubt about any of the above consult a qualified electrician. B Water Drain If the machine is positioned close to a drain it is possible to drain the condensed water directly without using the waterbottle. In which case it is no longer necessary to empty the water bottle at the end of each cycle. If the Dryer is positioned above or close to a Washing Machine the same drainage can be used. Just remove unlink the tube indicated in figure A and connect it to the drainage. If the drainage is further away than the length of the tube it is possible to buy and connect a tube of the same diameter and the necessary length in order to reach the drainage. To install the new tube just Less than 1m Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation. 2 Levelling the tumble dryer The dryer must be installed level for correct operation.

When you have installed your dryer in its final location check that it is level first side-to-side, then front to back. If the dryer is not level, adjust the two legs up or down until your dryer is level. Maximum load sizes: 7 kg GB Before you start using our dryer Product Data - Regulation 392/2012. Brand Indesit Model IDPA 745 A ECO (EU) Rated capacity of cotton laundry for the "standard cotton programme" at full load - kg This household tumble drier is a Energy efficiency class on a scale from A+++ (low consumption) to D (high consumption) The weighted Annual Energy Consumption (AEC)\* kWh 1) This household tumble drier is a Energy consumption full load; Edry - kWh 2) Energy consumption partial load; Edry½ - kWh 2) Power consumption: off-mode (Po) - Watts Power consumption: left-on mode (Pl) - Watts Duration of the 'left-on mode' for power management system minutes Prog. Time - weighted (Ti) full & partial load - minutes 3) Full load (Tdry) - minutes Partial load (Tdry½) - minutes Condensation efficiency class on a scale from G (least efficient) to A (most efficient) Average condensation efficiency - % weighted (Ct) full & partial load 3) full load (Cdry) partial load (Cdry½) Airborne acoustical noise emissions - dB(A) re 1 pW 7.

79 30 164 215 125 C Once you've installed your dryer and before you use it, clean the inside of the drum to remove any dust that could have accumulated during transportation. warning ! Before you use your dryer ensure that its has been in a upright position for at least 6 hours. 71 72 71 69. 0 1) The "standard cotton" at full and partial load are the standard programmes to which the information in the label and the fiche relates. The standard cotton program is suitable to dry at cupboard level (0%) cotton laundry and is the most efficient programme in terms of energy consumption.

Partial load is half the rated load. 2) based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. Energy consumption in kWh, for program "Synthetics" full load Programme time in minute, for program "Synthetics" full load Partial load for program "Synthetics" N/A 0. 92 90 3 Warnings GB ! This appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be followed carefully. General safety • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. □ This tumble dryer has been designed for home, and not professional, use. □ Do not touch the appliance while barefoot or with wet hands or feet.



[You're reading an excerpt. Click here to read official INDESIT EDPA 745 A1 ECO EU user guide](http://yourpdfguides.com/dref/5833497)  
<http://yourpdfguides.com/dref/5833497>

□ Unplug the machine by pulling on the plug, not the cord.

□ After using the dryer, turn it off and unplug it. Keep the door closed to make sure that children do not use it as a toy. □ Children should be supervised to ensure that they do not play with the dryer. □ Cleaning and user maintenance shall not be made by children without supervision. □ Children of less than 3 years should be kept away from the appliance unless continuously supervised. □ The appliance must be installed correctly and have proper ventilation. The air intake at the front of the dryer should never be obstructed (see Installation). □ Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base. □ Check to see if the dryer is empty before loading it. □ The back of the dryer could become very hot. Never touch it while in use. □ Do not use liquid fabric softeners in the dryer; add it to the final rinse of your wash. □ Do not overload the dryer (see Laundry for maximum loads). □ Do not load items that are dripping wet. • Carefully check all instructions on clothing labels (see Laundry). □ Do not tumble dry large, very bulky items. □ Do not tumble dry acrylic fibres at high temperatures. 4 • Do not turn off the dryer when there are still warm items inside. □ Clean the filter after each use (see Maintenance). □ Empty the Water Container after each use (see Maintenance). □ Clean the Heat Pump filter unit at regular intervals (see Maintenance). □ Do not allow lint to collect around the dryer. □ Always buy original spare parts and accessories (see Service). **WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. To minimise the risk of fire in your tumble dryer, the following should be observed: • Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle. It is a fire hazard to dry items that HAVE NOT been washed with water. □ Do not dry garments that have been treated with chemical products. □ Do not tumble dry items that have been spotted or soaked with vegetable or cooking oils, this constitutes a fire hazard. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil. Oxidation creates heat.**

If the heat cannot escape, items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics containing vegetable or cooking oil or those that have been contaminated with hair care products be placed in a tumble dryer they should first be washed with extra detergent - this will reduce, but not eliminate the hazard. They should not be removed from the dryer and piled or stacked while hot. □ Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry cleaning ••••• solvents or other flammable or explosive substances. Highly flammable substances commonly used in domestic environments including cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer. Do not tumble dry items containing foam rubber (also known as latex foam), or similarly textured rubber like materials. Foam rubber materials can, when heated, produce fire by spontaneous combustion. Fabric softener or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener product.

□ Do not tumble dry undergarments that contain metal reinforcements eg. bras with metal reinforcing wires. Damage to the tumble dryer can result if the metal reinforcements come loose during drying. □ Do not tumble dry rubber, plastic articles such as shower caps or babies waterproof covers, polythene or paper. □ Do not tumble dry rubber backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.

**WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Save energy and respect the environment • Wring out all ternal metal, plastic and rubber parts can be cleaned with a damp cloth. quick Tips ! Remember to clean your filter and Heat Pump filter unit after each load. ! Remember to empty your water container after each load. ! Doing this will keep your machine working at its BEST! 2 Water container Filter Air intake Heat pump filter unit Catches Condenser cover Handle 7 Description of the tumble dryer GB Opening the door Features Rating plate Water container Press the door Filter Model & Serial Numbers Heat Pump Filter Unit (cover open) Heat Pump Filter Unit cover handle (Pull here to open) Air intake grille Adjustable feet (to level dryer) Control panel On/Off button buttons and indicator lights Options Start/Pause button and indicator light Programme selection knob Maintenance indicator lights Drying phase or Delay timer indicator lights 8 ON/OFF/Reset button Pressing the button normally will cause the machine to switch on or off.**

If the button is pressed for 3 seconds while the dryer is in function, the machine will switch off and the running cycle will reset. Programme selection knob Allows for setting the programme: turn until the indicator points towards the desired programme (see Starting and selecting a programme). Options buttons Allow for selecting the options available for the selected programme. The relative indicator lights turn on when the option has been selected (see Programmes and options). START/PAUSE button and indicator light When the green light flashes slowly, press the button to start the programme. When the cycle is under way, the indicator light remains on. To put the programme into pause mode, press the button again; the indicator light will turn orange and start flashing again. To resume the programme from the point it was interrupted, press the button again (see Start and programme selection). GB Indicator lights "Maintenance" indicator lights The indicator lights provide important information. They indicate the following: The "Empty water container" indicator light signals that the water container must be emptied.

If the water container fills during the course of the programme, the LED lights up. The dryer automatically starts a cool tumble cycle and the START/PAUSE LED flashes orange. Press the START/PAUSE button to resume the cycle from the point it was interrupted. In order to avoid this procedure, always empty the water container after using the tumble dryer (see Care and maintenance).



[You're reading an excerpt. Click here to read official INDESIT EDPA 745 A1 ECO EU user guide](http://yourpdfguides.com/dref/5833497)  
<http://yourpdfguides.com/dref/5833497>

Before each programme, the “Clean filter” indicator light tumble dryer (see Care and maintenance). The “Clean Heat Pump filter unit” indicator light (see Care and maintenance). Signals that it is essential to clean the filter each time before using the signals that it is essential to clean the condenser regularly (see Care and maintenance). “Drying phases” indicator lights The indicator light signals that the drying phase is running. Indicator light signals that the cooling phase is running. The END indicator light signals that the programme has ended. □ Delay timer” indicator light If the “Delay timer” option has been activated (see “Programmes and options”), after the programme has started, the indicator light corresponding to the chosen delay time will start flashing: As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Once the set delay time ends, the flashing LED will turn off and the set programme will start.

9 How to carry out a drying cycle GB Starting and selecting a programme 1. Plug the dryer into the power supply socket. 2. Select the programme according to the type of laundry (see Laundry). 3.

Open the door, ensure that the filter is clean and securely placed and that the water container is empty and correctly slotted (see Care and maintenance). 4.

Load the machine, making sure that no piece of laundry gets between the door and the door seal. Press the ON/OFF button to start the machine. 6. After consulting the programme chart and the indications for each type of fabric (see Laundry), turn the Programme selection knob towards the programme corresponding to the type of laundry to be dried (see Programmes and options). ! Warning: If the position of the programme selection knob changes after pressing the START/PAUSE button, the selected programme will NOT be modified. To modify the programme, press the START/PAUSE button to put the programme in pause mode (the indicator light flashes orange), then select a new programme and the relative options. Press the START/PAUSE button to start the new programme. 7. If necessary, set the time of the delayed start and any other options (see Programmes and options). 8. Press the START/PAUSE button to start the drying cycle. Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the START/PAUSE button to resume machine operation.

The fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 10. When the END indicator light turns on, the programme has ended. @@@@ 11. Disconnect the dryer from the power supply. @@ Press and hold the ON/OFF button until the dryer reactivates. @@@@ even drier than Standard Cotton. @@@@ It can be used for load sizes up to 2.0 kg. @@@@ it is suitable for loads of up to 1 kg (about 3 jerseys).

We recommend turning the garments inside out before drying them. @@@@ e. The garment does not resume its original dimension and shape. This programme is not suited for acrylic items. @ Special Shoes Programme This programme is specific for drying sports shoes.

The shoes must have been previously washed and spun at a minimum spin speed of 400 revolutions. A specific shoe rack is provided and must be used, otherwise the dryer will be damaged if shoes are dried in the drum. Remove the filter from its holder on the front part of the dryer and position the shoe rack. Place shoelaces inside the shoes then load with the tips of the shoes facing downwards and the soles frontwards. Drying times vary according to the shape and type of the shoe.

If the shoes are not completely dry at the end of the programme, restart the programme. ! Do not dry shoes that have gel or flashing lights inside them. Only dry shoes made of synthetic material or rope. Once the programme ends, remove the shoe rack and replace the filter into its holder. Fitness This programme is studied for safely drying garments such as tracksuits and Fitness suits bearing the up to 4 kg. We suggest turning garments inside out before drying them. symbol. Suitable for loads of Jeans □ This is a programme for jeans made from denim cotton. Before drying your jeans turn the front pockets inside out. □ Do not mix dark and light coloured items.

It can also be used on other garments made from the same material, such as jackets. Loads dried using this programme are usually ready to wear, the edges or seams may be slightly damp. If this is the case, try turning the jeans inside out and running the programme again for a short period. ! We do not recommend that you use this programme if your jeans have elastic waist bands, studs or embroidery. Down Jackets A cycle intended to dry down jackets, giving their natural softness back (2 jackets). Freshen Up A short programme suitable for refreshing fibres and garments. As this is not a drying programme, it is not to be used for garments that are still wet. □ It can be used on any load size but is more effective on smaller loads. Fabric Cotton – high heat Synthetics – low heat Acrylics – low heat Load 1 kg 60 minutes 60 minutes 2 kg 60 or 120 minutes 60 minutes 120 minutes 3 kg 120 minutes 60 or 120 minutes - kg - kg - 12 Options The options allow for customising the selected programme according to one’s own needs. High Heat When a drying time is selected, pressing this button sets high heat drying and the indicator light above the button lights up.

The timed programmes are pre-set to high heat. Fast Iron This option, when selected, delivers for the cycle chosen the best humidity level to help make ironing quicker and easier. In this way it is possible to achieve a level of additional drying. The Anti-crease by alternating rotation of the drum prevents the formation of wrinkles by rotating repeatedly the garments. The option includes a pre Anti-crease phase, which is activated only when the delay time has been selected, and a post Anti-crease at the end of the drying cycle.

The Anti-crease is therefore the best solution to avoid the formation of wrinkles when the delayed start has been activated and when you aren’t available to remove the load immediately the end of the cycle. Delay timer The start of some programmes (see Programmes and options) may be delayed up to 9 hours. Press the button repeatedly to enter the desired delay time. Before setting a delayed start, make sure that the water container is empty and that the filter is clean. The drum will rotate occasionally before the drying programme starts to prevent the formation of creases.

! Not all options are available on all programmes (see Programmes and options). Opening the door If the door is opened (or the START/PAUSE button is pressed) while a programme is running, the dryer stops and the following may occur: • The START/PAUSE button flashes orange. □ When a delayed start is running, the delay countdown continues.



[You're reading an excerpt. Click here to read official INDESIT EDPA](#)

[745 A1 ECO EU user guide](#)

<http://yourpdfguides.com/dref/5833497>

It is necessary to press the START/PAUSE button to resume the "Delay timer" programme. One of the "Delay timer" indicator light flashes to signal the delay time entered. □ It is necessary to press the START/PAUSE button to resume the programme. The progress indicator lights signal the running phase and the START/PAUSE indicator light stops flashing and turns green. □ During the post care phase, the programme ends. Pressing the START/PAUSE button reactivates a new programme from the beginning. □ By turning the Programme selection knob, a new programme is selected and the START/PAUSE indicator light flashes green.

This procedure can be used to select the Cold drying programme to cool garments if they are judged to be dry enough. Press the START/PAUSE button to start the new programme. Heat Pump Protection System The heat pump system has a compressor protection feature, that operates if you open the door or there is a power disruption or you turn off the dryer. This system will prevent the heat pump compressor from starting for 5 minutes after the door is closed and the programme started. Note: If you have a power cut, switch off the power or remove the plug. When power is restored, plug in the machine, press and hold the ON/OFF button until the dryer reactivates, then press Start/Pause button. 13 Laundry Sorting laundry GB • Check the symbols on the care labels of the various garments to verify whether the garments can be safely tumble dried. □ Sort laundry according to the type of fabric. □ Wring out garments to remove the maximum amount of water possible. ! Do not load the dryer when garments are dripping wet.

Maximum load sizes Do not overload the drum. The following values indicate the weight of dry garments: Natural fibres: maximum 7 kg Synthetic fibres: maximum 4 kg ! Do not overload the dryer as this may result in reduced drying performance. Drying times Drying times are approximate and may vary depending on the following: • Amount of water retained by items after the spin cycle: towels and delicate items retain a lot of water. □ Fabrics: items of the same fabric, but with different texture and thickness may have different drying times. □ Amount of laundry: single items and small loads may take longer to dry.

□ Drying: if items are to be ironed, they can be removed from the dryer while still slightly damp. Items that require complete drying can be left longer. • Heat setting. □ Temperature of the room: the lower the temperature of the room, the longer it will take for the dryer to dry clothing. □ Bulk: certain bulky items require special care during the drying process.

We suggest removing these items and replacing them in the dryer once they have been shaken out: repeat this procedure several times during the course of the drying cycle. All fabrics contain natural dampness which helps to keep them soft and fluffy. The drying times provided refer to the automatic Cupboard dry programmes. The Timed drying settings are also indicated to enable you to select the most suitable timed option. The weight refers to dry items. Care labels Always check the care labels, especially when placing garments in the tumble dryer for the first time. Below are the most commonly used symbols: May be tumble dried. Tumble dry – low heat. Automatic drying times Cotton High Heat Drying times after 800-1000 rpm wash cycles 1 kg 60 - 90 minutes Synthetics Low Heat Drying times after wash cycles at lower speeds 1 kg 40 - 50 minutes Acrylics Low Heat Drying times after wash cycles at lower speeds 1 kg 40 - 80 minutes 2 kg 80 - 100 minutes 3 kg 100 - 130 minutes 4 kg 120-140 minutes 5 kg 140 - 180 minutes 6 kg 150 - 190 minutes 7 kg 170 - 200 minutes 2 kg 50 - 60 minutes 3 kg 60 - 90 minutes 4 kg 90 - 110 minutes 2 kg 80 - 140 minutes 14 Troubleshooting If you feel that the dryer is not working properly, consult the following troubleshooting suggestions before contacting the Technical Assistance Centre (see Assistance). gB Problem: The dryer does not start.

Possible causes / Solutions: • The plug has not been inserted far enough into the socket to make contact. Try connecting another appliance to the same socket. □ If an extension cord is used, try connecting the dryer plug directly into the socket. □ The door has not been closed properly. □ The programme has not been set correctly (see How to carry out a drying cycle). □ The START/PAUSE button has not been pressed (see How to carry out a drying cycle). • A delayed start time has been set (see Programmes and options). □ The START/PAUSE button has been pressed; a short delay follows before the dryer starts running. Wait for the drying cycle to start; do not press the START/PAUSE button otherwise the dryer switches to the pause mode and the drying cycle will not start. The "Empty water container" indicator light flashes (see Care and maintenance).

□ The condenser unit or heat pump unit needs to be cleaned (see Care and maintenance). □ The heat setting is not suited to the type of fabric to be dried (see Programmes and options). □ An incorrect drying time was selected for the type of load (see Laundry). □ The air intake grille or the rear air vents are clogged up (see Installation, and Care and maintenance). □ The water bottle was not emptied before starting the programme.

Always empty it before starting a new drying programme (see Description of the tumble dryer) do not wait for the bottle full signal (buzzer beeps once every 5 seconds and the indicator light flashes) before emptying the water container. ! For safety reasons, the dryer programmes last a maximum of 5 hours. If an automatic programme has not detected the final dampness level required in this interval, the dryer completes the programme and stops. Check the above points and repeat the programme; if the items are still damp, contact the Technical Assistance Centre (see Assistance). □ Switch the appliance off and unplug it, then clean the filter and condenser (see "Care and Maintenance").

Reinsert the plug, switch the appliance on and start another programme. If the problem persists, contact the Technical Assistance Service. □ This is normal, especially if the dryer has not been used for a long time. If the noise persists during the entire cycle, contact the Technical Assistance Centre. The dryer has gone into standby mode to save power. This occurs if you have left the dryer on or have had a power cut. It occurs after 30 minutes: - if you leave the dryer without starting a programme; - after your drying programme has finished. Press and hold the ON/OFF button until the dryer reactivates The drying cycle does not start. drying times are too long. The "Empty water container" indicator light flashes.

The programme is finished but the items are damper than expected. The "Options" and "START/PAUSE" indicator lights flash and one of the "Maintenance" or "Drying phases" indicator lights turns on without flashing.



[You're reading an excerpt. Click here to read official INDESIT EDPA](http://yourpdfguides.com/dref/5833497)

[745 A1 ECO EU user guide](http://yourpdfguides.com/dref/5833497)

<http://yourpdfguides.com/dref/5833497>

The dryer is noisy during the first few minutes of operation. The lights on the dryer control panel are off although the dryer is switched on. 15 Assistance GB Heat Pump System This dryer is fitted with a sealed heat pump system to dry your clothes. To operate, the heat pump contains fluorinated greenhouse gases (F gases) which are covered by the Kyoto Protocol. These F gases are contained in a hermetically sealed unit. This sealed unit contains 0.29 kg of the F gas R134a which acts as a refrigerant. If the sealed unit fails then it must be replaced by a new sealed unit.

Contact your nearest service centre for advice. Note: The gases contained in the sealed unit are not hazardous to health, but if they escape they will have an impact on global warming. @@@@; • the dryer serial number (S/N). @@ spare Parts This dryer is a complex machine. Repairing it yourself or having a nonauthorised person try to repair it could cause harm to one or more persons and to the machine, and could invalidate the spare parts warranty.

Call an authorised technician if you experience problems while using the machine. Please note that it is an offence for an unqualified person to undertake any servicing or repair work that involves breaking into the sealed heat pump unit. Essential Contact Information INDESIT SERVICE - Service You Can Rely On At Indesit we pride ourselves on offering our customers the best service we possibly can, wherever you are in the UK and Ireland. Rest assured though, no one knows an Indesit appliance better than we do and our service is second to none... Wherever you are we can be there – we have over 1,000 highly skilled Indesit engineers covering the whole of the UK and Ireland ensuring fast, reliable, local service. □ Right first time’ – our engineers have the latest tools to help get your Indesit appliance back up and running the first time we visit.

Experts in our field – all of our engineers are trained to the highest standard at our Training Centre of Excellence and possess unrivalled expertise and product knowledge. Skilled staff – we have over 400 skilled UK based call centre staff, dedicated to offering you excellent service 364 days a year. Telephone in the United Kingdom: 08448 224 224 Telephone in the Republic of Ireland: 0818 313 413 Information on recycling and disposal As part of our continual commitment towards environmental protection, we reserve the right to use recycled quality components to reduce costs for our customers and to minimise materials wastage. □ Disposing of the packaging materials: follow local regulations to allow for recycling of packaging materials. □ In order to minimise the risk of injury to children, remove the door and plug, then cut the power supply cord flush with the appliance. Dispose of these parts separately to prevent the appliance from being connected to a power supply socket. Disposal of old household appliances The European Directive 2012/19/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. This dryer has a sealed heat pump unit containing F gases which should be recovered and destroyed. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. This appliance conforms to the following EU directives: - 2006/95/EC (Low Voltage Directive) - 2004/108/EC (Electromagnetic Compatibility Directive). Conservez cette notice toujours à côté du sèche-linge et si vous vendez cet appareil ou que vous le donnez à un tiers, faites en sorte que cette notice accompagne le sèche-linge de manière à ce que le nouveau propriétaire soit informé des avertissements et des conseils concernant le fonctionnement de ce sèche-linge. Tournez le bouton Programmes jusqu'à positionner l'indicateur sur le programme correspondant au type de linge à sécher, en contrôlant le tableau des programmes (voir Programmes et options) et les indications pour chaque type de tissu (voir Linge).



[You're reading an excerpt. Click here to read official INDESIT EDPA 745 A1 ECO EU user guide](http://yourpdfguides.com/dref/5833497)  
<http://yourpdfguides.com/dref/5833497>