



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT EWC 71452 W FR. You'll find the answers to all your questions on the INDESIT EWC 71452 W FR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT EWC 71452 W FR**  
**User guide INDESIT EWC 71452 W FR**  
**Operating instructions INDESIT EWC 71452 W FR**  
**Instructions for use INDESIT EWC 71452 W FR**  
**Instruction manual INDESIT EWC 71452 W FR**



[You're reading an excerpt. Click here to read official INDESIT EWC 71452 W FR user guide](http://yourpdfguides.com/dref/5895133)  
<http://yourpdfguides.com/dref/5895133>

### Manual abstract:

Levelling the machine correctly will provide it with stability, help to avoid vibrations and excessive noise and prevent it from shifting while it is operating. If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine. Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page).

! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Use the ones supplied with the machine. unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2.

Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 4.

Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. ! Packaging materials should not be used as toys for children. levelling 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 14 Connecting the drain hose Connect the drain hose, without bending it, to a drain duct or a wall drain situated between 65 and 100 cm from the floor; ! The cable should not be bent or compressed. ! The power supply cable must only be replaced by authorised technicians.

warning! The company shall not be held responsible in the event that these standards are not observed. GB 65 - 100 cm The first wash cycle alternatively, placed it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle "Auto Clean" (see "Cleaning the washing machine"). technical data ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must remain within easy reach.

model Dimensions XWA 71452 width 59. 5 cm height 85 cm depth 54 cm Capacity from 1 to 7 kg please refer to the technical Electrical connections data plate fixed to the machine maximum pressure 1 MPa (10 bar) Water connections minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 52 litres Spin speed Test wash cycles in accordance with directives 1061/2010 and 1015/2010. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU 15 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle.

This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. □ Unplug the washing machine when cleaning it and during all maintenance work. Cleaning the pump The washing machine is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance.

to access the pre-chamber: 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures). Cleaning the washing machine • The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. □ The washing machine has a "Auto Clean" programme for its internal parts that must be run with no load in the drum. For maximum performance you may want to use either the detergent (i. e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washing machine. We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure).

the programme will start automatically and will last approximately 70 minutes. To stop the cycle press the START/PAUSE button. 1 2 3 2. Unscrew the lid by rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal. Screw the lid back on. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the detergent dispenser drawer 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently.

Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. 16 Precautions and tips ! This washing machine was designed and constructed in accordance with international safety regulations.



[You're reading an excerpt. Click here to read official INDESIT EWC 71452 W FR user guide](http://yourpdfguides.com/dref/5895133)  
<http://yourpdfguides.com/dref/5895133>

The following information is provided for safety reasons and must therefore be read carefully.

**Disposal • Disposing of the packaging materials:** observe local regulations so that the packaging may be re-used. □ The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

**GB General safety • This appliance was designed for domestic use only.** □ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. □ The washing machine must only be used by adults, in accordance with the instructions provided in this manual. □ Do not touch the machine when barefoot or with wet or damp hands or feet. □ Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. □ Do not open the detergent dispenser drawer while the machine is in operation. □ Do not touch the drained water as it may reach extremely high temperatures.

• Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. □ If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. □ Always keep children well away from the appliance while it is operating. □ The door can become quite hot during the wash cycle. □ If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. □ Before loading laundry into the washing machine, make sure the drum is empty. Load balancing system Before every spin cycle, to avoid excessive vibrations and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed.

If the load is excessively unbalanced, the washing machine performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. 17 Description of the washing machine and starting a wash cycle GB Control panel WASH CYCLE PROGRESS indicator lights FUNCTION buttons with indicator lights ON/OFF button with indicator light START/PAUSE DOOR LOCKED indicator light Detergent dispenser drawer WASH CYCLE knob TEMPERATURE DELAY TIMER button button button PUSH & WASH button SPIN Detergent dispenser drawer: used to dispense detergents and washing additives (see “Detergents and laundry”). During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions.

The indicator light corresponding to the selected function will remain lit. TEMPERATURE button: sets the temperature or the cold wash cycle (see “Personalisation”). SPIN button: sets the spin speed or exclude the spin cycle completely (see “Personalisation”). DELAY TIMER button: delays the lit in a fixed manner in green. @ @ 9.

At the end of the wash cycle the FIN indicator light will switch on. @ @ @ @ Switch the washing machine off by pressing the ON/OFF button. @ @ @ @ The lit indicator light indicates that the cycle has started. @ @ @ @ @ @ @ @ @ @ This programme does not allow for setting any additional options. @ @ @ @ 4. Once the programme is finished, the END indicator light turns on. @ @ @ @ @ @ @ @ @ @ @ @ The actual washing temperature may differ from the indicated value. @ @ @ @ The actual washing temperature may differ from the indicated value. @ @ 3) Synthetic program along: set wash cycle 10 with a temperature of 40°C. 20 Personalisation Setting the temperature GB Press the TEMPERATURE button to set the wash temperature (see Table of wash cycles).

The temperature may be lowered, or even set to a cold wash. The washing machine will automatically prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle. ! Exception: if the 8 programme is selected, the temperature can be increased up to a value of 90°C. Setting the spin speed Press the SPIN SPEED button to set the spin speed for the selected wash cycle. The maximum spin speeds available for each wash cycle are as follows: Wash cycles Maximum spin speed Cottons 1400 rpm Synthetics 800 rpm Wool 800 rpm The spin speed may be lowered, or the spin cycle can be excluded altogether by selecting the symbol. The washing machine will automatically prevent you from selecting a spin speed which is higher than the maximum speed set for each wash cycle. Functions The various wash functions available with this washing machine will help to achieve the desired results, every time. to activate the functions: 1. Press the button corresponding to the desired function; 2. The function is enabled when the corresponding indicator light is illuminated.

Note: If the indicator light flashes rapidly, this signals that this particular function may not be selected in conjunction with the selected wash cycle. Sport □ This option allows for selecting the most suitable programme for any type of sports clothing, and is designed to remove dirt while optimally preserving the technical features of the garments. The various Sport option levels offer the following wash cycles: Sport Shoes, a cycle designed to safely wash up to 2 pairs of sports shoes simultaneously. Gym Kit, a cycle designed to simultaneously wash any type of sports clothing together with gym towels. Technical Wear, designed for specifically washing waterproof garments or clothing with special technical fibres like Gore-Tex, so as to optimise washing performance while preserving their technical properties over time.

Do not use fabric softeners for garments with technical fibres. ! It cannot be used in conjunction with wash cycles 2-3-4-5-6-7-8-9-10-11-12-13-14- . . Fast Forward During a wash programme and under certain conditions, pressing this button allows for ending the wash programme after only 20' if necessary, by performing a brief rinse cycle followed by a spin cycle at maximum 800 rpm or lower, if reduced manually during the programme customisation phase.



[You're reading an excerpt. Click here to read official INDESIT EWC](http://yourpdfguides.com/dref/5895133)

[71452 W FR user guide](http://yourpdfguides.com/dref/5895133)

<http://yourpdfguides.com/dref/5895133>

in this case, washing and rinsing performance will be reduced. After pressing the button, the relative indicator light turns on together with the indicator light of the rinse phase.

If the selected temperature is equal to 40° and/or the button is pressed during the initial phase of the programme, the "Fast Forward" option lasts longer so that the detergent can dissolve properly and avoid damaging the fabrics. In this case, the rinse phase indicator light flashes while the wash indicator light remains fixed until the necessary activation conditions are fulfilled. If less than 20' remain of the wash programme, the option will be disabled. ! It cannot be used in conjunction with wash cycles 2-4-5-6-13-14- - . Easy iron By selecting this function, the wash and spin cycles will be modified in order to reduce the formation of creases. At the end of the cycle the washing machine will perform slow rotations of the drum, while the EASY IRON and START/PAUSE indicator lights will flash and the FIN led will remain lit in a fixed manner. To end the cycle, press the START/PAUSE button or the EASY IRON button. ! It cannot be used in conjunction with wash cycles 1-3-5-13-14- - . Extra Rinse By selecting this option, the efficiency of the rinse is increased and optimal detergent removal is guaranteed. It cannot be used in conjunction with wash cycles 2-4-13-14- - .

21 Detergents and laundry GB Detergent dispenser drawer Successful washing results also depend on the correct dose of detergent: adding too much detergent will not necessarily result in a more efficient wash, and may in fact cause build up on the inside of your appliance and contribute to environmental pollution. ! Do not use hand washing detergents because these create too much foam. ! Use powder detergent for white cotton garments, for prewashing, and for washing at temperatures over 60°C. ! Follow the instructions given on the detergent packaging. Open the detergent dispenser drawer and pour in the detergent or washing additiB 4 A ve, as follows. 1 3 2 Compartment 1: Pre-wash detergent (powder) Before pouring in the detergent, make sure that extra compartment 4 has been removed. time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. Anti-odour: use programme 3 for washing garments with bad odours (e. The programme is designed to remove bad odours while preserving the fabric fibres.

synthetics fabrics or mixed loads should be washed at 40°, and resistant cotton fabrics at 60°. Delicate: use programme 4 to wash very delicate garments. It is advisable to turn the garments inside out before washing them. For best results, use liquid detergent on delicate garments. For washing Silk items and Curtains, select the relevant cycle and activate the option; the machine will end the cycle with the laundry soaked and the indicator light will flash. To drain the water so that the laundry can be removed, press the START/PAUSE button ro the option. Wool: the wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of wool containing garments labelled as "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. (M1126) Compartment 2: Washing detergent (powder or liquid) If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners, etc.

) The fabric softener must not exceed the "max" level indicated on the central pin. Extra compartment 4: Bleach Bleach cycle Insert the additional compartment 4 (provided) into compartment 1. In pouring the bleach do not exceed the "max" level indicated on the central pin. Perform bleaching by pouring the bleach into additional compartment 4 and set the programme. ! Traditional bleach should be used on resistant white fabrics, and delicate bleach for coloured and synthetics fabrics and for wool. In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark. Duvet: to wash single duvets (the weight of which should not exceed 2 kg), cushions or clothes padded with goose down such as puffa jackets, use the special wash cycle number 6. We recommend that duvets are placed in the drum with their edges folded inwards (see figure) and that no more than ¾ of the total volume of the drum is used. To achieve the best results, we recommend that a liquid detergent is used and placed inside the detergent dispenser drawer. Preparing the laundry ••• Divide the laundry according to: - the type of fabric/the symbol on the label - the colours: separate coloured garments from whites.

Empty all garment pockets and check the buttons. Do not exceed the values listed in the "Table of wash cycles", which refer to the weight of the laundry when dry. How much does your laundry weigh? 1 sheet 400-500 g 1 pillow case 150-200 g 1 tablecloth 400-500 g 1 bathrobe 900-1. 200 g 1 towel 150-250 g Garments requiring special care Sport (programme 1) is designed for washing lightly soiled sports clothing (tracksuits, shorts, etc.); for best results, we recommend not exceeding the maximum load indicated in the "Table of wash cycles". We recommend using liquid detergent, and adding the amount suitable for a half-load. Dark: use cycle 2 to wash dark-coloured garments. This programme is designed to maintain dark colours over Coloured: use this cycle 11 to wash bright coloured clothes. The programme is designed to maintain bright colours over time. @@@@@ It lasts just 20 minutes and therefore saves both time and energy.

@@ 5 kg. Rapid 60' (programme 14) is designed to wash moderately soiled resistant cotton garments at 60° in an hour, with good washing performance. For synthetic or mixed garments, we recommend lowering the temperature down to 40°. 22 Troubleshooting Your washing machine could fail to work. Before contacting the Technical Assistance Centre (see "Assistance"), make sure that the problem cannot be solved easily using the following list.

gB Problem: The washing machine does not switch on. The wash cycle does not start. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or is not making contact. □ There is no power in the house. □ The water inlet hose is not connected to the tap. □ The pressure is too low. • The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation"). □ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service.



[You're reading an excerpt. Click here to read official INDESIT EWC](#)

[71452 W FR user guide](#)

<http://yourpdfguides.com/dref/5895133>

*If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience. □ The wash cycle does not include draining: some wash cycles require the drain phase to be started manually. □ The function is enabled: to complete the wash cycle, press the START/ PAUSE button ("Personalisation").*

*□ The drum was not unlocked correctly during installation (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The washing machine does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The washing machine continuously takes in and drains water. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks. The "Functions" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. □ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). • Too much detergent was used. □ After switching on the machine a control other than Push & Wash was activated. Switch the machine off and press the Push & Wash button. • The "Fast Forward" option was activated.*

*Push & Wash does not activate. The programme lasts a lot less than expected. 23 Service GB 195118945. 00 12/2013 - Xerox Fabriano Before calling for Assistance: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! Always request the assistance of authorised technicians.*

*Have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. .*



[You're reading an excerpt. Click here to read official INDESIT EWC](#)

[71452 W FR user guide](#)

<http://yourpdfguides.com/dref/5895133>