



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT EWDD7145W. You'll find the answers to all your questions on the INDESIT EWDD7145W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT EWDD7145W
User guide INDESIT EWDD7145W
Operating instructions INDESIT EWDD7145W
Instructions for use INDESIT EWDD7145W
Instruction manual INDESIT EWDD7145W



[You're reading an excerpt. Click here to read official INDESIT EWDD7145W user guide](http://yourpdfguides.com/dref/5904805)
<http://yourpdfguides.com/dref/5904805>

Manual abstract:

@@@@@ ! Read these instructions carefully: they contain vital information relating to the safe installation and operation of the appliance. Levelling the machine correctly will provide it with stability, help to avoid vibrations and excessive noise and prevent it from shifting while it is operating. If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine. Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent.

! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Use the ones supplied with the machine. unpacking and levelling Unpacking 1. Remove the washing machine from its packaging.

2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure).

4. Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. ! Packaging materials should not be used as toys for children. levelling 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 14 Connecting the drain hose Connect the drain hose, without bending it, to a drainage duct or a wall drain located at a height between 65 and 100 cm from the floor; ! The cable should not be bent or compressed.

! The power supply cable must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. GB 65 - 100 cm The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle 11. Alternatively, rest it on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must be within easy reach. Technical data Model Dimensions EWDD 7145 width 59,5 cm height 85 cm depth 53,5 cm from 1 to 7 kg for the wash programme; from 1 to 5 kg for the drying programme Capacity Electrical please refer to the technical connections data plate fixed to the machine Water connection Spin speed maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 52 litres up to 1400 rotations per minute Wash: programme 10; temperature 60°C; run with a load of 7 kg. Energy Drying: the smaller load must rated probe dried by selecting the “grammes” (Iron dry) dryness level.

The according to load must consist of 2 sheregulation ets, 1 pillowcase and 1 hand EN 50229 towel; the remainder of the load must be dried by selecting the “ (Cupboard dry) dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2012/19/EU - WEEE - 2006/95/EC Low Voltage) 15 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. □ Unplug the washing machine when cleaning it and during all maintenance work. to access the pre-chamber: 1.

Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); Cleaning the washing machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; Cleaning the detergent dispenser drawer Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. Screw the lid back on; 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance.

Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. ! Make sure the wash cycle has finished and unplug the appliance. 16 Precautions and tips ! This Washer-dryer was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully. □ Always keep children well away from the appliance while it is operating. □ The door can become quite hot during the wash cycle.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5904805)

[EWDD7145W user guide](http://yourpdfguides.com/dref/5904805)

<http://yourpdfguides.com/dref/5904805>

The recommended durations are: 1 kg of synthetic and cotton garments --> 180 min 1 kg of cotton garments --> 180 min The degree of dryness depends on the load and fabric composition.

Gym Kit: cycle suitable to wash all sports items together, including gym towels, while respecting their fibres (follow the instructions in the garment labels). ! Do not put the detergent into compartment 1. ! The detergent must be put only in the compartment 2. Compartment 2: Detergent for the wash cycle (powder or liquid) Liquid detergent should only be poured in immediately prior to the start of the wash cycle. compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow the grid. Note: If a "tablet detergent" is used, always follow the manufacturer's instructions. Load balancing system Before every spin cycle, to avoid excessive vibrations and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. @@@@ • Empty all garment pockets and check the buttons. @@How much does your laundry weigh? 1 sheet 400-500 g 1 pillow case 150-200 g 1 tablecloth 400-500 g 1 bathrobe 900-1200 g 1 towel 150-250 g Special wash cycles Wash&Dry 90': The cycle guarantees the washing and drying performances for a 2 kg load in 90 minutes (level " " Iron dry); for larger loads, the cycle's duration increases in order to guarantee the cycle performances. Wash&Dry 45' select programme 5 for washing and drying lightly soiled garments (Cotton and Synthetic) in a short time. This cycle may be used to wash and dry a laundry load of up to 1 kg in just 45 minutes (level " " Iron dry). Before contacting the Technical Assistance Centre (see "Assistance"), make sure that the problem cannot be solved easily using the following list. gB Problem: The Washer-dryer does not switch on.

The wash cycle does not start. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or is not making contact. □ There is no power in the house. □ The water inlet hose is not connected to the tap. □ The pressure is too low. • The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation"). □ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service.

If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously. Special antidraining valves are available in shops and help to avoid this inconvenience. □ The wash cycle does not include draining: some wash cycles require the drain phase to be started manually. □ The drum was not unlocked correctly during installation (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again.

If the problem persists, contact the Technical Assistance Service. The washing machine does not take in water ("H2O" will flash on the display). The Washer-dryer continuously takes in and drains water. The Washer-dryer does not drain or spin. The Washer-dryer vibrates a lot during the spin cycle. the Washer-dryer leaks. The "Functions" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. □ The detergent is not suitable for machine washing (it should display the text "for Washer-dryers" or "hand and machine wash", or the like). • Too much detergent was used. □ ••••• The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. 00 04/2015 - Xerox Fabriano Before calling for Assistance: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! Always request the assistance of authorised technicians.

Have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washer-dryer, and can also be found on the front of the appliance by opening the door. .



[You're reading an excerpt. Click here to read official INDESIT EWDD7145W user guide](http://yourpdfguides.com/dref/5904805)
<http://yourpdfguides.com/dref/5904805>