



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT H6611GY. You'll find the answers to all your questions on the INDESIT H6611GY in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT H6611GY
User guide INDESIT H6611GY
Operating instructions INDESIT H6611GY
Instructions for use INDESIT H6611GY
Instruction manual INDESIT H6611GY

INDESIT

IT Italiano, 10	EN English, 13	FR Français, 16
ES Español, 19	PT Português, 22	NL Nederlands, 25
DE Deutsch, 28		

H661.1 (GY)

Istruzioni per l'uso
Instructions for use
Mode d'emploi
Instrucciones de uso
Instruções de uso
Gebruiksaanwijzingen
Betriebsanleitung

INDESIT



[You're reading an excerpt. Click here to read official INDESIT H6611GY user guide](http://yourpdfguides.com/dref/5066984)
<http://yourpdfguides.com/dref/5066984>

Manual abstract:

The instructions for use, maintenance and installation, however, remain the same. Closely follow the instructions set out in this manual. All responsibility, for any eventual inconveniences, damages or fires caused by not complying with the instructions in this manual, is declined. The extractor hood has been designed exclusively for domestic use. ! It is important to conserve this booklet for consultation at any moment. In the case of sale, cession or move, make sure it is together with the product. ! Read the instructions carefully: there is important information about installation, use and safety. ! Do not carry out electrical or mechanical variations on the product or on the discharge conduits. **ELECTRICAL CONNECTION** The mains power supply must correspond to the rating indicated on the plate situated inside the hood. If provided with a plug connect the hood to a socket in compliance with current regulations and positioned in an accessible area, after installation.

If it not fitted with a plug (direct mains connection) or if the plug is not located in an accessible area, after installation, apply a double pole switch in accordance with standards which assures the complete disconnection of the mains under conditions relating to over-current category III, in accordance with installation instructions. warning! @@ replacing the power cable Warning! @@@@Expansion wall plugs are provided to secure the hood to most types of walls/ceilings. However, a qualified technician must verify suitability of the materials in accordance with the type of wall/ceiling. The wall/ceiling must be strong enough to take the weight of the hood. Do not tile, grout or silicone this appliance to the wall.

Do not connect the appliance to the mains until the installation is fully complete. Before any cleaning or maintenance operation, disconnect hood from the mains by removing the plug or disconnecting the mains electrical supply. Always wear work gloves for all installation and maintenance operations. The appliance is not intended for use by children or persons with impaired physical, sensorial or mental faculties, or if lacking in experience or knowledge, unless they are under supervision or have been trained in the use of the appliance by a person responsible for their safety. This appliance is designed to be operated by adults, children should be monitored to ensure that they do not play with the appliance.

this appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance. Never use the hood without effectively mounted grating! The hood must NEVER be used as a support surface unless specifically indicated. The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels. The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels. The flaming of foods beneath the hood itself is severely prohibited. The use of exposed flames is detrimental to the filters and may cause a fire risk, and must therefore be avoided in all circumstances. Any frying must be done with care in order to make sure that the oil does not overheat and ignite. Accessible parts of the hood may become hot when used with cooking appliance. @@@@ responsibility in the matter is therefore declined.

! Use a duct of the minimum indispensable length. ! @@Avoid drastic changes in the duct cross-section. Use a duct with an as smooth as possible inside. ! The duct must be made of certified material. @@Your cooker hood is ready to be used in suction version. @@@@ attention! The exhausting pipe is not supplied and must be purchased apart. @@@@ attention! @@@@The charcoal filter may NOT be washed or regenerated. remove the grease filters. Apply one charcoal filter each side and hook in onto the hood. Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse.

Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket. Cleaning The cooker hood should be cleaned regularly (at least with the same frequency with which you carry out maintenance of the fat filters) internally and externally. Clean using the cloth dampened with neutral liquid detergent. WARNING: Failure to carry out the basic cleaning recommendations of the cooker hood and replacement of the filters may cause fire risks. Therefore, we recommend observing these instructions.

The manufacturer declines all responsibility for any damage to the motor or any fire damage linked to inappropriate maintenance or failure to observe the above safety recommendations. maintenance of the anti-grease filters Traps cooking grease particles. Paper filter must be replaced once a month or if colouring appears on upper side, in such cases the colouring is evident through the grill openings. To access the grease filter R open the suction grill S via the release hooks T and free from the supports U. Replacing lamps Disconnect the hood from the electricity.

warning! Prior to touching the light bulbs ensure they are cooled down. Access the lamp housing area: remove the lamp holder using a small screwdriver or similar tool as a lever. Replace the damaged light bulb. Use only 40W max (E14) olive shape light bulbs. Then close the lamp housing (snap lock). 14 DISPOSAL This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. EN on the product, or on the documents accompanying the The symbol product, indicates that this appliance may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. @@@@ - A speed has been selected.

@@- The kitchen is sufficiently ventilated to allow air intake. - The charcoal filter is not worn (hood in filtering version). □ If the hood has turned off during normal functioning: Check that: - The power has not been disconnected. - the omnipolar disconnection device has not tripped. If the hood fails to operate correctly, briefly disconnect it from the mains power supply for almost 5 sec. by pulling out the plug. Then plug it in again and try once more before contacting the Technical Assistance Service. TECHNICAL DATA Model H661. 1 (GY) Height 40 cm Width 59,9 cm Depth 27- 48 cm Gross weight: 9,6 Kg Total absorption 180 W Motor absorption 100 W Lamp absorption 2x40 W (E14) Exhaust pipe Ø 12 cm This appliance conforms to the following EEC Directive: • “Low Voltage Equipment” Directive 2006/95/EC (12-12-2006) • “Electromagnetic Compatibility” Directive 2004/108/EC (15-12-2004) Components not provided with the product 15 Français FR La hotte peut avoir des configurations esthétiques différentes par rapport à ce qui est illustré dans les dessins de ce manuel, cependant les instructions pour l'utilisation, l'entretien et l'installation restent identiques.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5066984)

[H6611GY user guide](http://yourpdfguides.com/dref/5066984)

<http://yourpdfguides.com/dref/5066984>

SÉCURITÉ GÉNÉRALE La distance minimum entre la superficie de support des récipients sur le dispositif de cuisson et la partie la plus basse de la hotte de cuisine ne doit pas être inférieure à 50cm dans le cas de cuisinières électriques et de 65cm dans le cas de cuisinières à gaz ou mixtes.



[You're reading an excerpt. Click here to read official INDESIT](#)

[H6611GY user guide](#)

<http://yourpdfguides.com/dref/5066984>