



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDC 75. You'll find the answers to all your questions on the INDESIT IDC 75 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDC 75
User guide INDESIT IDC 75
Operating instructions INDESIT IDC 75
Instructions for use INDESIT IDC 75
Instruction manual INDESIT IDC 75

Instruction manual

TUMBLE DRYER

EN
English, 1

IDC 75

↑ Keep this manual at hand for immediate reference whenever necessary. Always store this manual close to the tumble dryer and remember to pass it on to any new owners when selling or transferring the appliance, so they may familiarise with the warnings and suggestions herein contained.
↑ Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance.

Contents

Important information, 2-3

Installation, 4
Where to install the tumble dryer
Ventilation
Electrical connections
Preliminary information

Description of the tumble dryer, 5
Features
Control panel

How to carry out a drying cycle, 6
Starting a drying programme

Drying settings, 7
Drying times
Drying programmes and options

Laundry, 8
Sorting laundry
Care labels
Special items
Drying times

Warnings and suggestions, 9
General safety
Information on recycling and disposal
Saving energy and respecting the environment

Care and maintenance, 10
Disconnecting the power supply
Cleaning the filter after each cycle
Checking the drum after each cycle
Emptying the water container after each cycle
Cleaning the condenser unit
Cleaning the tumble dryer

Troubleshooting, 11

Assistance and Guarantee, 12-13-14
Spare parts

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IDC 75 user guide](http://yourpdfguides.com/dref/3206447)

<http://yourpdfguides.com/dref/3206447>

Manual abstract:

@@- The Empty water container LED lights up to signal that the water container is full. Filling of the Water Container Step 4 Replace the filter never operate the dryer without the filter in place. When the dryer is first used water will not immediately enter the water container as the pump needs to be primed. This is done automatically and will take a few minutes, during this period the efficiency of the drying process is not affected. 2 Condenser unit - remove any fluff build-up from the condenser on a monthly basis. Step 1 Open the condenser cover - grip the handle and pull towards you. EN Step 2 Remove the condenser by turning the 3 catches, then pull the condenser towards you. (It is normal for some residual water to be left in the tubes). Step 3 Clean the condenser with running water over the rear side to remove any fluff deposits. Step 4 Replace the condenser unit; make sure that the unit is securely in place, that all 3 catches are fixed and that the position arrows on the front end of the condenser are pointing upwards.

Failure to clean the condenser unit may cause premature faults to the dryer. 3 Installation EN Where to install the tumble dryer Install the dryer far from gas ranges, stoves, radiators or hobs, as flames may damage it. If the dryer is installed below a worktop, ensure there are 10 mm between the upper panel of the dryer and any objects above it, and 15 mm between the sides of the machine and the walls or furniture units adjacent to it. This ensures adequate air circulation. 10 mm Electrical connections Before plugging the appliance into the socket, check the following: Make sure your hands are dry.

The socket must have an earth connection. The socket must be able to withstand the machines maximum power output as indicated on the data plate (see Description of the tumble dryer). The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer). The socket must be compatible with the dryers plug. Should this not be the case, replace the plug or the socket.

Do not use extension cords. The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. Once installed, the dryers electrical wire and plug must be within reach. The power cord must not be bent or squashed. The power cord is supplied fitted with a BS1363 plug and with a 13 amp BS1362 fuse. If it is necessary to fit a replacement fuse, it must be a 13 Amp ASTA approved to BS1362 type. WARNING: The plug must not be used without a fuse cover. If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from authorised dealers.

Moulded plug 15 mm 15 mm Ventilation The room must be adequately ventilated while the dryer is running. @@@@This does away with the need to empty the water container. @@The height of the drain must be less than 3' (1 m) from the bottom of the dryer. Remove existing hose from position shown in picture A and fit a suitable length of hose and connect as shown in picture B. Changing the plug The wires in the power cord are coloured in accordance with the following. Green and Yellow (Earth) wire to terminal marked E, symbol x, or coloured green and yellow. 13A ASTA approved fuse to BS 1362. GREEN & YELLOW Make sure that the hose is not squashed or kinked when the dryer is in its final location. Blue (Neutral) wire to terminal marked N or coloured black. BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP Brown (live) wire to terminal marked L or coloured red.

1 2 2 Picture A Picture B If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard. The power cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorized technicians (see Service). New or longer power cords are supplied at an extra charge by authorized dealers. The manufacturer denies any responsibility should any of these rules not be followed.

If in doubt about any of the above consult a qualified electrician. H<1m Preliminary information Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation. 4 Description of the tumble dryer Opening the door Features EN Data plate Press the door Water container Filter Model & Serial Numbers Air intake grille Condenser unit (cover open) Condenser cover handle (pull to open) Control panel High Heat button button Start Drying time selector knob Empty water container indicator light Drying time selector knob This is used to set the drying time: turn the knob in a clockwise direction until the indicator is set to the desired drying time (see Drying settings). High Heat button It can be used to customise the selected programme in accordance with your own requirements. START button Press the button to begin drying.

@@@@@@@Plug the dryer into the power supply socket. 2. @@@3. @@@4. @@@Close the door. 5. @@@@6. If necessary, set the temperature using the HIGH HEAT button. 7. Press the START button to start the drying cycle.

Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the START button to resume machine operation. 8. The final COLD DRYING phase (i.e. the fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 9. Open the door, remove the laundry then clean the filter and replace it. Empty the water container and put it back in its slot (see Care and maintenance). 10.

Disconnect the dryer from the power supply. 6 Drying settings Drying times The drying time depends on the size of the load and on the type of fabric it contains (see Table). The cold drying cycle runs during the final 10 minutes of the programme. For large loads, select the High Heat option if available. EN Fabric Cotton high heat Cotton low heat Synthetics low heat Load 1 kg 20 - 40 minutes 20 - 40 minutes 40 - 50 minutes 2 kg 20 - 40 minutes 20 - 40 minutes 60 - 70 minutes 3 kg 50 - 70 minutes 50 - 70 minutes 80 - 90 minutes 4 kg 50 - 70 minutes 5 - 6 kg 80 - 110 minutes 7 kg 120 - 160 minutes - Drying programmes and options Refresh A short programme suitable for refreshing fibres and garments through the emission of cool air.

It lasts about 20 minutes. As this is not a drying programme, it is not to be used for garments that are still wet. High Heat button If you have selected a timed drying programme, press this button to select a high temperature. The timed programmes are pre-set to low heat. 7 Laundry EN Sorting laundry Check the symbols on the care labels of the various garments to verify whether the garments can be safely tumble dried.



[You're reading an excerpt. Click here to read official INDESIT IDC](http://yourpdfguides.com/dref/3206447)

[75 user guide](http://yourpdfguides.com/dref/3206447)

<http://yourpdfguides.com/dref/3206447>

Sort laundry according to the type of fabric. Empty all pockets and check for loose buttons. Close zips and hooks and fasten belts and strings without tightening them. Wring out garments to remove the maximum amount of water possible. Care labels Always check the care labels, especially when placing garments in the tumble dryer for the first time. Below are the most commonly used symbols: May be tumble dried. Do not tumble dry. Tumble dry high heat. Tumble dry low heat. Items not suitable for tumble drying: Items containing rubber parts or similar materials, or plastic film covering (pillows, cushions or PVC sports jackets), any type of inflammable object or objects containing inflammable substances (used towels containing hairspray).

Glass fibres (certain types of draperies). Items which have been previously dry cleaned. Follow instructions carefully. Check whether the dryer is empty before loading it. Do not overload the dryer (see Laundry for the maximum load sizes). Do not add items that are dripping wet. Do not tumble dry large, excessively bulky items. This ensures that energy is saved during tumble drying. Moreover, the dryer may become damaged. The filter is located in front of the dryer seal (see Picture).

Removing the filter: 1. Pull the filters plastic handle upwards (see Picture). 2. Clean the fluff off the filter and replace it correctly. Removing the condenser: 1.

Disconnect the dryer from the power supply and open the door. 2. 3. Clean the surface of the seals and replace the unit with the arrows pointing upwards, while making sure that the catches are securely fixed. Cleaning the condenser unit Do not use the dryer unless the filter has been replaced in its holder.

Checking the drum after each cycle Cleaning the drum Rotate the drum manually to remove smaller items (handkerchiefs) that could have been left inside the dryer. Avoid using abrasives, steel wool or stainless steel cleaning agents to clean the drum. A coloured film may appear on the stainless steel drum surface: it may be caused by a combination of water and/or cleaning agents such as wash-softeners. This coloured film does not affect the dryers performance. Water container The externalised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. EN The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory.

These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 13 EN After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.

indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.

co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.

co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 14 .



[You're reading an excerpt. Click here to read official INDESIT IDC](#)

[75 user guide](#)

<http://yourpdfguides.com/dref/3206447>