



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDC85. You'll find the answers to all your questions on the INDESIT IDC85 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDC85
User guide INDESIT IDC85
Operating instructions INDESIT IDC85
Instructions for use INDESIT IDC85
Instruction manual INDESIT IDC85

Instruction manual

TUMBLE DRYER

EN
English, 1

IDC 85

Contents

EN

Important information, 2-3

Installation, 4

Where to install the tumble dryer
Ventilation
Electrical connections
Preliminary information

Description of the tumble dryer, 5

Features
Control panel

How to carry out a drying cycle, 6

Starting a drying programme

Drying settings, 7

Drying times
Drying programmes and options

Laundry, 8

Sorting laundry
Care labels
Special items

Warnings and suggestions, 9

General safety
Information on recycling and disposal
Saving energy and respecting the environment

Care and maintenance, 10

Disconnecting the power supply
Cleaning the filter after each cycle
Checking the drum after each cycle
Emptying the water container after each cycle
Cleaning the condenser unit
Cleaning the tumble dryer

Troubleshooting, 11

Assistance and Guarantee, 12-13-14

Spare parts

 This symbol reminds you to read this instruction manual.
 Keep this manual at hand for immediate reference whenever necessary. Always store this manual close to the tumble dryer and remember to pass it on to any new owners when selling or transferring the appliance, so they may familiarise with the warnings and suggestions herein contained.
 Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance.

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IDC85 user guide](http://yourpdfguides.com/dref/5446534)

<http://yourpdfguides.com/dref/5446534>

Manual abstract:

@@@The machine will take longer to dry and it will consume more energy. Water container □ empty the water container after each drying cycle. @@- The □ Empty water container □ light lights up to signal that the water container is full. Filling of the Water Container Step 4 Replace the filter □ never operate the dryer without the filter in place. When the dryer is first used water will not immediately enter the water container as the pump needs to be primed. This is done automatically and will take a few minutes, during this period the efficiency of the drying process is not affected. 2 Condenser unit - remove any fluff build-up from the condenser on a monthly basis. Step 1 Open the condenser cover - grip the handle and pull towards you. EN Step 2 Remove the condenser by turning the 3 catches, then pull the condenser towards you. (It is normal for some residual water to be left in the tubes).

Step 3 Clean the condenser with running water over the rear side to remove any fluff deposits. Step 4 Replace the condenser unit; make sure that the unit is securely in place, that all 3 catches are fixed and that the position arrows on the front end of the condenser are pointing upwards. Failure to clean the condenser unit may cause premature faults to the dryer. 3 Installation EN Where to install the tumble dryer □ Install the dryer far from gas ranges, stoves, radiators or hobs, as flames may damage it. If the dryer is installed below a worktop, ensure there are 10 mm between the upper panel of the dryer and any objects above it, and 15 mm between the sides of the machine and the walls or furniture units adjacent to it.

This ensures adequate air circulation. 10 mm Electrical connections Before plugging the appliance into the socket, check the following: □ Make sure your hands are dry. □ The socket must have an earth connection. □ The socket must be able to withstand the machine's maximum power output as indicated on the data plate (see Description of the tumble dryer). □ The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer).

□ The socket must be compatible with the dryer's plug. Should this not be the case, replace the plug or the socket. □ Do not use extension cords. □ The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. □ Once installed, the dryer's electrical wire and plug must be within reach. □ The power cord must not be bent or squashed. □ The power cord is supplied fitted with a BS1363 plug and with a 13 amp BS1362 fuse. If it is necessary to fit a replacement fuse, it must be a 13 Amp ASTA approved to BS1362 type. WARNING: The plug must not be used without a fuse cover.

If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from authorised dealers. Moulded plug 15 mm 15 mm Ventilation □ The room must be adequately ventilated while the dryer is running. @@@This does away with the need to empty the water container. @@The height of the drain must be less than 3' (1 m) from the bottom of the dryer. Remove existing hose from position shown in picture A and fit a suitable length of hose and connect as shown in picture B. Changing the plug The wires in the power cord are coloured in accordance with the following. Green and Yellow (Earth) wire to terminal marked □E□, symbol x, or coloured green and yellow. 13A ASTA approved fuse to BS 1362. GREEN & YELLOW □ Make sure that the hose is not squashed or kinked when the dryer is in its final location.

Blue (Neutral) wire to terminal marked □N□ or coloured black. BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP Brown (live) wire to terminal marked □L□ or coloured red. 1 2 2 1 Picture A Picture B □ If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard. □ The power cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorized technicians (see Service).

New or longer power cords are supplied at an extra charge by authorized dealers. □ The manufacturer denies any responsibility should any of these rules not be followed. □ If in doubt about any of the above consult a qualified electrician. Less than 1m Preliminary information Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation. 4 Description of the tumble dryer Opening the door Features EN Rating plate Press the door Water container Filter Model & Serial Numbers Air intake grille Condenser unit (cover open) Condenser cover handle (pull to open) Control panel High Heat button Start Drying time selector knob Empty water container indicator light Drying time selector knob

This is used to set the drying time: turn the knob in a clockwise direction until the indicator is set to the desired drying time (see Drying settings).

Do not attempt to turn the knob anticlockwise. High Heat button It can be used to customise the selected programme in accordance with your own requirements. START button Press the button to begin drying. Empty water container indicator light The □ Empty water container □ indicator light signals that the water container must be emptied. @@@@ Plug the dryer into the power supply socket. 2. @@3. @@4. @@Close the door. 5.

@@@@Do not attempt to turn the knob anticlockwise. 6. If necessary, set the temperature using the HIGH HEAT button. 7. Press the START button to start the drying cycle. @@After closing the door, press the START button to resume machine operation. 8. The final COLD DRYING phase (i.e. the fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate.

9. Open the door, remove the laundry then clean the filter and replace it. Empty the water container and put it back in its slot (see Care and maintenance). 10. Disconnect the dryer from the power supply.

6 Drying settings Drying times The drying time depends on the size of the load and on the type of fabric it contains (see Table). The cold drying cycle runs during the final 10 minutes of the programme. □ For large loads, select the High Heat option if available. Fabric Cotton – high heat Synthetics – low heat Acrylics – low heat Load 1 kg 30 - 40 minutes 40 - 50 minutes 40 - 60 minutes 2 kg 40 - 55 minutes 50 - 70 minutes 55 - 75 minutes 3 kg 55 - 70 minutes 70 - 90 minutes 4 kg 70 - 80 minutes 5 kg 80 - 90 minutes 6 kg 95 - 120 minutes 7 kg 120 - 140 minutes 8 kg 130 - 150 minutes - EN Drying times are approximate and may vary depending on the following: Amount of water retained by items after the spin cycle: towels and delicate items retain a lot of water. Fabrics: items of the same fabric, but with different texture and thickness may have different drying times.



[You're reading an excerpt. Click here to read official INDESIT IDC85 user guide](http://yourpdfguides.com/dref/5446534)

<http://yourpdfguides.com/dref/5446534>

