



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDCE 845. You'll find the answers to all your questions on the INDESIT IDCE 845 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDCE 845
User guide INDESIT IDCE 845
Operating instructions INDESIT IDCE 845
Instructions for use INDESIT IDCE 845
Instruction manual INDESIT IDCE 845

Instruction manual

TUMBLE DRYER

EN
English, 1

IDCE 845
IDCE 845 S
IDCE 845 K

 This symbol reminds you to read this instruction manual.
 Keep this manual at hand for immediate reference whenever necessary. Always store this manual close to the tumble dryer and remember to pass it on to any new owners when selling or transferring the appliance, so they may familiarise with the warnings and suggestions herein contained.
 Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance.

 **INDESIT**

Contents

Important information, 2-3

Installation, 4

Where to install the tumble dryer
Ventilation
Electrical connections
Preliminary information

Description of the tumble dryer, 5-6

Features
Control panel

How to carry out a drying cycle, 7

Starting and selecting a programme

Programmes and options, 8-9-10

Programme chart
Special programmes
Options
Opening the door

Laundry, 11-12

Sorting laundry
Care labels
Special garments
Drying times

Warnings and suggestions, 13

General safety
Information on recycling and disposal
Saving energy and respecting the environment

Care and maintenance, 14

Disconnecting the power supply
Cleaning the filter after each cycle
Checking the drum after each cycle
Emptying the water container after each cycle
Cleaning the condenser unit
Cleaning the tumble dryer

Troubleshooting, 15

Assistance and Guarantee, 16-17-18

Spare parts

EN



[You're reading an excerpt. Click here to read official INDESIT IDCE 845 user guide](http://yourpdfguides.com/dref/4249454)

<http://yourpdfguides.com/dref/4249454>

Manual abstract:

@@@ Water container empty the water container after each drying cycle. Step 1 Pull the water container towards you and remove it completely from the dryer. Step 2 Empty all the water in the water container. Step 3 Pull out the filter (using two fingers). Step 4 Replace the water container making sure that it is securely fixed. Step 5 Clean off any fluff build-up on the internal surface of the filter. Failure to empty the water container may cause the following: - The dryer stops heating (thus the load may still be damp at the end of the drying cycle). - The Empty water container LED activates to show that the water container is full. Filling of the Water Container Step 6 Replace the filter never operate the dryer without the filter in place. When the dryer is first used water will not immediately enter the water container as the pump needs to be primed.

This is done automatically and will take a few minutes, during this period the efficiency of the drying process is not affected. 2 Condenser unit - remove any fluff build-up from the condenser on a monthly basis. Step 1 Open the condenser cover - grip the handle and pull towards you. EN Step 2 Remove the condenser by turning the 3 catches, then pull the condenser towards you. (It is normal for some residual water to be left in the tubes).

Step 3 Clean the condenser with running water over the rear side to remove any fluff deposits. Step 4 Replace the condenser unit; make sure that the unit is securely in place, that all 3 catches are fixed and that the position arrows on the front end of the condenser are pointing upwards. Failure to clean the condenser unit may cause premature failure of the dryer. 3 Installation EN Where to install the tumble dryer Install the dryer far from gas ranges, stoves, radiators or hobs, as flames may damage it. @@@ The socket must have an earth connection.

@@@ The socket must be compatible with the dryers plug. Should this not be the case, replace the plug or the socket. Do not use extension cords. The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. Once installed, the dryers electrical wire and plug must be within reach. The power cord must not be bent or squashed. The power cord is supplied fitted with a BS1363 plug and with a 13 amp BS1362 fuse. If it is necessary to fit a replacement fuse, it must be a 13 Amp ASTA approved to BS1362 type. WARNING: The plug must not be used without a fuse cover.

If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from authorised dealers. Moulded plug 15 mm 15 mm Ventilation The room must be adequately ventilated while the dryer is running. Make sure that the dryer is installed in a room free of humidity and with adequate air circulation. The flow of air around the dryer is essential to allow water to condense during drying; the dryer will not function properly if it is placed in an enclosed space or inside a cabinet. ! Some condensation may form if the dryer is used in a small or cold room. ! We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door. Water drain If your dryer is installed next to a drain the water can be plumbed into this drain. This does away with the need to empty the water container. If the dryer is stacked onto or installed next to a washing machine it can share the same drain.

The height of the drain must be less than 3' (1 m) from the bottom of the dryer. Remove existing hose from position shown in picture A and fit a suitable length of hose and connect as shown in picture B. Changing the plug The wires in the power cord are coloured in accordance with the following. Green and Yellow (Earth) wire to terminal marked E, symbol x, or coloured green and yellow. 13A ASTA approved fuse to BS 1362.

GREEN & YELLOW ! Make sure that the hose is not squashed or kinked when the dryer is in its final location. Blue (Neutral) wire to terminal marked N or coloured black. BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP Brown (live) wire to terminal marked L or coloured red. 1 2 2 1 Picture A Picture B If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard.

The power cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorized technicians (see Service). New or longer power cords are supplied at an extra charge by authorized dealers. The manufacturer denies any responsibility should any of these rules not be followed. If in doubt about any of the above consult a qualified electrician. Less than 1m Preliminary information Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation. 4 Description of the tumble dryer Opening the door Features EN Water container Rating plate Press the door Filter Model & Serial Numbers Air intake grille Condenser unit (cover open) Condenser cover handle (pull to open) Control panel On/Off button Timed Drying button Options buttons and indicator lights Start/Pause button and indicator light Programme selection knob Delay start button Display indicator light Clean filter Clean condenser unit Empty water container indicator light indicator light Cycle phases Timed drying icon Delay start icon 5 EN ON/OFF/Reset button Pressing the button normally will cause the machine to switch on or off. If the button is pressed for 3 seconds while the dryer is in use, the machine will switch off and the running cycle will reset. Programme selection knob Allows for setting the programme: turn until the indicator points towards the desired programme (see Starting and selecting a programme). Options buttons Allows selection of the options available for the selected programme. The respective indicator lights turn on when the option has been selected (see Programmes and options).

START/PAUSE button and indicator light When the green light flashes slowly, press the button to start the programme. When the cycle is under way, the indicator light remains on. Press the button again to put the programme in the pause mode; the indicator light turns orange and starts flashing again. Press the button again to resume the programme from the point it was interrupted (see Starting and selecting a programme). Display In section A, the selected Timed drying value is displayed; if the Delay start function was set, the time remaining to the start of the selected programme will appear. The duration of the selected programme is also displayed in this section.



[You're reading an excerpt. Click here to read official INDESIT IDCE 845 user guide](http://yourpdfguides.com/dref/4249454)

<http://yourpdfguides.com/dref/4249454>

In section B, the phase of the running programme is displayed: Sun icon Fan icon : Drying cycle : Cold air cycle , Clean filter indicator light , In section C, the maintenance indicator lights are displayed (Empty water container indicator light Clean condenser unit indicator light) , see Indicator lights. C B A Indicator lights The indicator lights provide important information. They indicate the following: The Empty water container indicator light signals that the water container must be emptied. If the water container fills during the course of the programme, the LED lights up.

The dryer automatically starts a cold air cycle and the START/PAUSE LED flashes orange. Press the START/PAUSE button to resume the cycle from the point it was interrupted. In order to avoid this procedure, always empty the water container after using the tumble dryer (see Maintenance). Before each programme, the Clean filter indicator light (see Maintenance). The Clean condenser unit indicator light signals the fundamental importance of cleaning the filter before each load signals the fundamental importance of cleaning the condenser regularly (see Maintenance).

6 How to carry out a drying cycle Starting and selecting a programme 1. Plug the dryer into the power supply socket. 2. Select the programme according to the type of laundry (see Laundry). 3.

Open the door, ensure that the filter is clean and securely placed and that the water container is empty and correctly slotted (see Maintenance). 4. Load the machine, making sure that no piece of laundry gets between the door and the relative seal. Close the door. 5. Press the ON/OFF button to start the machine. 6. After consulting the programme chart and the indications for each type of fabric (see Laundry), turn the Programme selection knob towards the programme corresponding to the type of laundry to be dried (see Programmes and options). ! Warning: If the position of the programme selection knob changes after pressing the START/PAUSE button, the selected programme will NOT be modified. To modify the programme, press the START/PAUSE button to put the programme in pause mode (the indicator light flashes orange), then select a new programme and the relative options.

Press the START/PAUSE button to start the new programme. 7. Select the Timed Drying function by pressing the timed drying button until the required time is displayed (see Programmes and options). 8. If necessary, set the time of the delayed start and any other options (see Programmes and options). 9. Press the ALARM button to sound a buzzer signalling the end of the programme. EN 10. Press the START/PAUSE button to start the drying cycle. The display will show the approximate time remaining.

Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items.

After closing the door, press the START/PAUSE button to resume machine operation. 11. The final COLD DRYING phase (i.e.

the fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 12. A buzzer signals when the programme ends (provided the option was selected). The word End will appear on the rments bearing the tumble dry symbol on the care label. 8 Jeans

Programme This programme is suited to washing cotton denim jeans.

Turn the front pockets inside out before drying the jeans. It is suitable for loads of up to 3 kg (about 4 pairs). This programme lasts about 1:25 (hrs:mins), although it may last longer depending on the size and of the load and on the spin speed used in the wash cycle. Garments dried using this programme are usually ready to be worn, though edges and seams may be slightly damp. In this occurs, turn the jeans inside out and reactivate the programme for a short while. Use this cycle for 100% cotton garments only; do not mix dark and light colours and avoid using this programme for garments with embroidery and accessories (elastic strings around the waist area, brooches, etc.); turn pockets inside out. Outwear Programme This programme is specific for drying water-repellent fabrics and sports jackets (e.g. Gore-Tex, polyester, nylon).

Drying the garment after a wash cycle has a beneficial effect as it reactivates the garments water-repellent treatment. It can be used for loads of up to 2 kg. The programme lasts about 2:00 (hrs:mins), although it may last longer depending on the size and density of the load and on the spin speed used during the wash cycle. @@It is ideal for clothes which do not need to be dried fully. @@We suggest turning garments inside out before drying them. @@It is ideal for those garments that do not need to be dried fully or button of an unavailable option is pressed, the buzzer emits three signals. @@ When a delayed start is running, the delay countdown continues. @@@@ During the post anti-crease phase, the programme ends. @@@@ Press the START/PAUSE button to start the new programme. @@ Sort laundry according to the type of fabric.

Empty all pockets and check for loose buttons. @@ Wring out garments to remove the maximum amount of water possible. Do not load the dryer when garments are dripping wet. Maximum load sizes Do not overload the drum. @@@@Below are the most commonly used symbols: May be tumble dried.

Do not tumble dry. Tumble dry high heat. Tumble dry low heat. @@ Glass fibres (certain types of draperies). Items which have been previously dry cleaned.

@@Follow instructions carefully. @@If this happens, simply put them through a short drying cycle. @@Avoid drying for long periods. @@Starched garments: do not dry together with nonstarched items. @@@@ Do not over-dry items. @@@@ This appliance was designed and manufactured in compliance with current international safety standards. The following information is provided for safety reasons and must be read carefully. Do not tumble dry large, excessively bulky items. Do not tumble dry acrylic fibres at high temperatures. Complete each programme with the relative cold drying phase.

Do not switch the tumble dryer off if items that are still warm are inside it. Clean the filter after each use (see Care and maintenance). Empty the water container and put it back in place after each use (see Care and maintenance). Clean the condenser unit regularly (see Care and maintenance). Do not allow lint to build up around the tumble dryer. Avoid climbing on the top of the dryer as this may damage the appliance. Always comply with electrical regulations and requirements (see Installation). Always purchase original accessories and spare parts (see Assistance). ! WARNING: Never stop the dryer before the end of the drying cycle unless all items have been quickly removed and hung in order to dispel heat. EN General safety The final part of a tumble dryer cycle occurs without heat (cooling cycle) to ensure that the laundry is not damaged due to excessive temperatures.

This tumble dryer must not be used by persons (including children) with physical, sensory or mental impairments or with little experience and knowledge of the appliance, unless they are supervised or have been adequately instructed on its use by the person responsible for their safety.



[You're reading an excerpt. Click here to read official INDESIT IDCE 845 user guide](http://yourpdfguides.com/dref/4249454)
<http://yourpdfguides.com/dref/4249454>

This tumble dryer is designed for domestic and nonprofessional use. Do not touch the appliance while barefoot or with wet hands or feet. Unplug the appliance by pulling on the plug, not the cord. Do not allow children near the appliance while it is in function.

After use, switch the appliance off and unplug it. Keep the appliance door closed to prevent children using it as a toy. Children must be supervised to ensure that they do not play with the appliance. The appliance must be correctly installed and receive adequate ventilation. The air intake on the front part of the dryer and the air vents on the rear must never be obstructed (see Installation).

Never use the dryer on carpeting with high pile as this may prevent air from entering the dryer from the base. Check whether the dryer is empty before loading it. The rear part of the dryer may become very hot: do not touch it while the appliance is in function. Do not use the dryer unless the filter, water container and condenser are properly positioned (see Maintenance). Do not use liquid fabric softener in the dryer; add it to the final rinse of the wash cycle. Do not overload the dryer (see Laundry for the maximum load sizes). Do not add items that are dripping wet. Tumble dry items only if they have been washed with water and detergent, and have been rinsed and put through a spin cycle. Drying items that have NOT been washed with water may cause the risk of fire. Always read the instructions on the care label carefully (see Laundry).

Do not tumble dry items that have been treated with chemical products. Never tumble dry items that are contaminated with inflammable substances (cooking oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, waxes, wax removers and hairspray), unless they have been washed in hot water with an extra amount of detergent. Do not tumble dry rubber, rubber-backed articles and garments, cushions with foam rubber padding, latex foam, rubber, plastic, shower caps, water-resistant fabrics, nappy pants or liners, polyethylene and paper. @@@@This ensures that energy is saved during tumble drying. @@@@13 Care and maintenance EN Disconnecting the power supply ! @@@@Clean the filter once drying is completed, by rinsing it under running water or cleaning it with a vacuum cleaner. Should the filter become clogged, the flow of air inside the dryer will be seriously hampered: drying times becomes longer and more energy is consumed. Moreover, the dryer may become damaged. The filter is located in front of the dryer seal (see Picture).

Removing the filter: 1. Pull the filters plastic handle upwards (see Picture).

2. Clean the fluff off the filter and replace it correctly. Ensure that the filter is pushed fully home. Cleaning the condenser unit Remove the condenser (see Picture below) unit regularly (monthly) and clean off any fluff deposits from the plates by rinsing it with cold water running on the rear end of the condenser.

Removing the condenser: 1.

Disconnect the dryer from the power supply and open the door. 2. Open the condenser cover (see Picture below), unlock the three catches by turning them 90° anti-clockwise, then pull on the grip to remove the condenser. 3. Clean the surface of the seals and replace the unit with the arrows pointing upwards, while making sure that the catches are securely fixed.

unless the filter has been replaced in its holder. ! Do not use the dryer Checking the drum after each cycle Cleaning the drum Rotate the drum manually to remove smaller items (handkerchiefs) that could have been left inside the dryer. ! Avoid using abrasives, steel wool or stainless steel The external metal, plastic and rubber parts can be cleaned with a damp cloth. Clean the front air intake grille regularly (every 6 months) with a vacuum cleaner to remove any lint, fluff or dust deposits. Furthermore, remove any lint deposits from the front part of the condenser and from the filter area, using a vacuum cleaner every so often. ! Do not use solvents or abrasives. ! Have the dryer checked regularly by authorised technical personnel in order to ensure that the electrical and mechanical parts work safely (see Assistance). Cleaning the tumble dryer cleaning agents to clean the drum. A coloured film may appear on the stainless steel drum surface: it may be caused by a combination of water and/or cleaning agents such as wash-softeners. This coloured film does not affect the dryers performance.

Water container Filter Tap Rear Condenser unit Air intake Front Condenser cover Handle Condenser unit Catches 14 Troubleshooting If you feel that the dryer is not working properly, consult the following troubleshooting suggestions before contacting the Technical Assistance Centre (see Assistance). Problem: The dryer does not start. Possible causes / Solutions: The plug has not been inserted far enough into the socket to make contact. There has been a power cut. The fuse has blown. Try connecting another appliance to the same socket. If an extension cord is used, try connecting the dryer plug directly into the socket. The door has not been closed properly. The programme has not been set correctly (see How to carry out a drying cycle). The START/PAUSE button has not been pressed (see How to carry out a drying cycle).

EN The drying cycle does not start. A delayed start time has been set (see Programmes and options). The START/PAUSE button has been pressed; a short delay follows before the dryer starts running. Wait for the drying cycle to start; do not press the START/ PAUSE button otherwise the dryer switches to the pause mode and the drying cycle will not start. The filter has not been cleaned (see Maintenance).

The water container must be emptied? The Empty water container indicator light flashes and the message appears H2O (see Maintenance). The condenser needs to be cleaned (see Maintenance). The heat setting is not suited to the type of fabric to be dried (see Programmes and options). An incorrect drying time was selected for the type of load (see Laundry). The items are too wet (see Laundry).

The air intake grille are clogged up (see Installation and Care and Maintenance). The dryer is overloaded (see Laundry). The water container was probably not emptied before starting the programme. Do not wait for the signal for emptying the water container, but always check and empty it before starting a new drying programme (see Description of the tumble dryer). It is normal: the Empty water container indicator light flashes when the water container is full. If the indicator light is on but is not flashing, it is just a reminder to empty the container (see Description of the tumble dryer). Drying times are too long. The Empty water container indicator light flashes, but the dryer has been running for a short time. The Empty water container indicator light is on but the water container is not full. The programme is finished but the items are damper than expected.



[You're reading an excerpt. Click here to read official INDESIT IDCE](http://yourpdfguides.com/dref/4249454)

[845 user guide](http://yourpdfguides.com/dref/4249454)

<http://yourpdfguides.com/dref/4249454>

! For safety reasons, the dryer programmes last a maximum of 4 hours. If an automatic programme has not detected the final dampness level required in this interval, the dryer completes the programme and stops. Check the above points and repeat the programme; if the items are still damp, contact the Technical Assistance Centre (see Assistance). The code F appears on the display followed by one or two numbers, the options indicator lights and the pause indicator light flash. dOn briefly appears on the display every 6 seconds. The Remaining time indicator changes during the drying cycle. The dryer is noisy during the first few minutes of operation. The lights on the dryer control panel are off although the dryer is switched on. If the display visualises F10 or F15, switch the appliance off and unplug it, then clean the filter and the condenser (see Maintenance). Reinsert the plug, switch the appliance on and start another programme.

If the display still visualises F10 or F15, contact the Technical Assistance Centre (see Assistance). If the display still visualises other numbers, mark the code and contact the Technical Assistance Centre (see Assistance). The appliance is in Demo mode. Press the ON/OFF and START/PAUSE buttons and keep them pressed for 3 seconds. The display visualises dOn for 3 seconds, then the dryer starts functioning normally.

@@It is normal for the displayed time to increase during the cycle. @@@@ The dryer has gone into standby mode to save power. This occurs if you have left the dryer on or have had a power cut. @@Press the On/Off button and the lights will come on again. 15 Assistance Before calling the Technical Assistance Centre: EN Spare parts This dryer is a complex machine.

Attempting to repair it personally or with the aid unqualified personnel may put the safety of people at risk, damage the machine or invalidate the spare parts guarantee. Always contact a qualified technician when experiencing problems with this machine. The spare parts were designed exclusively for this machine and should not be used for any other purpose. Follow the troubleshooting guide to check whether problems can be solved personally (see Troubleshooting).

@@@@@@@@This guarantee is subject to the following conditions: The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property.

The appliance is used in the United Kingdom or Republic of Ireland. EN The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on 08448 24 24 24 (Republic of Ireland 01 230 0800) Extended Guarantees We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy.

To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413)for telephone assistance, or, where necessary, to arrange for an engineer to call. 17 EN After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in UK and Ireland offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service.

UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.

indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully.

To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 18 EN 19 195075237.04 02/2010 - Xerox Fabriano EN 20 .



[You're reading an excerpt. Click here to read official INDESIT IDCE](http://yourpdfguides.com/dref/4249454)

[845 user guide](http://yourpdfguides.com/dref/4249454)

<http://yourpdfguides.com/dref/4249454>