



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDCL85BH. You'll find the answers to all your questions on the INDESIT IDCL85BH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDCL85BH
User guide INDESIT IDCL85BH
Operating instructions INDESIT IDCL85BH
Instructions for use INDESIT IDCL85BH
Instruction manual INDESIT IDCL85BH

Instruction manual



TUMBLE DRYER

EN
English, 1

IDCL 85 B H

www.indesit.co.uk

 This symbol reminds you to read this instruction manual.

Keep this manual at hand for immediate reference whenever necessary. It is a crime to throw this manual into the bin or to forget to pass it on to any new owners when selling or transferring the appliance, as they may be liable with the warnings and suggestions herein contained.
Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance.

Contents

Installation, 2
Where to install the tumble dryer
Ventilation
Electrical connections
Preliminary information

Warnings, 4
General safety
Saving energy, and respecting the environment

Care and maintenance, 6
Disconnecting the power supply
Cleaning the filter after each cycle
Checking the drum after each cycle
Emptying the water container after each cycle
Cleaning the condenser unit
Cleaning the tumble dryer

Description of the tumble dryer, 8
Features
Control panel

How to carry out a drying cycle, 10
Starting and selecting a programme

Programmes and options, 11
Programme direct
Special programmes
Options
Opening the door

Laundry, 14
Sorting laundry
Care labels

Drying times

Troubleshooting, 15

Assistance and Guarantee, 16
 spare parts
Information on recycling and disposal

GB

1



[You're reading an excerpt. Click here to read official INDESIT IDCL85BH user guide](http://yourpdfguides.com/dref/5736544)
<http://yourpdfguides.com/dref/5736544>

Manual abstract:

! Keep this manual at hand for immediate reference whenever necessary. @@@@@Troubleshooting, 15 Assistance and Guarantee, 16 Spare parts Information on recycling and disposal 1 Installation Where to install the tumble dryer • Install the dryer far from gas ranges, stoves, radiators or hobs, as flames may damage it. If the dryer is installed below a worktop, en15 mm 15 mm sure there are 10 mm between the upper panel of the dryer and any objects above it, and 15 mm between the sides of the machine and the walls or furniture units adjacent to it. this ensures adequate air circulation. The appliance must be installed with the rear surface placed against a wall. 10 mm GB Electrical connections Before plugging the appliance into the socket, check the following:

• Make sure your hands are dry. □ The socket must have an earth connection. □ The socket must be able to withstand the machine's maximum power output as indicated on the rating plate (see Description of the tumble dryer) • The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer). □ The socket must be compatible with the dryer's plug. Should this not be the case, replace the plug or the socket. The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. ! Once installed, the dryer's electrical wire and plug must be within reach. ! The power cord must not be bent or squashed. ! If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely.

DO NOT leave it where it can be inserted into a socket and create a shock hazard. ! The power must be regularly checked. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (see Assistance). New or longer electric cords are supplied by authorised dealers at a supplementary cost.

! The manufacturer denies any responsibility should any of these rules not be followed. ! If in doubt about any of the above consult a qualified electrician. Preliminary information Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation. Ventilation • The room must be adequately ventilated while the dryer is running. Make sure that the dryer is installed in a room free of humidity and with adequate air circulation. The flow of air around the dryer is essential to allow water to condense during drying; the dryer will not function properly if it is placed in an enclosed space or inside a cabinet. ! Some condensation may form if the dryer is used in a small or cold room. ! We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door. Water drain If your dryer is installed next to a drain the water can be plumbed into this drain. This does away with the need to empty the water container.

If the dryer is stacked onto or installed next to a washing machine it can share the same drain. The height of the drain must be less than 3' (1 m) from the bottom of the dryer. Remove existing hose from position shown in picture A and fit a suitable length of hose and connect as shown in picture B. ! Make sure that the hose is not squashed or kinked when the dryer is in its final location. 1 2 2 1 Picture A 2 Picture B Less than 1m Maximum load sizes: 8 kg GB Product Data - Regulation 392/2012. Brand Indesit Model IDCL 85 B H (UK) IDCL 85 B HK (UK) IDCL 85 B HS (UK) Rated capacity of cotton laundry for the "standard cotton programme" at full load - kg This household tumble drier is a Energy efficiency class on a scale from A+++ (low consumption) to D (high consumption) The weighted Annual Energy Consumption (AEC) kWh 1) This household tumble drier is a Energy consumption full load; Edry - kWh 2) Energy consumption partial load; Edry½ - kWh 2) Power consumption: off-mode (Po) - Watts Power consumption: left-on mode (Pl) - Watts Duration of the 'left-on mode' for power management system minutes Prog. Time - weighted (Tt) full & partial load - minutes 3) Full load (Tdry) - minutes Partial load (Tdry½) - minutes Condensation efficiency class on a scale from G (least efficient) to A (most efficient) Average condensation efficiency - % weighted (Ct) full & partial load 3) full load (Cdry) partial load (Cdry½) Airborne acoustical noise emissions - dB(A) re 1 pW 8. 0 1) The "standard cotton" at full and partial load are the standard programmes to which the information in the label and the fiche relates. The standard cotton program is suitable to dry at cupboard level (0%) cotton laundry and is the most efficient programme in terms of energy consumption. Partial load is half the rated load.*

2) based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. Energy consumption in kWh, for program "Synthetics" full load Programme time in minute, for program "Synthetics" full load Partial load for program "Synthetics" N/A 1. 93 85 3 Warnings GB ! This appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be followed carefully.

General safety • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. □ This tumble dryer has been designed for home, and not professional, use. □ Do not touch the appliance while barefoot or with wet hands or feet.

□ Unplug the machine by pulling on the plug, not the cord. □ After using the dryer, turn it off and unplug it.

Keep the door closed to make sure that children do not use it as a toy. □ Children should be supervised to ensure that they do not play with the dryer. □ Cleaning and user maintenance shall not be made by children without supervision. □ Children of less than 3 years should be kept away from the appliance unless continuously supervised. □ The appliance must be installed correctly and have proper ventilation. The air intake at the front of the dryer should never be obstructed (see Installation). □ Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base. □ Check to see if the dryer is empty before loading it. □ The back of the dryer could become very hot. Never touch it while in use.

□ Do not use the dryer unless the filter, watercontainer and condenser are securely in place (see Maintenance).



[You're reading an excerpt. Click here to read official INDESIT IDCL85BH user guide](http://yourpdfguides.com/dref/5736544)
<http://yourpdfguides.com/dref/5736544>

Do not overload the dryer (see Laundry •for maximum loads). □ Do not load items that are dripping wet. • Carefully check all instructions on clothing labels (see Laundry). □ Do not tumble dry large, very bulky items. □ Do not tumble dry acrylic fibres at high temperatures. □ Do not turn off the dryer when there are still warm items inside. □ Clean the filter after each use (see Maintenance). □ Empty the water container after each use (see Maintenance). □ Clean the condenser unit at regular intervals (see □ Maintenance).

□ Do not allow lint to collect around the dryer. □ Always buy original spare parts and accessories (see Service). To minimise the risk of fire in your tumble dryer, the following should be observed: • Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle.

It is a fire hazard to dry items that HAVE NOT been washed with water. □• Do not dry garments that have been treated with chemical products.

□ Do not tumble dry items that have been spotted or soaked with vegetable or cooking oils, this constitutes a fire hazard. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil, Oxidisation creates heat. If the heat cannot escape, items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics containing vegetable or cooking oil or those that have been contaminated with hair care products be placed in a tumble dryer they should first be washed with extra detergent - this will reduce, but not eliminate the hazard. They should not be removed from the dryer and piled or stacked while hot. □ Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances. Highly flammable 4 substances commonly used in domestic environments including cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer. □• Do not tumble dry items containing foam rubber (also known as latex foam), or similarly textured rubber like materials. Foam rubber materials can, when heated, produce fire by spontaneous combustion. □• Fabric softener or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener product. □ Do not tumble dry undergarments that contain metal reinforcements eg. bras with metal reinforcing wires.

Damage to the tumble dryer can result if the metal reinforcements come loose during drying. □• Do not tumble dry rubber, plastic articles such as shower caps or babies waterproof covers, polythene or paper. □ Do not tumble dry rubber backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes. WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Save energy and respect the environment • Wring out all items to eliminate excess water before tumble drying (if you use a washing machine first, select a high spin cycle). Doing this will save time and energy during drying. □ Always dry full loads - you save energy: single items or small loads take longer to dry. □ Clean the filter after each use to contain energy consumption costs (see Maintenance). GB 5 Care and maintenance GB Disconnecting the power supply Cleaning the filter after each cycle ! Disconnect the dryer when not in use or during cleaning and maintenance operations. Emptying the water container after each cycle 2 The filter is a fundamental component of the dryer: its function is to collect lint and fluff that form during drying.

Clean the filter once drying is completed, by rinsing it under running water or cleaning it with a vacuum cleaner. Should the filter become clogged, the flow of air inside the dryer will be seriously hampered: drying times becomes longer and more energy is consumed. Moreover, the dryer may become damaged. The filter is located in front of the dryer seal (see Picture). Clean the fluff off the filter and replace it correctly.

Do not use the dryer unless the filter has been replaced in its holder. Checking the drum after each cycle Cleaning the drum Rotate the drum manual light remains on. To put the programme into pause mode, press the button again; the indicator light will turn orange and start flashing again. To resume the programme from the point it was interrupted, press the button again (see Start and programme selection). GB Indicator lights “Maintenance” indicator lights The indicator lights provide important information.

They indicate the following: Before each programme, the indicators light CLEAN FILTER and EMPTY WATER signals that it is essential to clean the filter and the water container must be emptied, before using the tumble dryer (see Care and maintenance). If the water container fills during the course of the programme, the LED lights up. The water container must be emptied before pressing the START/PAUSE button to resume the cycle from the point it was interrupted. The “Clean condenser unit” indicator light Care and maintenance). (CLEAN CONDENSER) signals that it is essential to clean the condenser regularly (see “Drying phases” indicator lights The The DRYING indicator light signals that the drying phase is running. COOL TUMBLE indicator light signals that the cooling phase is running. The END indicator light signals that the programme has ended. □ Delay timer” indicator light If the “Delay timer” option has been activated (see “Programmes and options”), after the programme has started, the indicator light corresponding to the chosen delay time will start flashing: As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Once the set delay time ends, the flashing LED will turn off and the set programme will start. 9 How too carry out a drying cycle GB Starting and selecting a programme 1. Plug the dryer into the power supply socket.

2. Sort your laundry according to fabric type (see Laundry). 3. Open the door, ensure that the filter is clean and securely placed and that the water container is empty and correctly slotted (see Care and maintenance). 4. Load the machine, making sure that no piece of laundry gets between the door and the relative seal. Turn on the dryer by moving the knob to a position other than OFF. 6. After consulting the programme chart and the indications for each type of fabric (see Laundry), turn the Programme selection knob towards the programme corresponding to the type of laundry to be dried (see Programmes and options).



[You're reading an excerpt. Click here to read official INDESIT
IDCL85BH user guide
http://yourpdfguides.com/dref/5736544](http://yourpdfguides.com/dref/5736544)

! Warning: If the position of the programme selection knob changes after pressing the START/PAUSE button, the selected programme will NOT be modified.

To modify the programme, press the START/PAUSE button to put the programme in pause mode (the indicator light flashes orange), then select a new programme and the relative options. Press the START/PAUSE button to start the new programme. 7. If necessary, set the time of the delayed start and any other options (see Programmes and options). 8.

Press the START/PAUSE button to start the drying cycle. Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the START/PAUSE button to resume machine operation. The fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 10.

When the END indicator light turns on, the programme has ended. The buzzer will beep 3 times to let you know that your programme is complete. Open the door, remove the laundry then clean the filter and replace it. 11. Set the program knob to OFF to switch off the machine. 12. Disconnect the dryer from the power supply. 13. The OFF position switches off the dryer. 14. even drier than Standard Cotton dry. 15. synthetics Recommended to delicately dry synthetic fabrics. 16. it is suitable for loads of up to 1 kg (about 3 jerseys).

We recommend turning the garments inside out before drying them. 17. The garment does not resume its original dimension and shape. ! This programme is not suited for acrylic items. 18. We suggest turning garments inside out before drying them. symbol. 19. Drying the garment after a wash cycle has a beneficial effect as it reactivates the garment's water-repellent treatment. It can be used for loads of up to 2 kg. Jeans 20. This is a programme for jeans made from denim cotton. Before drying your jeans turn the front pockets inside out.

21. Do not mix dark and light coloured items. It can also be used on other garments made from the same material, such as jackets. 22. Loads dried using this programme are usually ready to wear, the edges or seams may be slightly damp. If this is the case, try turning the jeans inside out and running the programme again for a short period. ! We do not recommend that you use this programme if your jeans have elastic waist bands, studs or embroidery.

My TiME (15' - 35' - 60') These programmes can be used if you want to set drying time and temperature. The COOL TUMBLE cycle runs during the final minutes of the programme. Damp to Dry 15' timed programme is ideal to remove damp from tea towels and bath robe used once. Xpress 35': this is a quick timed programme, ideal for drying garments spun at high speed in the washing machine, for example shirts used in a work week. Daily 60': a timed programme, ideal for drying garments spun at high speed in the washing machine, for example a change of sheets.

Freshen Up A short programme suitable for refreshing fibres and garments. As this is not a drying programme, it is not to be used for garments that are still wet. 23. It can be used on any load size but is more effective on smaller loads 24. 25. Options The options allow for customising the selected programme according to one's own needs. Delay timer The start of some programmes (see Programmes and options) may be delayed up to 9 hours. Press the button repeatedly to enter the desired delay time. Before setting a delayed start, make sure that the water container is empty and that the filter is clean. The drum will rotate occasionally before the drying programme starts to prevent the formation of creases. GB Child Lock Prevents the program settings from being changed. After having selected the program and the available options, hold down the two option buttons for 3 seconds (see "Dryer description") A prolonged beep will sound when the buttons are pressed and the LEDs on the options buttons will flash slowly twice. The LEDs on the previously selected options will then remain lit but will no longer be modifiable.

If you attempt to change the settings with Child Lock activated, 3 short beeps will sound and 3 rapid flashes will warn you that it is not possible to modify the program or the options underway. Hold down the options buttons for three seconds to deactivate the Child Lock option. Child Lock can be selected with all programs. The OFF position switches off the dryer. Light Drying Light Drying is a special option designed to gently dry delicate clothes. Press this button to select the low temperature setting; the light next to the button will switch on. Activating this option will increase the duration of the cycles ! Not all options are available on all programmes (see Programmes and options). Opening the door If the door is opened (or the START/PAUSE button is pressed) while a programme is running, the dryer stops and the following may occur: • The START/PAUSE button flashes orange. 26. When a delayed start is running, the delay countdown continues. It is necessary to press the START/PAUSE button to resume the "Delay timer" programme.

One of the "Delay timer" indicator light flashes to signal the delay time entered. 27. It is necessary to press the START/PAUSE button to resume the programme. The progress indicator lights signal the running phase and the START/PAUSE indicator light stops flashing and turns green. 28. When post care phase is active it means that drying programme is already ended. Pressing the START/PAUSE button reactivates a new programme from the beginning.

29. By turning the Programme selection knob, a new programme is selected and the START/PAUSE indicator light flashes green. This procedure can be used to select the COOL TUMBLE programme to cool garments if they are judged to be dry enough. Press the START/PAUSE button to start the new programme.

Note: If you have a power cut, switch off the power or remove the plug. When power is restored, plug in the machine.

30. The OFF position switches off the dryer. 31. Laundry GB Laundry Sorting laundry Sorting laundry Drying times Drying times are approximate and may vary depending on the following: • Amount of water retained by items after the spin cycle: towels and delicate items retain a lot of water. 32. Fabrics: items of the same fabric, but with different texture and thickness may have different drying times. 33. Amount Drying tooof laundry: single items and small loads may take longer times dry. 34. Check the symbols on the care labels of the various garments to verify whether the garments can be safely tumble dried. 35. Sort laundry according to the type of fabric. 36. Wring out garments to remove the maximum amount of water possible. ! Do not load the dryer when garments the various wet. 37. Check the symbols on the care labels ofare dripping garments to verify whether the garments can be safely tumble Maximum load sizes dried.

Do not overload the drum.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5736544)

[IDCL85BH user guide](http://yourpdfguides.com/dref/5736544)

<http://yourpdfguides.com/dref/5736544>

□ Sort laundry according to the type of fabric. The following values indicate for weight of dry • Empty all pockets and check the loose buttons. garments: Natural fibres: hooks and kg • Close zips and maximum 8 fasten belts and strings without Synthetic them. Tightening fibres: maximum 4 kg • Wring out garments to dryer as this may result amount of ! Do not overload the care labels, especially when placing garments in the tumble dryer for the first dry garments: The following values indicate the weight of time. Below are the most fibres: maximum kg Natural commonly used symbols: Synthetic fibres: maximum kg May be tumble dried. ! Do not overload the dryer as this may result is reduced drying performance. Always check the Tumble dry –especially when placing care labels, low heat.

Garments in the tumble dryer for the first time. Below are the most commonly used symbols: May be tumble dried. Drying times are approximate and may vary depending on • Drying: if the following: items are to be ironed, they can be removed from the dryer while still slightly damp. Items that require complete drying can be longer. □ Amount of water retained left items after the spin cycle: towels and delicate items retain a lot of water.

• Heat setting. □ • Temperature of the same fabric, but the temperature of the Fabrics: items of the room: the lower with different texture and thickness may it will take for the dryer to dry clothing. Room, the longer have different drying times. □ • Bulk: certain bulky items and small care during take Amount of laundry: single require special loads may the longer to process. We suggest removing these items and drying dry.

Replacing them in the dryer once they have been shaken • Drying: if items are to be ironed, they can be removed out: repeat this procedure several times during require from the dryer while still slightly damp. Items that the course of the drying cycle. Complete drying can be left longer. □ All fabrics contain natural dampness the temperature keep Temperature of the room: the lower which helps to of the room, the longer it them soft and fluffy. Will take for the dryer to dry clothing. □ Bulk: certain bulky items require special care during the The drying times We suggest removing automatic Cupboard drying process.

Provided refer to the these items and dry programmes. The dryer once they have been shaken replacing them in The Timed drying settings are also times during enable you out: repeat this procedure several indicated to the course to select the most suitable timed option. of the drying cycle. The weight refers to dry items.

All fabrics contain natural dampness which helps to keep them soft and fluffy. automatic Do not tumble dry. Drying times Cotton The drying times provided refer to the automatic Cupboard dry programmes. tumble dry –high heat. The Timed drying settings are also indicated to enable you to select the most suitable timed option. Tumble dry –low heat. The weight refers to dry level of Drying times after 800-1000 rpm wash cycles - with an initial humidity items. 60% 2 kg 40 - 55 minutes 3 kg 55 - 70 minutes 4 kg 70 - 80 minutes 5 kg 80 - 90 minutes 6 kg 95 - 120 minutes 7 kg 120 - 140 minutes 8 kg 130 - 150 minutes 1 kg 30 - 40 minutes Synthetics Light drying Drying times after wash cycles at lower speeds - with an initial humidity level of 40% 1 kg 30 - 40 minutes Acrylics Light drying Drying times after wash cycles at lower speeds - with an initial humidity level of 40% 1 kg 40 - 80 minutes 2 kg 40 - 50 minutes 3 kg 50 - 70 minutes 4 kg 70 - 90 minutes 2 kg 60 - 100 minutes 14 Troubleshooting If you feel that the dryer is not working properly, consult the following troubleshooting suggestions before contacting the Technical Assistance Centre (see Assistance). gB Problem: The dryer does not start. Possible causes / Solutions: • The plug has not been inserted far enough into the socket to make contact.

Try connecting another appliance to the same socket. □ If an extension cord is used, try connecting the dryer plug directly into the socket. □ The door has not been closed properly. □ The programme has not been set correctly (see How to carry out a drying cycle). □ The START/PAUSE button has not been pressed (see How to carry out a drying cycle).

• A delayed start time has been set (see Programmes and options). □ The START/PAUSE button has been pressed; a short delay follows before the dryer starts running. Wait for the drying cycle to start; do not press the START/PAUSE button otherwise the dryer switches to the pause mode and the drying cycle will not start. The “Empty water container” indicator light flashes (see Care and maintenance). • The condenser needs to be cleaned (see Care and maintenance).

□ The heat setting is not suited to the type of fabric to be dried (see Programmes and options). □ An incorrect drying time was selected for the type of load (see Laundry). □ The air intake grille or the rear air vents are clogged up (see Installation, and Care and maintenance). □ The water bottle was not emptied before starting the programme. Always empty it before starting a new drying programme (see Description of the tumble dryer) do not wait for the bottle full signal (buzzer beeps once every 5 seconds and the indicator light flashes) before emptying the water container. ! For safety reasons, the dryer programmes last a maximum of 5 hours. If an automatic programme has not detected the final dampness level required in this interval, the dryer completes the programme and stops. Check the above points and repeat the programme; if the items are still damp, contact the Technical Assistance Centre (see Assistance). □ This is normal, especially if the dryer has not been used for a long time. @@ The dryer has gone into standby mode to save power.

This occurs if you have left the dryer on or have had a power cut. @@@@ The OFF position switches off the dryer. The drying cycle does not start. drying times are too long. The “Empty water container” indicator light flashes. The programme is finished but the items are damper than expected. The dryer is noisy during the first few minutes of operation. @@ 15 Assistance 03/2014 - Xerox Fabriano Before contacting the Technical Assistance Centre: Spare parts This dryer is a complex machine. Attempting to repair it personally or with the aid of an unqualified personnel may put the safety of people at risk, damage the machine or invalidate the spare parts guarantee. Always contact a qualified technician when experiencing problems with this machine.

GB • Follow the troubleshooting guide to check whether problems can be solved personally (see Troubleshooting). □ If not, switch the dryer off and contact the Technical Assistance Centre closest to you.



[You're reading an excerpt. Click here to read official INDESIT IDCL85BH user guide](http://yourpdfguides.com/dref/5736544)
<http://yourpdfguides.com/dref/5736544>

Essential Contact Information INDESIT SERVICE - Service You Can Rely On At Indesit we pride ourselves on offering our customers the best service we possibly can, wherever you are in the UK and Ireland. Rest assured though, no one knows an Indesit appliance better than we do and our service is second to none... Wherever you are we can be there – we have over 1,000 highly skilled Indesit engineers covering the whole of the UK and Ireland ensuring fast, reliable, local service. □Right first time’ – our engineers have the latest tools to help get your Indesit appliance back up and running the first time we visit.

Experts in our field – all of our engineers are trained to the highest standard at our Training Centre of Excellence and possess unrivalled expertise and product knowledge. Skilled staff – we have over 400 skilled UK based call centre staff, dedicated to offering you excellent service 364 days a year. Telephone in the United Kingdom: 08448 224 224 Telephone in the Republic of Ireland: 0818 313 413 Please note: Our advisors will require the following information:

•••name, address and postal code telephone number type of malfunction date of purchase ••model number serial number This information can be found on the data plate located behind the door. Information on recycling and disposal As part of our continual commitment towards environmental protection, we reserve the right to use recycled quality components to reduce costs for our customers and to minimise materials wastage. □ Disposing of the packaging materials: follow local regulations to allow for recycling of packaging materials.

□ In order to minimise the risk of injury to children, remove the door and plug, then cut the power supply cord flush with the appliance. Dispose of these parts separately to prevent the appliance from being connected to a power supply socket. European Directive 2012/19/EC concerning Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling materials comprising the machine, while preventing potential damage to public health and the environment. The crossed-out wheeled bin symbol appears on all products to remind owners of the obligations regarding separate waste collection. Owners should contact their local authorities or appliance dealers for further information concerning the correct disposal of household appliances. This appliance conforms to the following EU directives: - 2006/95/EC (Low Voltage Directive) - 2004/108/EC (Electromagnetic Compatibility Directive). .



[You're reading an excerpt. Click here to read official INDESIT IDCL85BH user guide](http://yourpdfguides.com/dref/5736544)
<http://yourpdfguides.com/dref/5736544>