



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDL 40. You'll find the answers to all your questions on the INDESIT IDL 40 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDL 40
User guide INDESIT IDL 40
Operating instructions INDESIT IDL 40
Instructions for use INDESIT IDL 40
Instruction manual INDESIT IDL 40

IDL 40

Lavastoviglie
Installazione e uso

Dishwasher
Installation and use

Lava-vaisselle
Installation et emploi

Geschirrspüler
Installations und Gebrauch

Vaatwasser
Installatie en gebruik

Lavavajillas
Instalación y el uso

Máquina de lavar louça
Instalação e o uso



[You're reading an excerpt. Click here to read official INDESIT IDL 40 user guide](http://yourpdfguides.com/dref/2326235)

<http://yourpdfguides.com/dref/2326235>

Manual abstract:

This appliance complies with the following EEC directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications. After removing the packing, check to make sure that the appliance is not damaged. The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. 4. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - During installation, the power supply cord must not be excessively or dangerously bent or flattened; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 5. Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open. 6. This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. 7.

Do not touch the heating element during or after a wash cycle. 8. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 9. If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket.

Appliances which are no longer being used must be made inoperable by cutting the power supply cord and removing the door lock. 1. Remove the lower rack and then unscrew and remove the cap from the salt container; 2. If you are filling the container for the first time, fill it with water; 3. Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. 4.

Carefully screw the cap back on. The salt container should be filled after about every 30 wash cycles. Your Local Water Board can supply the degree of hardness of the water in your area. to adjust salt consumption, proceed as follows: 1) Unscrew the cap from the salt container. 2) There is a ring on the container with an arrow on it (see figure to the side), if necessary, rotate the ring in the anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used. It is recommended that adjustments be made in accordance with the following schema: Detergent Dispenser specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Wash Cycle Table". The cleaning detergent should be introduced into the two containers "C" and "D" up to the rim. After pouring in the detergent, replace the lid, pressing down until it clicks. Dishwasher detergent in tablets is now available on the market, in which case you should place one tablet into container "D" and replace the lid.

Notice: To facilitate closing the cover, remove any excess detergent on the edges of the dispenser. There are 6 different settings; the normal dosage setting is 4. If the water in your area is hard or very hard, we still recommend you pour extra salt into the relevant dispenser to prevent the formation of white streaks on your dishes or on the appliance interior. Add rinse aid to the corresponding container only if you are dissatisfied with the results on your dishes. In any case, please read the manufacturer's instructions provided on the packet. Before placing the dishes in the dishwasher, remove the larger food particles to prevent the filter from becoming clogged, which results in reduced performance. If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they be allowed to soak before they are washed. This will eliminate the need for extra wash cycles. pull out the racks to facilitate loading the dishwasher. How to Use the Lower Rack We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.

- Deep pots should be slanted to allow the water to flow out. Insert the cutlery into the basket: knives and utensils with sharp blades or tips should be positioned with the sharp parts at the bottom. position all cutlery items so that they don't touch. a) how to adjust the Upper rack. Close the tabs to lock the rack in place (see Fig. These phases are: If you have left out a dish. There's been a power failure? have you opened the dishwasher door? at the end of the wash cycle. Empty the lower rack first. Cold rinse Rinse with hot water at 70°C.

Environmentally-friendly cycle, with low energy consumption levels, suitable for normally dirty pans and dishes. Economic and fast cycle to be used for slightly dirty dishes. Run cycle immediately after use. Preliminary wash cycle for dishes and pans awaiting completion of the load with the dishes from the next meal. Short cold wash to prevent food from drying onto the dishes. - It is important to try and run the dishwasher when it is fully loaded in order to save on energy. In order to prevent odors from forming and food from caking onto the dishes, you can run the hold cycle. - Choose the right wash cycle: the choice of cycle depends on the type of dishware, cookware and utensils being washed and how dirty they are. - Use the right amount of detergent: if you use too much detergent, the result will not be cleaner dishes, but, rather, a greater negative impact on the environment. - There is no utility in rinsing dishes, cookware and utensils before placing them in the dishwasher.

do not run risks. Rather, use only a cloth and warm soapy water. If absolutely necessary, it can be positioned on its back. Periodic cleaning with a damp sponge will prevent this from occurring. The filter assembly If you want consistent good results from your dishwasher, you need to clean the filter 1 assembly. The food particles are A B 2 removed from the wash water, allowing it to be recirculated during the cycle, filtered perfectly. For this reason, it is a good idea C to remove the larger food particles trapped inside the cup "C" and the semi-circular filter A after each wash; pull the cup handle upwards to remove them. Just rinse them under running water. The entire filter assembly should be cleaned thoroughly once a month: cup C + semi-circular filter A + cylindrical filter B. Reassemble the filter parts (as shown in the figure) and reinsert the whole assembly into the dishwasher. position it into its housing and press downwards. The dishwasher is not to be used without filters. Improper replacement of the filters may reduce the efficiency of the wash and even damage your dishwasher. Cleaning the Sprayer Arms It may happen that food particle become encrusted on the sprayer arms and block the holes (see "Close up view (interior)", letters F-I).



[You're reading an excerpt. Click here to read official INDESIT IDL 40 user guide](http://yourpdfguides.com/dref/2326235)

<http://yourpdfguides.com/dref/2326235>

Check the sprayer arms periodically and clean them when needed.

Cleaning the Water Inlet Filter Periodically, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance. Do not use a different hose. In the event of replacements, use original spare parts only. (see figure 2).

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance. Hot Water Connection The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60°C.

avoid restricting or bending it. The part of the pipe marked with the letter A should be between 40 and 100 cm above the ground. Attention: The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain.

Electrical Connection After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is sized for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law). If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the plug, rather than using adaptors or the like as they could cause overheating and burns. Should the electricity supply cable be damaged, we recommend that you only contact authorised Technical Service Centres for the replacement. .



[You're reading an excerpt. Click here to read official INDESIT IDL 40 user guide](http://yourpdfguides.com/dref/2326235)

<http://yourpdfguides.com/dref/2326235>