



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDL500. You'll find the answers to all your questions on the INDESIT IDL500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT IDL500**  
**User guide INDESIT IDL500**  
**Operating instructions INDESIT IDL500**  
**Instructions for use INDESIT IDL500**  
**Instruction manual INDESIT IDL500**

**IDL 500**  
**IDL 505**

Dishwasher  
**Installation and use**

 **INDESIT**



[You're reading an excerpt. Click here to read official INDESIT IDL500 user guide](http://yourpdfguides.com/dref/5066498)  
<http://yourpdfguides.com/dref/5066498>

**Manual abstract:**

Carefully dispose of the packing material. 2. @@@@ 4. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - During installation, the power supply cord must not be excessively or dangerously bent or flattened; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 5. Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open. 6. This appliance cannot be installed outdoors, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. 7.

Do not touch the heating element during or after a wash cycle.

8. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 9. If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting."

" If you cannot resolve the problem, contact a service centre. 10. Appliances which are no longer being used must be made inoperable by cutting the power supply cord and removing the door lock. To maintain the EFFICIENCY and SAFETY of this appliance, we recommend: 1 call only the Service Centers authorized by the manufacturer I always use original Spare Parts Close-up View (control panel) G R D A Intensive Time 4 You Eco Rapid '25 Soak 25 5 B C ON - OFF Button ON - OFF Light Handle For Opening Door Knob For Selecting Cycles Cycle phase indicator lights Start/Reset Button 1 GB Close-up View (Interior) E G F H J K I L Upper Rack Top Sprayer Arm Rack Height Adjustor Lower Rack Bottom Sprayer Arm Salt Container Cap Washing Filter Detergent and Rinse Aid Dispenser 7HFKQLFDO FKDUDFWHULVWLFV Width Depth Height Capacity Mains water pressure Power voltage Total absorber power Fuse cm. Salt The hardness of the water varies from place to place.

If hard water is used in the dishwasher, deposits will form on the dishes and utensils. The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Loading the Salt into the Softener Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: 1. Remove the lower rack and then unscrew and remove the cap from the salt container; 2. 10 bar) See data plate See data plate See data plate GB 2 Salt . Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. It is normal for a small amount of water to come out of the salt container. 4. Carefully screw the cap back on.

The salt container should be filled after about every 30 wash cycles. Warning: To prevent rust from forming, we advise you to load the salt before starting a wash cycle. Adjusting Salt Consumption The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimize and customize the level of salt consumption so that it remains at a minimum. Your Local Water Board can supply the degree of hardness of the water in your area. To adjust salt consumption, proceed as follows: 1) Unscrew the cap from the salt container. 4. It is recommended that adjustments be made in accordance with the following schema: Water Hardness Salt Autoconsumption (cycles\2(grams/kg) cycle) 0 20 40 60 / 60 40 25

Clarke degrees Â°H mmol/l Selector position 0 - 14 14 - 36 36 - 71 >71 0 - 17 18 - 44 0 -1,7 1,8 - 4,4 / "-" MED "+" 45 - 89 4,5 - 8,9 >89 > 8,9 3 GB Detergent and Rinse Aid . Detergent Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Wash Cycle Table."

" The detergent dispenser is located on the inside panel of the door. loading the detergent To open lid "A", press button "B". The cleaning detergent should be introduced into the two containers "C" and "D" up to the rim. After pouring in the detergent, replace the lid, pressing down until it clicks. Dishwasher detergent in tablets is now available on the market, in which case you should place one tablet into container "D" and replace the lid.

Rinse Aid This product makes dishes sparkle more as it improves their drying. The rinse aid container is situated on the inside of the appliance door; you should refill it when you see the container is empty by means of indicator â□□□Dâ□□□. Loading the Rinse Aid To open the dispenser, turn the "C" cap in the anti-clockwise direction and then pour in the rinse aid, making sure not to overflow. The amount of rinse aid used for each cycle can be regulated by turning the "F" dose adjustor, located beneath the "C" cap, with a screwdriver. There are 6 different settings; the normal dosage setting is 4.

If drops of water remain on the dishes or spotting occurs, the dosage adjustor should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjustor to a lower setting. A Notice: To facilitate closing the cover, remove any excess detergent on the edges of the dispenser. Warning Three-in-one dishwasher tablets are now available on the market, and combine the detergent, salt and rinse aid all in one. important: Proper dosage of the rinse aid improves drying. Add rinse aid to the corresponding container only if you are dissatisfied with the results on your dishes. In any case, please read the manufacturer's instructions provided on the packet. GB 4 Loading the Dishwasher Before placing the dishes in the dishwasher, remove the larger food particles to prevent the filter from becoming clogged, which results in reduced performance. If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they be allowed to soak before they are washed. This will eliminate the need for extra wash cycles.

Pull out the racks to facilitate loading the dishwasher. How to Use the Lower Rack We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right. It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm. - Deep pots should be slanted to allow the water to flow out. -The silverware basket can be doubled (see figure) so that only one section may be used when the silverware load is light. This also makes space for additional pots and pans, and it can also be placed in the upper rack. - Silverware should be placed in the silverware basket with the handles at the bottom; If the rack has side baskets, the spoons should be loaded individually into the appropriate slots.



**[You're reading an excerpt. Click here to read official INDESIT IDL500 user guide](http://yourpdfguides.com/dref/5066498)**  
<http://yourpdfguides.com/dref/5066498>



*Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket.*  
*Instruction for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow - Earth Blue - Neutral Brown - Live As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminal in your plug, proceed as follows: connect Green & Yellow wire to terminal marked 'N' or coloured Green or Green & Yellow. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse. A 15 amp plug must be protected by a 15 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt about the electrical supply to your machine, consult a qualified electrician before use.*  
*How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE BROWN GREEN AND YELLOW  
'N' NEUTRAL (â€œNâ€œ) 'L' LIVE (â€œLâ€œ) 'E' EARTH (â€œEâ€œ) GREEN & YELLOW BROWN 13 amp fuse BLUE CROSS-BAR  
CORD GRIP CAUTION: The dishwasher plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be done safely.*

*Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above*  
11 GB Merloni Elettrodomestici Viale Aristide Merloni 47 60044 Fabriano Italy Tel +39 0732 6611 Fax +39 0732 662501  
www. .



[You're reading an excerpt. Click here to read official INDESIT](#)

[IDL500 user guide](#)

<http://yourpdfguides.com/dref/5066498>