



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDV 75. You'll find the answers to all your questions on the INDESIT IDV 75 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDV 75
User guide INDESIT IDV 75
Operating instructions INDESIT IDV 75
Instructions for use INDESIT IDV 75
Instruction manual INDESIT IDV 75

Instruction manual

TUMBLE DRYER

EN

English, 1

IDV 75
IDV 75 S

 This symbol reminds you to read this instruction manual.
 Keep this manual at hand for immediate reference whenever necessary. Always store this manual close to the tumble dryer and remember to pass it on to any new owners when selling or transferring the appliance, so they may familiarise with the warnings and suggestions herein contained.
 Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance.

Contents

Installation, 2-3

Where to install the tumble dryer
Ventilation
Electrical connections
Leveling the tumble dryer
Before you start your dryer

Description of the tumble dryer, 4

Front side
Rear side
Control panel

How to carry out a drying cycle, 5

Starting a drying programme

Drying settings, 6

Drying times
Drying programmes and options

Laundry, 7

Sorting laundry
Care labels
Special items

Warnings and suggestions, 8

General safety
Information on recycling and disposal
Saving energy and respecting the environment

Care and maintenance, 9

Disconnecting the power supply
Cleaning the filter after each cycle
Checking the drum after each cycle
Cleaning the tumble dryer

Troubleshooting, 10

Assistance and Guarantee, 11-12-13
Spare parts

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IDV 75 user guide](http://yourpdfguides.com/dref/4249455)

<http://yourpdfguides.com/dref/4249455>

Manual abstract:

@@@This ensures adequate air circulation. @@ - You should also make sure that the room in which the tumble dryer is installed is not damp, and that it is adequately ventilated. · We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door. 10 mm Wall ventilation hole 1. Leave an opening in the wall to the left of the tumble dryer installation site. 2. Make the hose as short and straight as possible, in order to prevent any moisture from condensing and leaking back into the appliance. A 3. The hole in the wall must also be straight and pointing downwards, so that the flow of air coming out is not impeded. Areas A and B should be checked frequently, to prevent the accumulation of fluff or debris, particularly if the tumble dryer is used very often.

The hose adaptor must be fitted correctly, in order to prevent damp air from coming back into the room. B Window ventilation hole The ventilation hole should be directly behind the dryer in order to keep the hose as short as possible. Make sure you do not push the tumble dryer too far backwards, as this could lead to the ventilation hose being crushed, bent or even disconnected. There should be no cuts, kinks or U-shaped bends in the hose, as these could impede ventilation or trap condensation. Ventilation through an open window The end of the hose must be facing downwards, in order to prevent the hot, damp air from forming condensation in the room or the tumble dryer.

Ventilation This appliance gently dries laundry by taking in cold, clean and relatively dry air, heating it and passing it through the fabric. To facilitate the drying process, damp air is expelled at the rear, through a ventilation hose. When the dryer is in use, there has to be adequate ventilation to avoid a back flow of gases into the room from appliances burning other fuels, including open fires. Mobile ventilation system When using the tumble dryer with the mobile ventilation system, a ventilation hose must be connected. @@@@ Make sure you do not point the ventilation hose towards the air inlet, which is located on the rear of the appliance.

The ventilation hose should not exceed a maximum length of 2.4 metres; it should also be shaken frequently to remove any fluff, dust or water deposits inside it. Make sure you do not crush the hose. Fixed ventilation system We recommend the ventilation hose is connected to a ventilation system for windows or doors, available from the retailer which originally sold you the appliance or from your local spare parts stockist. Make sure that the tumble dryer is adequately ventilated, and that the end of the ventilation hose is not pointing towards the air inlet pipe on the rear of the appliance. The ventilation hose must always be fitted to ensure optimum performance. Make sure that the ventilation hose and the air inlet vents are not obstructed or blocked. Do not let the tumble dryer recirculate exhaust air. Improper use of the tumble dryer may result in fire hazards. The air emitted by the tumble dryer must not be expelled in the same duct as used for the fumes produced by different appliances which burn gas or other fuels.

Do not discharge the exhaust air into an extraction system or any duct with an extractor fan. This will affect the way the thermal controls operate and can result in a fire hazard. 2 Electrical connections Before plugging the appliance into the socket, check the following: Make sure your hands are dry. The socket must have an earth connection. The socket must be able to withstand the machines maximum power output as indicated on the data plate (see Description of the tumble dryer). The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer). The socket must be compatible with the dryers plug. Should this not be the case, replace the plug or the socket. Do not use extension cords. The dryer must not be installed outdoors, even if the space is sheltered.

It can be very dangerous if exposed to rain or storms. @@ The power cord must not be bent or squashed. @@@@WARNING: The plug must not be used without a fuse cover. @@@@New or longer power cords are supplied at an extra charge by authorized dealers. The manufacturer denies any responsibility should any of these rules not be followed.

If in doubt about any of the above consult a qualified electrician. 3 Description of the tumble dryer Front side EN Rear side Control panel Drum Rating Plate Air inlet Serial number and model number Filter Caution, high temperature Connection for ventilation hose Control panel High Heat button button Start Drying time selector knob Drying time selector knob This is used to set the drying time: turn the knob in a clockwise direction until the indicator is set to the desired drying time (see Drying settings). Do not attempt to turn the knob anticlockwise. High Heat button It can be used to customise the selected programme in accordance with your own requirements. START button Press the button to begin drying.

4 How to carry out a drying cycle Starting a drying programme 1. Plug the dryer into the power supply socket. 2. Select a suitable drying programme for the type of laundry (see Laundry). 3. Open the door, ensure that the filter is clean and securely placed. 4. Load the machine, making sure that no piece of laundry gets between the door and the door seal. Close the door. 5.

Turn the Drying time selector knob until the indicator is pointing towards the most suitable drying time for the type of fabric in that load. Use the table to check the relationship between fabric type and load capacity (see Drying settings), and make sure you are familiar with the instructions provided for each type of fabric (see Laundry). Do not attempt to turn the knob anticlockwise. 6. If necessary, set the temperature using the HIGH HEAT button. 7. Press the START button to start the drying cycle. Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the START button to resume machine operation. 8.

The final COLD DRYING phase (i.e. the fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 9. Open the door, remove the laundry then clean the filter and replace it.

10. Disconnect the dryer from the power supply. EN 5 Drying settings Drying times EN The drying time depends on the size of the load and on the type of fabric it contains (see Table). The cold drying cycle runs during the final 10 minutes of the programme. @@@@Items that require complete drying can be left longer.

@@@@ Do not over-dry items. @@@@It lasts about 10 minutes. @@High Heat button The high heat button selects the drying temperature.



[You're reading an excerpt. Click here to read official INDESIT IDV](http://yourpdfguides.com/dref/4249455)

[75 user guide](http://yourpdfguides.com/dref/4249455)

<http://yourpdfguides.com/dref/4249455>

@@ Sort laundry according to the type of fabric. Empty all pockets and check for loose buttons. Close zips and hooks and fasten belts and strings without nonprofessional use. Do not touch the appliance while barefoot or with wet hands or feet. Unplug the appliance by pulling on the plug, not the cord. Do not allow children near the appliance while it is in use. After use, switch the appliance off and unplug it.

Keep the appliance door closed to prevent children using it as a toy. @@@@ Check whether the dryer is empty before loading it. @@@@ Do not overload the dryer (see Laundry for the maximum load sizes). Do not add items that are dripping wet.

@@@@@ The crossed-out wheeled bin symbol appears on all products to remind owners of the obligations regarding separate waste collection. Owners should contact their local authorities or appliance dealers for further information concerning the correct disposal of household appliances. Saving energy and respecting the environment Wring out items before tumble drying them to remove the maximum amount of water possible (if they are previously washed in a washing machine, select a spin cycle). This ensures that energy is saved during tumble drying. Always use the tumble dryer at full load to save energy: single items and small loads may take longer to dry. Clean the filter at the end of each cycle to reduce energy consumption costs (see Care and maintenance).

Care and maintenance Disconnect the dryer when not in use or during cleaning and maintenance operations. Disconnecting the power supply EN Cleaning the filter after each cycle The filter is a fundamental component of the dryer: its function is to collect lint and fluff that form during drying. Clean the filter once drying is completed, by rinsing it under running water or cleaning it with a vacuum cleaner. Should the filter become clogged, the flow of air inside the dryer will be seriously hampered: drying times becomes longer and more energy is consumed. Moreover, the dryer may become damaged.

The filter is locaguarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. **THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.**

5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. @@@@ Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 12 After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. EN Essential Contact Information Indesit Service We are the largest service team in the UK and Ireland offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life.

UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 13 EN 14 EN 15 195089406.00 11/2010 EN 16 .



[You're reading an excerpt. Click here to read official INDESIT IDV 75 user guide](http://yourpdfguides.com/dref/4249455)
<http://yourpdfguides.com/dref/4249455>