



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDV75. You'll find the answers to all your questions on the INDESIT IDV75 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual INDESIT IDV75**
- User guide INDESIT IDV75**
- Operating instructions INDESIT IDV75**
- Instructions for use INDESIT IDV75**
- Instruction manual INDESIT IDV75**

## Instruction manual

TUMBLE DRYER

**EN**  
English, 1

**IDV 75**  
**IDV 75 S**

**i** This symbol reminds you to read this instruction manual.

**1** Keep this manual at hand for immediate reference (where necessary). Also, to close this manual close to the tumble dryer and remember its position to any new owners when selling or transferring the appliance, so they can familiarise with the warnings and suggestions herein contained.

**2** Read these instructions carefully; the following pages contain important information on installation and useful suggestions for operating the appliance.

**i** INDESIT

**Contents**

**Installation, 2-3**  
Where to install the tumble dryer  
Ventilation  
Electrical connections  
Unrattling the tumble dryer  
Before you start your dryer

**Description of the tumble dryer, 4**  
Front side  
Rear side  
Control panel

**How to carry out a drying cycle, 5**  
Starting a drying programme

**Drying settings, 6**  
Drying times  
Drying programmes and options

**Laundry, 7**  
Drying laundry  
Care labels  
Special items

**Warnings and suggestions, 8**  
General safety  
Caring energy and respecting the environment

**Care and maintenance, 9**  
Disconnecting the power supply  
Cleaning the filter after each cycle  
Checking the drum after each cycle  
Cleaning the tumble dryer

**Troubleshooting, 10**

**Assistance and Guarantee, 11-12-13**  
Spares parts  
Information on recycling and disposal



[You're reading an excerpt. Click here to read official INDESIT IDV75 user guide](http://yourpdfguides.com/dref/5489110)  
<http://yourpdfguides.com/dref/5489110>

**Manual abstract:**

*! Keep this manual at hand for immediate reference whenever necessary. @@@@1 Installation EN Where to install the tumble dryer â€¢ Install the dryer far from gas ranges, stoves, radiators or hobs, as flames may damage it. If the dryer is installed below a worktop, ensure there are 10 mm between the upper panel of the dryer and any objects above it, and 15 mm between the sides 15 mm 15 mm of the machine and the walls or furniture units adjacent to it. this ensures adequate air circulation. Make sure the air inlets on the rear panel are not blocked or obstructed. Â€¢ You should also make sure that the room in which the tumble dryer is installed is not damp, and that it is adequately ventilated. â€¢ ! @@ 10 mm 1. @@ 2. @@ 3. @@Areas A and B should be checked frequently, to prevent the accumulation of fluff or debris, particularly if the tumble dryer is used very often.*

*The hose adaptor must be fitted correctly, in order to prevent damp air from coming back into the room. B Wall ventilation hole A Window ventilation hole The ventilation hole should be directly behind the dryer in order to keep the hose as short as possible. ! Make sure you do not push the tumble dryer too far backwards, as this could lead to the ventilation hose being crushed, bent or even disconnected. ! There should be no cuts, kinks or â€¢Uâ€¢-shaped bends in the hose, as these could impede ventilation or trap condensation. Ventilation through an open window The end of the hose must be facing downwards, in order to prevent the hot, damp air from forming condensation in the room or the tumble dryer.*

*Ventilation This appliance gently dries laundry by taking in cold, clean and relatively dry air, heating it and passing it through the fabric. To facilitate the drying process, damp air is expelled at the rear, through a ventilation hose. When the dryer is in use, there has to be adequate ventilation to avoid a back flow of gases into the room from appliances burning other fuels, including open fires. Mobile ventilation system When using the tumble dryer with the mobile ventilation system, a ventilation hose must be connected. The hose should be securely fastened to the ventilation hole at the rear of the appliance (see â€¢Description of the tumble dryerâ€¢).*

*We recommend the hose is connected to an outlet near the tumble dryer, if possible. If it cannot be installed in a permanent spot, the tumble dryer will still function perfectly well if the ventilation hose is passed through a partially opened window. ! Make sure you do not point the ventilation hose towards the air inlet, which is located on the rear of the appliance. ! The ventilation hose should not exceed a maximum length of 2.4 metres; it should also be shaken frequently to remove any fluff, dust or water deposits inside it. Make sure you do not crush the hose. Fixed ventilation system We recommend the ventilation hose is connected to a ventilation system for windows or doors, available from the retailer which originally sold you the appliance or from your local spare parts stockist. ! Make sure that the tumble dryer is adequately ventilated, and that the end of the ventilation hose is not pointing towards the air inlet pipe on the rear of the appliance. ! The ventilation hose must always be fitted to ensure optimum performance. ! Make sure that the ventilation hose and the air inlet vents are not obstructed or blocked.*

*! Do not let the tumble dryer recirculate exhaust air. ! Improper use of the tumble dryer may result in fire hazards. ! The air emitted by the tumble dryer must not be expelled in the same duct as used for the fumes produced by different appliances which burn gas or other fuels. ! Do not discharge the exhaust air into an extraction system or any duct with an extractor fan. This will affect the way the thermal controls operate and can result in a fire hazard. 2 Electrical connections Before plugging the appliance into the socket, check the following: â€¢ Make sure your hands are dry. Â€¢ The socket must have an earth connection. Â€¢ The socket must be able to withstand the machineâ€™s maximum power output as indicated on the rating plate (see Description of the tumble dryer). Â€¢ The power supply voltage must fall within the values indicated on the data plate (see Description of the tumble dryer). Â€¢ The socket must be compatible with the dryerâ€™s plug.*

*Should this not be the case, replace the plug or the socket. The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. ! Once installed, the dryerâ€™s electrical wire and plug must be within reach. ! The power cord must not be bent or squashed. ! The power cord is supplied fitted with a BS1363 plug and with a 13 amp BS1362 fuse. If it is necessary to fit a replacement fuse, it must be a 13 Amp ASTA approved to BS1362 type. WARNING: The plug must not be used without a fuse cover. If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from authorised dealers.*

*Moulded plug Levelling the tumble dryer The tumble dryer should be installed level in order to operate correctly. After installing the tumble dryer in its permanent position, make sure it is level; check its side-to-side levelling first, followed by front-to-back. EN If the tumble dryer is not perfectly level, use a wooden block to support it while you adjust the two front feet, up or down as necessary. @@@@ ! @@@ ! @ ! If in doubt about any of the above consult a qualified electrician. @@@@Do not attempt to turn the knob anticlockwise. @@Plug the dryer into the power supply socket. Open the door, ensure that the filter is clean and securely placed. 4. Load the machine, making sure that no piece of laundry gets between the door and the door seal. Turn the â€¢Drying time selectorâ€¢ knob until the indicator is pointing towards the most suitable drying time for the type of fabric in that load.*

*Use the table to check the relationship between fabric type and load capacity (see Drying settings), and make sure you are familiar with the instructions provided for each type of fabric (see Laundry). Do not attempt to turn the knob anticlockwise. 6. If necessary, set the temperature using the HIGH HEAT button. 7. Press the START button to start the drying cycle. Laundry can be checked while the drying programme runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the START button to resume machine operation. The fabrics are cooled) activates during the last few minutes of the drying programme; always allow this phase to terminate. 9.*

*Open the door, remove the laundry then clean the filter and replace it. 10. Disconnect the dryer from the power supply. 5 Drying settings EN Drying times The drying time depends on the size of the load and on the type of fabric it contains (see Table).*



[You're reading an excerpt. Click here to read official INDESIT IDV75 user guide](http://yourpdfguides.com/dref/5489110)

<http://yourpdfguides.com/dref/5489110>

The COOL TUMBLE cycle runs during the final 10 minutes of the programme.

! For large loads, select the High Heat option if available. Load 1 kg 20 or 30 minutes 20 or 30 minutes 25 or 40 minutes 2 kg 35 or 45 minutes 3 kg 45 or 60 minutes 4 kg 60 or 70 minutes 5 kg 70 or 80 minutes 6 kg 80 or 100 minutes 7 kg 90 or 120 minutes Fabric Cotton high heat Synthetics high heat Acrylics low heat Drying times are approximate and may vary depending on the following: Amount of water retained by items after the spin cycle: towels and delicate items retain a lot of water. Fabrics: items of the same fabric, but with different texture and thickness may have different drying times. Amount of laundry: single items and small loads will take a short time to dry. Drying: if items are to be ironed, they can be removed from the dryer while still slightly damp.

Items that require complete drying can be left longer. Temperature of the room: the lower the temperature of the room, the longer it will take for the dryer to dry clothing. Bulk: certain bulky items require special care during the drying process. We suggest removing these items and replacing them in the dryer once they have been shaken out: repeat this procedure several times during the course of the drying cycle. All fabrics contain natural dampness which helps to keep them soft and fluffy. Drying programmes and options Refresh A short programme suitable for refreshing fibres and garments through the emission of cool air. As this is not a drying programme, it is not to be used for garments that are still wet. High Heat button The high heat button selects the drying temperature. When the button is out low heat is selected and when it is pushed in high heat is selected 6 Laundry Sorting laundry Check the symbols on the care labels of the various garments to verify whether the garments can be safely tumble dried. Sort laundry according to the type of fabric.

Do not load items that are dripping wet. Do not tumble dry large, very bulky items. Complete each programme with its Cool Tumble Phase. Clean the filter after each use (see Maintenance). Do not allow lint to collect around the dryer.

If the heat cannot escape, items can become hot enough to catch fire. ! WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed see Assistance). problem: The dryer does not start. Try connecting another appliance to the same socket.

The door has not been closed properly. The filter has not been cleaned (see Care and maintenance). An incorrect drying time was selected for the type of load (see Laundry). The fixed ventilation flap, on the protective weatherproof cover, may be obstructed (see Installation). This is normal, especially if the dryer has not been used for a long time.

If the noise persists during the entire cycle, contact the Technical Assistance Centre. drying times are too long. The dryer is noisy during the first few minutes of operation. 10 Assistance Before contacting the Technical Assistance Centre: Follow the troubleshooting guide to check whether problems can be solved personally (see Troubleshooting). If not, switch the dryer off and contact the Technical Assistance Centre closest to you.

Provide the following data when contacting the Technical Assistance Centre: name, address and postal code telephone number type of malfunction date of purchase the appliance model (Mod. ) the dryer's serial number (S/N) This information can be found on the data plate located behind the door. spare parts This dryer is a complex machine. Attempting to repair it personally or employing an unqualified service agent may put the safety of people at risk, damage the machine or invalidate the spare parts guarantee. Always contact a qualified technician when experiencing problems with this machine. EN Information on recycling and disposal As part of our continual commitment towards environmental protection, we reserve the right to use recycled quality components to reduce costs for our customers and to minimise materials wastage. Disposing of the packaging materials: follow local regulations to allow for recycling of packaging materials. The crossed-out wheeled bin symbol appears on all products to remind owners of the obligations regarding separate waste collection. Owners should contact their local authorities or appliance dealers for further information concerning the correct disposal of household appliances. This appliance conforms to the following EC directives: - 2006/95/EC (Low Voltage Directive) - 2004/108/EC (Electromagnetic Compatibility Directive).

11 Guarantee EN 12 months Parts and Labour Guarantee Your appliance has the benefit of our manufacturer's guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These included but not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. Non-Domestic Usage Policy Indesit Company manufactures appliances for domestic use only.

We understand that in some cases our appliances are used in commercial and/or non domestic situations. We still provide a full 12 months manufacturer's guarantee, provided the appliance has not been: Accidentally damaged - Damage that occurs suddenly as a result of an unexpected and non-deliberate external action. Maliciously damaged - The deliberate and intentional damage to the product Subjected to misuse - Incorrect or careless or improper use Subjected to overuse - Excessive usage versus that expected of a domestically situated appliance 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee.



[You're reading an excerpt. Click here to read official INDESIT IDV75 user guide](http://yourpdfguides.com/dref/5489110)  
<http://yourpdfguides.com/dref/5489110>

*This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time.*

*To activate the extra parts warranty on your appliance, simply call our free phone registration line on 0800 519 2110 (Republic of Ireland) or 1800 989 877 (Ireland). 12 Extended Guarantees We offer a selection of protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland) or 01 230 0233. Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland) or 0818 313 413 for telephone assistance, or, where necessary, to arrange for an engineer to call. After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us – the manufacturer.*

*Essential Contact Information Indesit Service We are the largest service team in the UK and Ireland offering you access to 400 skilled telephone advisors and 1000 fully qualified engineers on call to ensure you receive fast, reliable, local service. Uk Please note: Our advisors will require the following information: Model Number: Serial number: EN Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. To activate your free 5 year parts guarantee you must register your appliance with us. .*



[You're reading an excerpt. Click here to read official INDESIT IDV75 user guide](#)

<http://yourpdfguides.com/dref/5489110>