



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IDVL 75 B FR. You'll find the answers to all your questions on the INDESIT IDVL 75 B FR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IDVL 75 B FR
User guide INDESIT IDVL 75 B FR
Operating instructions INDESIT IDVL 75 B FR
Instructions for use INDESIT IDVL 75 B FR
Instruction manual INDESIT IDVL 75 B FR


Instruction manual

 
TUMBLE DRYER


EN
English

IDVL 75B R

www.indesit.co.uk

 This symbol reminds you to read this instruction manual.

 Keep this manual at hand for immediate reference where or when necessary. Always store this manual close to the tumble dryer and remember to pass it on to any new owners when taking or transferring the appliance, so the new owner is familiar with the warnings and suggestions herein combined.

 Read these instructions carefully: the following pages contain important information on installation and useful suggestions for operating the appliance.

Contents GB

- Installation, 2**
Where to install the tumble dryer
Ventilation
Electrical connections
Leveling the tumble dryer
Before you start your dryer
- Warnings, 4**
General safety
Saving energy and respecting the environment
- Care and maintenance, 6**
Disconnecting the power supply
Cleaning the filter after each cycle
Checking the drum after each cycle
Cleaning the tumble dryer
- Description of the tumble dryer, 7**
Features
Control panel
- How to carry out a drying cycle, 9**
Starting and selecting a programme
- Programmes and options, 10**
Programme chart
Special programmes
Options
Opening the door
- Laundry, 13**
Sorting laundry
Care labels
Drying times
- Troubleshooting, 14**
- Assistance and Guarantee, 15**
Spare parts
Information on recycling and disposal

1



[You're reading an excerpt. Click here to read official INDESIT IDVL 75 B FR user guide](http://yourpdfguides.com/dref/5799736)
<http://yourpdfguides.com/dref/5799736>

Manual abstract:

@@@@@This ensures adequate air circulation. Make sure the air inlets on the rear panel are not blocked or obstructed. • You should also make sure that the room in which the tumble dryer is installed is not damp, and that it is adequately ventilated. • ! We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door. • ! The appliance must be installed with the rear surface placed against a wall. • 10 mm Wall ventilation hole 1. Leave an opening in the wall to the left of the tumble dryer installation site. 2. Make the hose as short and straight as possible, in order to prevent any moisture from condensing and leaking back into the appliance. 3.

The hole in the wall must also be straight and pointing downwards, so that the flow of air coming out is not impeded. Areas A and B should be checked frequently, to prevent the accumulation of fluff or debris, particularly if the tumble dryer is used very often. The hose adaptor must be fitted correctly, in order to prevent damp air from coming back into the room. B A Window ventilation hole The ventilation hole should be directly behind the dryer in order to keep the hose as short as possible. ! Make sure you do not push the tumble dryer too far backwards, as this could lead to the ventilation hose being crushed, bent or even disconnected.

! There should be no cuts, kinks or "U"-shaped bends in the hose, as these could impede ventilation or trap condensation. Ventilation through an open window The end of the hose must be facing downwards, in order to prevent the hot, damp air from forming condensation in the room or the tumble dryer. Ventilation This appliance gently dries laundry by taking in cold, clean and relatively dry air, heating it and passing it through the fabric. To facilitate the drying process, damp air is expelled at the rear, through a ventilation hose. When the dryer is in use, there has to be adequate ventilation to avoid a back flow of gases into the room from appliances burning other fuels, including open fires.

Mobile ventilation system When using the tumble dryer with the mobile ventilation system, a ventilation hose must be connected. The hose should be securely fastened to the ventilation hole at the rear of the appliance (see "Description of the tumble dryer"). We recommend the hose is connected to an outlet near the tumble dryer, if possible. If it cannot be installed in a permanent spot, the tumble dryer will still function perfectly well if the ventilation hose is passed through a partially opened window. ! Make sure you do not point the ventilation hose towards the air inlet, which is located on the rear of the appliance. ! The ventilation hose should not exceed a maximum length of 2.4 metres; it should also be shaken frequently to remove any fluff, dust or water deposits inside it. Make sure you do not crush the hose. Fixed ventilation system We recommend the ventilation hose is connected to a ventilation system for windows or doors, available from the retailer which originally sold you the appliance or from your local spare parts stockist. ! Make sure that the tumble dryer is adequately ventilated, and that the end of the ventilation hose is not pointing towards the air inlet pipe on the rear of the appliance.

! The ventilation hose must always be fitted to ensure optimum performance. ! Make sure that the ventilation hose and the air inlet vents are not obstructed or blocked. ! Do not let the tumble dryer recirculate exhaust air. ! Improper use of the tumble dryer may result in fire hazards. ! The air emitted by the tumble dryer must not be expelled in the same duct as used for the fumes produced by different appliances which burn gas or other fuels. ! Do not discharge the exhaust air into an extraction system or any duct with an extractor fan. This will affect the way the thermal controls operate and can result in a fire hazard. 2 Electrical connections Before plugging the appliance into the socket, check the following: • Make sure your hands are dry. • The socket must have an earth connection. • The socket must be able to withstand the machine's maximum power output as indicated on the rating plate (see Description of the tumble dryer).

• The power supply voltage must fall within the values indicated on the rating plate (see Description of the tumble dryer). • The socket must be compatible with the dryer's plug. Should this not be the case, replace the plug or the socket. ! DO NOT USE EXTENSION CORDS. ! The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms. ! Once installed, the dryer's electrical wire and plug must be within reach. ! The power cord must not be bent or squashed. ! If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard.

! The electric cord must be regularly checked. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (see Service). New or longer power cords are supplied at an extra charge by authorized dealers. ! The manufacturer denies any responsibility should any of these rules not be followed. ! If in doubt about any of the above consult a qualified electrician. Levelling the tumble dryer The tumble dryer should be installed level in order to operate correctly. After installing the tumble dryer in its permanent position, make sure it is level; check its side-to-side levelling first, followed by front-to-back. If the tumble dryer is not perfectly level, use a wooden block to support it while you adjust the two front feet, up or down as necessary. GB Before you start your dryer Once the tumble dryer is installed, clean the inside of the drum before operating it and remove any dirt accumulated during transportation.

3 Warnings GB ! This appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be followed carefully. General safety • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. • This tumble dryer has been designed for home, and not professional, use. • Do not touch the appliance while barefoot or with wet hands or feet. • Unplug the machine by pulling on the plug, not the cord. • Children should be supervised to ensure that they do not play with the dryer. • Cleaning and user maintenance shall not be made by children without supervision. • Children of less than 3 years should be kept away from the appliance unless continuously supervised.



[You're reading an excerpt. Click here to read official INDESIT IDVL 75 B FR user guide](http://yourpdfguides.com/dref/5799736)
<http://yourpdfguides.com/dref/5799736>

• The appliance must be installed correctly and have proper ventilation.

The air intake vents behind the machine, the outlet vents and the vent tube should never be obstructed (see Installation). • Never direct the vent tube outlet towards the air intake at the back of the machine. • Never allow the tumble dryer to recycle exhaust air. • Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base. • Check to see if the dryer is empty before loading it.

• The back of the dryer could become very hot. Never touch it while in use. • Do not use the dryer unless the filter, is securely in place (see Maintenance). • Do not overload the dryer (see Laundry for maximum loads). • Do not load items that are dripping wet.

• Carefully check all instructions on clothing □ labels (see Laundry). • Do not tumble dry large, very bulky items. • Do not tumble dry acrylic fibres at high temperatures. • Do not turn off the dryer when there are still 4 warm items inside. • Clean the filter after each use (see Maintenance). • Do not allow lint to collect around the dryer. • Never climb on top of the dryer. It could result in damage. • Always follow electrical standards and requirements (see Installation).

• Always buy original spare parts and accessories (see Service).

To minimise the risk of fire in your tumble dryer, the following should be observed: • Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle. It is a fire hazard to dry items that HAVE NOT been washed with water. • □ Do not dry garments that have been treated with chemical products. • Do not tumble dry items that have been spotted or soaked with vegetable or cooking oils, this constitutes a fire hazard. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil, Oxidisation creates heat. If the heat cannot escape, items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics containing vegetable or cooking oil or those that have been contaminated with hair care products be placed in a tumble dryer they should first be washed with extra detergent - this will reduce, but not eliminate the hazard. They should not be removed from the dryer and piled or stacked while hot.

• Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances. Highly flammable substances commonly used in domestic environments including cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer. • □ Do not tumble dry items containing foam rubber (also known as latex foam), or similarly textured rubber like materials.

Foam rubber materials can, when heated, produce fire by spontaneous combustion.

• □ Fabric softener or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener product. • Do not tumble dry undergarments that contain metal reinforcements eg. bras with metal reinforcing wires. Damage to the tumble dryer can result if the metal reinforcements come loose during drying. • □ Do not tumble dry rubber, plastic articles such as shower caps or babies waterproof covers, polythene or paper.

• Do not tumble dry rubber backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes. • Remove all objects from pockets such as lighters and matches. WARNING: Never stop the dryer before the end of the drying cycle unletion of water and/or cleaning agents such as fabric conditioners. This coloured film does not affect the dryer's performance. Cleaning the tumble dryer • The external metal and plastic parts and the rubber parts can be cleaned with the aid of a damp cloth. • Periodically check the vent hose and all other parts of the venting system and remove any accumulations of fluff and lint.

6 Description of the tumble dryer Front side Rear side GB Control panel Drum Rating Plate Air inlet Serial number and model number Filter Caution, high temperature Connection for ventilation hose 2 3 4 5 6 7 8 595 9 10 11 12 13 14 15 Control panel buttons and indicator lights Options Drying phase or Delay timer indicator lights Programme selection knob with OFF Start/Pause button and indicator light Maintenance indicator lights 7 Modificacao: Modification: Ревизия: Opis Modyfikacji: Degisiklik: Modifica: Errore: Nessun riferimento Errore: Nessun riferimento RCT: Visto: Approval: Созлацовано: Zatwierdzil: Visa: Vize: Errore: Nessun riferimento Nessun riferimento Errore: Errore: Nessun riferimento Errore: Ness Formato: M aciu маб: Φ Size: опмам: Escala: Skala: Echelle: Format: Scale: Olcek: Scala: Bec: Poids: Waga: Peso: Agirlik: Weight: Volume: Объем: Objetosc: Hacim: Criado o: Created by: Разработал: Wykonal: Créé par: Creato da: İlk cizen: General Tolerances: Tolerancias Допуски: Неуказанны General: Tolerance e gerais: Tolerancje Ogolne: Tolleranze Generali: Genel Toleranslar: Modificadoda: Modified : япан: Изме нульбу: Zmodyfikowal: Modifié par:o: Modificato Degisikligi GB Programme selection knob Allows for setting the programme: turn until the indicator points towards the desired programme. The OFF position switches off the dryer (see Starting and selecting a programme). Options buttons Allow for selecting the options available for the selected programme. The relative indicator lights switch on when the option has been selected (see Programmes and options).

START/PAUSE button and indicator light When the green light flashes slowly, press the button to start the programme. When the cycle is under way, the indicator light remains on. To put the programme into pause mode, press the button again; the indicator light will turn orange and start flashing again. To resume the programme from the point it was interrupted, press the button again (see Start and programme selection). Indicator lights The indicator lights provide important information. They indicate the following: "Clean filter" indicator light Before each programme, the "Clean filter" indicator light tumble dryer (see Care and maintenance). signals that it is essential to clean the filter each time before using the "Drying phases" indicator lights The The DRYING indicator light signals that the drying phase is running.



[You're reading an excerpt. Click here to read official INDESIT IDVL](http://yourpdfguides.com/dref/5799736)

[75 B FR user guide](http://yourpdfguides.com/dref/5799736)

<http://yourpdfguides.com/dref/5799736>

COOL TUMBLE indicator light signals that the cooling phase is running. The END indicator light signals that the programme has ended. "Delay start" indicator light If the "Delay start" option has been activated (see "Programmes and options"), after the programme has started, the indicator light corresponding to the chosen delay time will start flashing: As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Once the set delay time ends, the flashing LED will turn off and the set programme will start.

8 How to carry out a drying cycle Starting and selecting a programme GB 1. Plug the dryer into the power supply socket. 2. Select the programme according to the type of laundry (see Laundry). 3.

Open the door, ensure that the filter is clean and securely placed (see Care and maintenance). 4. Load the machine, making sure that no piece of laundry gets between the door and the relative seal. Close the door. 5.

After consulting the programme chart and the indications for each type of fabric (see Laundry), turn the Programme selection knob towards the programme corresponding to the type of laundry to be dried (see Programmes and options). ! Warning: If the position of the programme selection knob changes after pressing the START/PAUSE button, the selected programme will NOT be modified. To modify the programme, press the START/PAUSE button to put the programme in pause mode (the indicator light flashes orange), then select a new programme and the relative options. Press the START/PAUSE button to start the new programme. 6. @@@7. Press the START/PAUSE button to start the drying cycle. @@@@8. The final COOL TUMBLE phase (i.e.

@@@9. When the END indicator light turns on, the programme has ended. @@@@ (see Care and maintenance). @@@@ Set the program knob to OFF to switch off the machine. 11. Disconnect the dryer from the power supply. @@@@ Even drier than Cupboard dry.

@@ Synthetics Recommended to delicately dry synthetic fabrics. @@ It is suitable for loads of up to 1 kg (about 3 jerseys). We recommend turning the garments inside out before drying them.

@@ Leave them to dry naturally, as an additional drying process may damage them. ! Unlike other materials, the shrinking process in wool is irreversible, i.e. the garment does not resume its original dimension and shape. ! This programme is not suited for acrylic items.

Fitness This programme is studied for safely drying garments such as tracksuits and Fitness suits bearing the up to 4 kg. We suggest turning garments inside out before drying them. GB symbol. Suitable for loads of Special Shoes Programme This programme is specific for drying sports shoes. The shoes must have been previously washed and spun at a minimum spin speed of 400 revolutions.

A specific shoe rack is provided and must be used, otherwise the dryer will be damaged if shoes are dried in the drum. Remove the filter from its holder on the front part of the dryer and position the shoe rack. Place shoelaces inside the shoes then load with the tips of the shoes facing downwards and the soles frontwards. Drying times vary according to the shape and type of the shoe. If the shoes are not completely dry at the end of the programme, restart the programme. ! Do not dry shoes that have gel or flashing lights inside them. Only dry shoes made of synthetic material or rope. Once the programme ends, remove the shoe rack and replace the filter into its holder. Jeans □ This is a programme for jeans made from denim cotton. Before drying your jeans turn the front pockets inside out.

□ Do not mix dark and light coloured items. It can also be used on other garments made from the same material, such as jackets. □ Loads dried using this programme are usually ready to wear, the edges or seams may be slightly damp. If this is the case, try turning the jeans inside out and running the programme again for a short period. ! We do not recommend that you use this programme if your jeans have elastic waist bands, studs or embroidery. My TIME (15' - 35' - 60') These programmes can be used if you want to set drying time and temperature. The COOL TUMBLE cycle runs during the final minutes of the programme. Damp to Dry 15' timed programme is ideal to remove damp from tea towels and bath robe used once. Xpress 35': this is a quick timed programme, ideal for drying garments spun at high speed in the washing machine, for example shirts used in a work week. Daily 60': a timed programme, ideal for drying garments spun at high speed in the washing machine, for example a change of sheets.

Freshen Up A short programme suitable for refreshing fibres and garments. It lasts about 20 minutes. ! As this is not a drying programme, it is not to be used for garments that are still wet. □ It can be used on any load size but is more effective on smaller loads 11 Options GB The options allow for customising the selected programme according to one's own needs. Delay timer The start of some programmes (see Programmes and options) may be delayed up to 9 hours. Press the button repeatedly to enter the desired delay time. Before setting a delayed start, make sure that the filter is clean. The drum will rotate occasionally before the drying programme starts to prevent the formation of creases. Child Lock Prevents the program settings from being changed. After having selected the program and the available options, hold down the two option buttons for 3 seconds (see "Dryer description") A prolonged beep will sound when the buttons are pressed and the LEDs on the options buttons will flash slowly twice.

The LEDs on the previously selected options will then remain lit but will no longer be modifiable. If you attempt to change the settings with Child Lock activated, 3 short beeps will sound and 3 rapid flashes will warn you that it is not possible to modify the program or the options underway. Hold down the options buttons for three seconds to deactivate the Child Lock option. Child Lock can be selected with all programs. Light Drying Light Drying is a special option designed to gently dry delicate clothes. Press this button to select the low temperature setting; the light next to the button will switch on. Activating this option will increase the duration of the cycles ! Not all options are available on all programmes (see Programmes and options). Opening the door If the door is opened (or the START/PAUSE button is pressed) while a programme is running, the dryer stops and the following may occur: • The START/PAUSE button flashes orange. • When a delayed start is running, the delay countdown continues. It is necessary to press the START/PAUSE button to resume the "Delay timer" programme.

One of the "Delay timer" indicator light flashes to signal the delay time entered. • It is necessary to press the START/PAUSE button to resume the programme. The progress indicator lights signal the running phase and the START/PAUSE indicator light stops flashing and turns green.



[You're reading an excerpt. Click here to read official INDESIT IDVL](#)

[75 B FR user guide](#)

<http://yourpdfguides.com/dref/5799736>

• When post care phase is active it means that drying programme is already ended. Pressing the START/PAUSE button reactivates a new programme from the beginning. • By turning the Programme selection knob, a new programme is selected and the START/PAUSE indicator light flashes green. This procedure can be used to select the COOL TUMBLE programme to cool garments if they are judged to be dry enough. Press the START/PAUSE button to start the new programme. Note: If you have a power cut, switch off the dryer or remove the plug. When power is restored, plug in the machine.

@@The OFF position switches off the dryer. 12 Laundry Sorting laundry • Check the symbols on the care labels of the various garments to verify whether the garments can be safely tumble dried. • Sort laundry according to the type of fabric. • Empty all pockets and check for loose buttons. • Close zips and hooks and fasten belts and strings without tightening them.

• Wring out garments to remove the maximum amount of water possible. Drying times are approximate and may vary depending on the following: • Amount of water retained by items after the spin cycle: towels and delicate items retain a lot of water. • Fabrics: items of the same fabric, but with different texture and thickness may have different drying times. • Amount of laundry: single items and small loads may take longer to dry. • Drying: if items are to be ironed, they can be removed from the dryer while still slightly damp.

Items that require complete drying can be left longer. • Heat setting. • Temperature of the room: the lower the temperature of the room, the longer it will take for the dryer to dry clothing. • Bulk: certain bulky items require special care during the drying process. We suggest removing these items and replacing them in the dryer once they have been shaken out: repeat this procedure several times during the course of the drying cycle. GB ! Non caricare l'asciugatrice con capi totalmente pieni d'acqua. ! Per evitare un calo delle prestazioni dell'asciugatrice, non sovraccaricarla. Massime dimensioni di carico Non caricare il cestello oltre la capacità massima. I seguenti valori si riferiscono al peso dei capi asciutti: Fibre naturali: massimo 7 kg Fibre sintetiche: massimo 4 kg Care labels Always check the care labels, especially when placing garments in the tumble dryer for the first time. Below are the most commonly used symbols: May be tumble dried.

Do not tumble dry. Tumble dry – high heat. Tumble dry – low heat. ! Do not over-dry items. All fabrics contain natural dampness which helps to keep them soft and fluffy. The drying times provided refer to the automatic Cupboard dry programmes. The weight refers to dry items. Automatic drying times Cotton Drying times after 800-1000 rpm wash cycles - with an initial humidity level of 60% 1 kg 20 - 30 minutes Synthetics Light drying Drying times after wash cycles at lower speeds - with an initial humidity level of 40% 1 kg 20 - 40 minutes 2 kg 35 - 45 minutes 3 kg 45 - 60 minutes 4 kg 60 - 70 minutes 5 kg 70 - 80 minutes 6 kg 80 - 100 minutes 7 kg 90 - 120 minutes 2 kg 30 - 50 minutes 3 kg 40 - 70 minutes 4 kg 55 - 90 minutes 13 Troubleshooting GB If you feel that the dryer is not working properly, consult the following troubleshooting suggestions before contacting the Technical Assistance Centre (see Assistance). Problem:

The dryer does not start. Possible causes / Solutions: • The plug has not been inserted far enough into the socket to make contact. • There has been a power cut. • The fuse has blown. Try connecting another appliance to the same socket. • If an extension cord is used, try connecting the dryer plug directly into the socket. • The door has not been closed properly. • The programme has not been set correctly (see How to carry out a drying cycle). • The START/PAUSE button has not been pressed (see How to carry out a drying cycle). • A delayed start time has been set (see Programmes and options). • The START/PAUSE button has been pressed; a short delay follows before the dryer starts running. Wait for the drying cycle to start; do not press the START/PAUSE button otherwise the dryer switches to the pause mode and the drying cycle will not start. • The filter has not been cleaned (see Care and maintenance). • The heat setting is not suited to the type of fabric to be dried (see Programmes and options). • An incorrect drying time was selected for the type of load (see Laundry). • The flexible ventilation hose may be blocked (see Installation). • The air inlet may be blocked or obstructed (see Installation). @@• The items are too wet (see Laundry). @@@@• The lights on the dryer control panel are off although the dryer is switched on. • This is normal, especially if the dryer has not been used for a long time. If the noise persists during the entire cycle, contact the Technical Assistance Centre. • The dryer has gone into standby mode to save power.

This occurs if you have left the dryer on or have had a power cut. It occurs after 30 minutes: - if you leave the dryer without starting a programme; - after your drying programme has finished. Girando la manopola sul programma desiderato l'asciugatrice riprenderà a funzionare (per avviare il programma premere START/PAUSA). La posizione OFF spegne l'asciugatrice. 14 Assistance Before contacting the Technical Assistance Centre: • Follow the troubleshooting guide to check whether problems can be solved personally (see Troubleshooting). • If not, switch the dryer off and contact the Technical Assistance Centre closest to you. Provide the following data when contacting the Technical Assistance Centre: • name, address and postal code • telephone number • type of malfunction • date of purchase • the appliance model (Mod.) • the dryer's serial number (S/N) This information can be found on the data plate located behind the door. Spare parts This dryer is a complex machine. Attempting to repair it personally or with the aid of an unqualified personnel may put the safety of people at risk, damage the machine or invalidate the spare parts guarantee.

Always contact a qualified technician when experiencing problems with this machine. GB Information on recycling and disposal As part of our continual commitment towards environmental protection, we reserve the right to use recycled quality components to reduce costs for our customers and to minimise materials wastage. • Disposing of the packaging materials: follow local regulations to allow for recycling of packaging materials. • In order to minimise the risk of injury to children, remove the door and plug, then cut the power supply cord flush with the appliance. Dispose of these parts separately to prevent the appliance from being connected to a power supply socket.



[You're reading an excerpt. Click here to read official INDESIT IDVL 75 B FR user guide](http://yourpdfguides.com/dref/5799736)
<http://yourpdfguides.com/dref/5799736>

European Directive 2012/19/EC concerning Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling materials comprising the machine, while preventing potential damage to public health and the environment. The crossed-out wheeled bin symbol appears on all products to remind owners of the obligations regarding separate waste collection. Owners should contact their local authorities or appliance dealers for further information concerning the correct disposal of household appliances. Disposal of old household appliances This appliance conforms to the following EU directives: - 2006/95/EC (Low Voltage Directive) - 2004/108/EC (Electromagnetic Compatibility Directive).

15 06/2014 - Xerox Fabriano GB Essential Contact Information INDESIT SERVICE - Service You Can Rely On At Indesit we pride ourselves on offering our customers the best service we possibly can, wherever you are in the UK and Ireland. Rest assured though, no one knows an Indesit appliance better than we do and our service is second to none... Wherever you are we can be there – we have over 1,000 highly skilled Indesit engineers covering the whole of the UK and Ireland ensuring fast, reliable, local service. 'Right first time' – our engineers have the latest tools to help get your Indesit appliance back up and running the first time we visit. Experts in our field – all of our engineers are trained to the highest standard at our Training Centre of Excellence and possess unrivalled expertise and product knowledge. Skilled staff – we have over 400 skilled UK based call centre staff, dedicated to offering you excellent service 364 days a year. Telephone in the United Kingdom: 08448 224 224 Telephone in the Republic of Ireland: 0818 313 413 Please note: Our advisors will require the following information: •••name, address and postal code telephone number type of malfunction date of purchase ••model number serial number This information can be found on the data plate located behind the door. Indesit Company S.p.A. Viale Aristide Merloni, 47 60044 Fabriano (AN) 16 .



[You're reading an excerpt. Click here to read official INDESIT IDVL
75 B FR user guide
http://yourpdfguides.com/dref/5799736](http://yourpdfguides.com/dref/5799736)