



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT INC325AA. You'll find the answers to all your questions on the INDESIT INC325AA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT INC325AA**  
**User guide INDESIT INC325AA**  
**Operating instructions INDESIT INC325AA**  
**Instructions for use INDESIT INC325AA**  
**Instruction manual INDESIT INC325AA**

## Operating Instructions

REFRIGERATOR/FREEZER COMBINATION

GB

English

IN C 325 AI (UK)  
IN C 325AA (UK)

### Contents

#### Installation, 2-3

Positioning and connection

#### Description of the appliance, 4

Overall view

#### Start-up and use, 5

Starting the appliance

Using the refrigerator to its full potential

Using the freezer to its full potential

#### Maintenance and care, 6

Switching the appliance off

Cleaning the appliance

Avoiding mould and unpleasant odours

Replacing the light bulb

#### Precautions and tips, 7

General safety

Disposal

Respecting and conserving the environment

#### Troubleshooting, 8

Assistance, 8

GB

 INDESIT



[You're reading an excerpt. Click here to read official INDESIT INC325AA user guide](http://yourpdfguides.com/dref/5066876)  
<http://yourpdfguides.com/dref/5066876>

**Manual abstract:**

They contain important information for safe use, for installation and for care of the appliance. ! Please keep these operating instructions for future reference.

Pass them on to possible new owners of the appliance. Your appliance is supplied with a 13amp fused plug that can be plugged into a 13amp socket for immediate use. Before using the appliance please read the instructions below. **WARNING: THIS APPLIANCE MUST BE EARTHED.** Replacing fuse covers:

When replacing a faulty fuse, a 13amp ASTA approved fuse to BS 1362 should always be used and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Changing the plug: Removing the plug If your appliance has a non-rewireable moulded plug and you should wish to remove it to add a longer cable or to re-route the mains cable through partitions, units etc.

please ensure that either: The plug is replaced by a fused 13amp rewireable plug bearing the BSI mark of approval. or The mains cable is wired directly into a 13amp cable outlet, controlled by a switch (in compliance with BS 5733) which is accessible without moving the appliance. @@The cable should be cut as close as possible to the moulded plug. Remove the fuse. @@Place the appliance in a well-ventilated humidity-free room.

2. Do not obstruct the rear fan grills. @@3. @@Before inserting the plug into the electrical socket ensure the following: □ The appliance is earthed and the plug is compliant with the law. □ The socket can withstand the maximum power of the appliance, which is indicated on the data plate located on the bottom left side of the fridge (e.

g. 150 W). □ The voltage must be in the range between the values indicated on the data plate located on the bottom left side (e.g. 220-240V). □ The socket is compatible with the plug of the appliance. If the socket is incompatible with the plug, ask an authorised technician to replace it (see Assistance). Do not use extension cords or multiple sockets. ! Once the appliance has been installed, the power supply cable and the electrical socket must be easily accessible. ! The cable must not be bent or compressed.

! The cable must be checked regularly and replaced by authorised technicians only (see Assistance). ! The manufacturer declines any liability should these safety measures not be observed. 2 Fitting a new plug **IMPORTANT: WIRES IN THE MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE...** Green and Yellow Blue Brown - Earth - Neutral - Live GB As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: - Connect Green and Yellow wire to terminal marked or coloured Green and Yellow. 'E' or - Connect Brown wire to terminal marked 'L' or coloured red or brown. - Connect Blue wire to terminal marked 'N' or coloured Black or Blue. If a 13amp plug (BS 1363) is used it must be fitted with a 13amp fuse. A 15amp plug must be protected by a 15amp fuse, either in the plug or adaptor or at the distribution board.

If you are in any doubt about the electrical supply to your machine, consult a qualified electrician before use. CE Marking certifies that this appliance conforms to the following EEC directives : Low Voltage Equipment - 73/23/EEC & 93/68 EEC Electromagnetic Compatibility 89/336/EEC, 92/31/EEC & 93/68/EEC 3 Description of the appliance GB Overall view TEMPERATURE REGULATING Knob SHELVES□ Removable lidded shelf with EGG TRAY\* Removable multipurpose SHELVES□ Compartment for a 2 LITRE BOTTLE FRUIT and VEGETABLE bin BOTTLE shelf FREEZER and STORAGE compartment STORAGE compartment □ Varies by number and/or position. \* Available only on certain models. 4 Start-up and use Starting the appliance ! Before starting the appliance, follow the installation instructions (see Installation). ! Before connecting the appliance, clean the compartments and accessories well with lukewarm water and bicarbonate.

1. Insert the plug into the socket and ensure that the internal light illuminates. 2. Turn the TEMPERATURE ADJUSTMENT knob to an average value. After a few hours you will be able to put food in the refrigerator.

□ Place only cold or lukewarm foods in the compartment, not hot foods (see Precautions and tips). □ Remember that cooked foods do not last longer than raw foods. □ Do not store liquids in open containers. They will increase humidity in the refrigerator and cause condensation to form. SHELVES: with or without grill. Due to the special guides the shelves are removable and the height is adjustable (see diagram), allowing easy storage of large containers and food. Height can be adjusted without complete removal of the shelf. GB 1 2 Using the refrigerator to its full potential The temperature inside the refrigerator compartment automatically adjusts itself according to the position of the thermostat knob. 1 = warmest 5 = coldest We recommend, however, a medium position. The cooling section of the refrigerator is located inside the back wall of the refrigerator compartment for increased space and improved aesthetics.

During operation, the back wall will be covered in frost or water droplets depending on whether the compressor is operating or paused. Do not worry, the refrigerator is functioning normally. @@@@These foods must be cooked and eaten (within 24 hours). @@@@Do not open the door during freezing. ! If there is a power cut or malfunction, do not open the freezer door. @@! @@Do not use solvents, abrasive products, bleach or ammonia.

@@Rinse and dry them carefully. 1. Set the TEMPERATURE ADJUSTMENT knob to the position . 2.

@@3. Leave the door open until the frost has melted completely. @@4. @@5. @@@@Follow the instructions below.

@@@@Wait for approximately 2 hours, i.e. @@@@Follow the instructions below. @@Replace it with a similar light bulb within the power range indicated on the cover (15W or 25W). 6 Precautions and tips ! The appliance was designed and manufactured in compliance with international safety standards.

The following warnings are provided for safety reasons and must be read carefully. This appliance complies with the following Community Directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent amendments; -89/336/EEC of 03.05.89 (Electromagnetic Compatibility) and subsequent amendments; - 2002/96/CE.. Disposal □ Observe local environmental standards when disposing packaging material for recycling purposes. □ The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5066876)

[INC325AA user guide](http://yourpdfguides.com/dref/5066876)

<http://yourpdfguides.com/dref/5066876>

The crossed out  symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers may take their old appliance to public waste collection areas, other communal collection areas, or if national legislation allows return it to a retailer when purchasing a similar new product.

All ambient temperature is very high.  The thickness of the frost exceeds 2-3 mm (see Maintenance).  The appliance has not been installed on a level surface (see Installation).  The appliance has been installed between cabinets that vibrate and make noise.  The internal refrigerant makes a slight noise even when the compressor is off. This is not a defect, it is normal.  These raised temperatures are necessary in order to avoid the formation of condensation on certain parts of the product. The appliance makes a lot of noise. Some of the external parts of the refrigerator become hot. The back wall of the refrigerator unit  This shows the appliance is operating normally.

is covered in frost or droplets of water. There is water at the bottom of the refrigerator.  The water discharge hole is blocked (see Maintenance). 8 Assistance Guarantee 12 months Parts and Labour Guarantee Your appliance has the benefit of our manufacturer's guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you.

This guarantee is subject to the following conditions: The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent.

Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These included but not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. @@@@There will be a charge for our engineer's time. @@@@Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 9 GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us  the manufacturer. Essential Contact Information Indesit Service We are the largest service team in the UK and Ireland offering you access to 400 skilled telephone advisors and 1000 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.

indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.

co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling and Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug, and cut the mains cable off flush with the appliance.

Dispose of these parts separately to ensure that the appliance can no longer be plugged into mains socket, and the door cannot be locked shut. 10 GB 11 195068604.02 02/2012 GB 12 .



[You're reading an excerpt. Click here to read official INDESIT](#)

[INC325AA user guide](#)

<http://yourpdfguides.com/dref/5066876>