



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT INTS1612. You'll find the answers to all your questions on the INDESIT INTS1612 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT INTS1612
User guide INDESIT INTS1612
Operating instructions INDESIT INTS1612
Instructions for use INDESIT INTS1612
Instruction manual INDESIT INTS1612

Operating Instructions

FRIDGE

GB
English

GB

Contents

Installation, 2-3

Positioning and connection

Description of the appliance, 4

Overall view

Start-up and use, 5

Starting the appliance

Setting the temperature

Using the refrigerator to its full potential

Maintenance and care, 6

Switching the appliance off

Cleaning the appliance

Avoiding mould and unpleasant odours

Defrosting the appliance

Replacing the light bulb

Precautions and tips, 7

General safety

Disposal

Respecting and conserving the environment

Troubleshooting, 8

Assistance, 9

IN TS 1610 UK
IN TS 1611 UK
IN TS 1612 UK

 INDESIT



[You're reading an excerpt. Click here to read official INDESIT INTS1612 user guide](http://yourpdfguides.com/dref/5067074)
<http://yourpdfguides.com/dref/5067074>

Manual abstract:

They contain important information for safe use, for installation and for care of the appliance. ! Please keep these operating instructions for future reference. Pass them on to possible new owners of the appliance. **wARNING: THIS APPLIANCE MUST BE EARTHED.** Replacing fuse covers: When replacing a faulty fuse, a 13amp ASTA approved fuse to BS 1362 should always be used and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Changing the plug: Removing the plug If your appliance has a non-rewireable moulded plug and you should wish to remove it to add a longer cable or to re-route the mains cable through partitions, units etc. Please ensure that either: The plug is replaced by a fused 13amp rewireable plug bearing the BSI mark of approval. Or The mains cable is wired directly into a 13amp cable outlet, controlled by a switch (in compliance with BS 5733) which is accessible without moving the appliance.

Disposing of the plug Cut off and dispose of the supplied plug if it does not fit your socket. The cable should be cut as close as possible to the moulded plug. remove the fuse. @ @ Do not obstruct the rear fan grills. @ @ 3.

@ @). @ @ Before inserting the plug into the electrical socket ensure the following: The appliance is earthed and the plug is compliant with the law. The socket can withstand the maximum power of the appliance, which is indicated on the data plate located on the bottom left side of the fridge (e. The voltage must be in the range between the values indicated on the data plate located on the bottom left side (e. The socket is compatible with the plug of the appliance.

If the socket is incompatible with the plug, ask an authorised technician to replace it (see Assistance). Once the appliance has been installed, the power supply cable and the electrical socket must be easily accessible. ! The cable must not be bent or compressed. ! The cable must be checked regularly and replaced by authorised technicians only (see Assistance). ! The manufacturer declines any liability should these safety measures not be observed. 2 Fitting a new plug

IMPORTANT: WIRES IN THE MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE. Green and Yellow Blue Brown - Earth - Neutral - Live GB As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: - Connect Green and Yellow wire to terminal marked or coloured Green and Yellow. If a 13amp plug (BS 1363) is used it must be fitted with a 13amp fuse. A 15amp plug must be protected by a 15amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt about the electrical supply to your machine, consult a qualified electrician before use.

CE Marking certifies that this appliance conforms to the following EEC directives : Low Voltage Equipment - 73/23/EEC & 93/68 EEC Electromagnetic Compatibility 89/336/EEC, 92/31/EEC & 93/68/EEC 3 Description of the appliance GB Overall view The instructions contained in this manual are applicable to different model refrigerators. The diagrams may not directly represent the appliance purchased. For more complex features, consult the following pages. Removable lidded shelf with EGG TRAY* TEMPERATURE control HINGED shelf* SHELVES Compartment for a 2 LITRE BOTTLE BOTTLE shelf FRUIT and VEGETABLE crisper Varies by number and/or position. Before starting the appliance, follow the installation instructions (see Installation). ! Before connecting the appliance, clean the compartments and accessories well with lukewarm water and bicarbonate. 1. Insert the plug into the socket and ensure that the internal light illuminates. After a few hours you will be able to put food in the refrigerator. Using the refrigerator to its full potential Use the TEMPERATURE ADJUSTMENT knob to adjust the temperature (see Description).

Place only cold or lukewarm foods in the compartment, not hot foods (see Precautions and tips). Remember that cooked foods do not last longer than raw foods. Do not store liquids in open containers. They will increase humidity in the refrigerator and cause condensation to form. SHELVES: with or without grill.

Due to the special guides the shelves are removable and the height is adjustable (see diagram), allowing easy storage of large containers and food. Height can be adjusted without complete removal of the shelf. @ @ 1 = warmest 4 = coldest We recommend , however , a medium position. @ @ @ @ Do not worry, the refrigerator is functioning normally. @ @ @ @ @ @ @ @ follow the instructions below.

@ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ 6 Precautions and tips ! @ @ @ @ @ @ @ @ @ @ @ @ The crossed out wheeled bin symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB General safety The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. The appliance must be used to store and freeze food products by adults only and according to the instructions in this manual. The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain and storms. Do not touch the appliance with bare feet or with wet or moist hands and feet. Do not touch the internal cooling elements: this could cause skin abrasions or frost/freezer burns. When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable. Before cleaning and maintenance, always switch off the appliance and disconnect it from the electrical supply.

It is not sufficient to set the temperature adjustment knobs (appliance off) to eliminate all electrical contact. In the case of a malfunction, under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or further malfunctioning of the appliance. Do not use any sharp or pointed utensils or electrical equipment - other than the type recommended by the manufacturer - inside the frozen food storage compartments. Do not put ice cubes taken directly from the freezer into your mouth. This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5067074)

[INTS1612 user guide](http://yourpdfguides.com/dref/5067074)

<http://yourpdfguides.com/dref/5067074>

⚠ Keep packaging material out of the reach of children! it can become a choking or suffocation hazard. Respecting and conserving the environment ⚠
Install the appliance in a fresh and well-ventilated room. Ensure that it is protected from direct sunlight and do not place it near heat sources.

⚠ Try to avoid keeping the door open for long periods or opening the door too frequently in order to conserve energy. @@ If circulation is impeded, the compressor will work continuously. ⚠ Do not place hot food directly into the refrigerator. @@ ⚠ Defrost the appliance if ice forms (see Maintenance). A thick layer of ice makes cold transference to food products more difficult and results in inc448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call.

@@@ Uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. To activate your free 5 year parts guarantee you must register your appliance with us. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling and Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug, and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into mains socket, and the door cannot be locked shut. .



[You're reading an excerpt. Click here to read official INDESIT](#)

[INTS1612 user guide](#)

<http://yourpdfguides.com/dref/5067074>