



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IS60V. You'll find the answers to all your questions on the INDESIT IS60V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IS60V
User guide INDESIT IS60V
Operating instructions INDESIT IS60V
Instructions for use INDESIT IS60V
Instruction manual INDESIT IS60V

Instruction booklet

TUMBLE DRYER

GB
English

IS60V

Contents

Installation, 2-3

- Where to put your dryer
- Ventilation
- Electrical connection
- Before you start using your dryer

Dryer description, 4

- The front
- The back
- Control panel

Start and programmes, 5

- Choosing a programme

Laundry, 6-7

- Sorting your laundry
- Wash care labels
- Special clothing items
- Drying times

Warnings and Suggestions, 8

- General safety
- Disposal
- Saving energy and respecting the environment

Maintenance and Care, 9

- Switching off the electricity
- Cleaning the filter after each cycle
- Check the drum after each cycle
- Cleaning the dryer

Troubleshooting, 10

Service, 11

- Spare parts

GB

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IS60V user guide](#)

<http://yourpdfguides.com/dref/5067076>

Manual abstract:

Take it with you when you move, and, should you sell this appliance or pass it on to another party, make sure that this booklet is supplied along with the dryer so that the new owner may be informed about warnings and suggestions on how the dryer works. ! Read these instructions carefully; the following pages contain important information on installation and suggestions on how the appliance works. ! Ensure that the end of the tube is not directed toward the air intake vent at the rear of the dryer. ! The vent tube should not exceed 2.4 metres in length and should be kept free of any possible accumulation of fluff, lint and water by shaking it out frequently. Always ensure that the tube is not squashed. Permanent venting In conjunction with the vent tube we recommend using a Wall/Window Vent Kit, available at a retail location or the nearest Spare Parts Dealer. Wall mounting q Where to put your dryer Place your dryer at a distance from gas ranges, stoves, heaters, or cook tops because flames can damage the appliance. If you are going to install the appliance under a work counter, be sure to leave a 10mm space between the top and any other objects on or above the machine and a 15mm space between the sides and lateral furnishings or walls. This is to ensure proper air circulation.

Make sure that the back vents are not obstructed. Make sure you put your dryer in an environment that is not damp and has proper air circulation throughout. window mounting 1. @@ 2. @@ 3.

@@@ For optimum performance, the moist air is then blown out through a vent tube at the back of the dryer. When the dryer is in use, there has to be adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Mobile venting A vent tube must always be fitted when the dryer is used in conjunction with Mobile Venting. The tube must be fitted securely into the back of the dryer (see Dryer Description).

If possible, it is always best to connect the tube to a permanent outlet close to the dryer.

If permanent installation is not possible, the dryer will work just as well with the tube passing through a partly-opened window. 1. With a stacked dryer the hole in the window should ideally be made below the vent. 2. The tube should be kept as short as possible. Depending on how often you use your dryer, it is essential that areas A and B are checked periodically to remove lint or debris. The vent tube adaptor must be fitted securely thus preventing any humid air from being emitted back into the room. ! The Dryer should not be pushed so far back that the tube adaptor is pulled out of position or the tube is squashed or bent. ! The tube should be kept clear of the air intake vent and kinks or 'U' bends must be avoided as these will obstruct the tube or trap condensation. 2 Open window venting 1.

The end of the tube should be directed downwards, to prevent warm moist air from condensing in the room or in the dryer. moulded plug ! The plug must not be used without the fuse cover in place. If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from authorised dealers. changing the plug GB Installation Description ! Ensure that the dryer is adequately ventilated and that the end of the vent tube is not directed towards the air intake duct. ! The vent tube must always be fitted for optimum performance. ! Make sure that the vent tube and air intake vents are not obstructed or blocked. ! The dryer must not recycle exhaust air. Do not discharge exhaust air into a flue which is used for exhaust fumes from other appliances that burn gas or other fuels. The wires in the power cord are coloured in accordance with the following: GREEN / YELLOW EARTH BLUE NEUTRAL BROWN LIVE If a replacement plug is to be fitted, the appropriate wire must be connected to the correct terminal, as follows: Green and Yellow (Earth) wire to terminal marked 'E', symbol, or coloured green and yellow.

Laundry Electrical connections Make sure of the following before you insert the plug into the the electrical socket: q The socket must be grounded. Q The socket must be able to sustain the machines maximum power, which is indicated on the rating label (see Dryer Description). Q Power voltage must be within the values indicated on the rating label (see Dryer Description). Q The socket must be compatible with the dryers plug. Should this not be the case, replace the plug or the socket.

! The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if it is exposed to rain or storms. ! Once installed, the dryers electrical wire and plug must be within easy reach. The power cord must not be bent or squashed. ! The power cord supplied is fitted with a BS1363 plug and a 13 amp BS1362 fuse.

If you need to replace the fuse, use only those rated at 13 amp (13A) and ASTA approved to BS1362. If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard. ! The power supply cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorised technicians (see Service). @@ ! @@ ! If in doubt about any of the above consult a qualified electrician. @@@@ Plug the dryer into the electrical socket. 2. Sort your laundry according to fabric type (see Laundry). 3. @@ 4.

@@@@ - Set the temperature with the HEAT button. - Select a drying time by rotating the TIMER knob clockwise. @@@@ 7. @@ 8. @@@@@ Close zippers and hooks and tie loose belts and strings. @@ ! Do not load dripping wet clothes into the dryer. @@@@ 6lb) ! @@@@@ These can be cleaned with special at-home dry cleaning products. follow instructions carefully. @@ These expand when drying and would prevent airflow through the dryer. 1500g 1000g 700g 250g 100g 700g 350g 500g 350g 3lb 5oz 2lb3oz 1lb 6oz 9oz 3oz 1lb 6oz 12oz 1lb 2oz 12oz At the end of a drying cycle, cottons could still be damp if you grouped cottons and synthetics together.

If this happens simply give them an additional short period of drying. 6 Special clothing items Blankets and Bedspreads: acrylic items (Acilan, Courtelle, Orion, Dralon) must be dried with special care on LOW heat setting. Avoid drying for a long period of time. Pleated or creased garments: read the manufacturer's drying instructions on the garment. Starched articles: do not dry these with nonstarched items.

Make sure that as much of the starch solution is removed from the load as possible before placing it in the dryer. Do not over-dry: the starch will become powdery and leave your clothing limp, which defeats the purpose of starch. Times are approximate and can vary depending upon: q GB Amount of water retained in clothes after spin cycle: towels and delicates retain a lot of water. Fabrics: items that are the same type of fabric but different textures and thicknesses may not have the same drying time.



[You're reading an excerpt. Click here to read official INDESIT IS60V user guide](http://yourpdfguides.com/dref/5067076)

<http://yourpdfguides.com/dref/5067076>

Quantity of laundry: single items or small loads may take longer to dry.

Dryness: If you are going to iron some of your clothes, they can be taken out while still a bit damp. Others can be left longer if you need them to be completely dry. heat setting. Room temperature: if the room where the dryer is located is cold, it will take longer for the dryer to dry your clothes. Bulk: some bulky items can be tumble dried with care. We suggest that you remove these items several times, shake them out, and return them to the dryer until finished. Installation q

Description q q Start and Programmes q Drying times q The table below presents APPROXIMATE drying times in minutes. Weights refer to dry garments: Cottons High (full) Heat Drying times 800-1000rpm in washing machine Half Load Full Load q Laundry 1kg 20-30 2kg 35-45 3kg 45-60 4kg 60-70 5kg 70-80 6kg 80-100 ! Do not over-dry your clothes. All fabrics contain a little natural moisture, which keeps them soft and fluffy. Warnings and Suggestions Synthetics High (full) Heat Drying times on reduced spin in washing machine Half Load Full Load Maintenance and Care 1kg 20-30 2kg 35-45 3kg 45-60 Acrylics / Low (gentle) Heat Drying times on reduced spin in washing machine Half Load Full Load Troubleshooting 1kg 25-40 2kg 40-60 Service 7 Warnings and Suggestions GB ! The appliance has been designed and built according to international safety standards.

These warnings are given for safety reasons and must be read carefully. This appliance conforms toompromised: drying times lengthen and you will consume more energy. It may also damage your dryer. The filter is found in front of the dryer trim (see diagram). Your dryer uses special bearing components which do not need lubrication. ! Have your dryer checked regularly by authorised technicians to ensure electrical and mechanical safety (see Service). start and Programmes Laundry Removing the filter: 1. Pull the plastic grip of the filter upwards (see diagram). Ensure the filter is fully located flush into the tumble dryer trim. ! Do not use the dryer without replacing the filter.

Warnings and Suggestions Maintenance and Care Troubleshooting Check the drum after each cycle Turn the drum manually in order to remove small items (handkerchiefs) that could have been left behind. Service 9 Troubleshooting GB One day your dryer seems not to be working. Before you call your Service Centre (see Service), go through the following troubleshooting suggestions: Problem: The dryer won't start. Possible causes / Solution: q q q q q q q q The plug is not plugged into the socket, or not making contact. There has been a power failure.

the fuse has blown. Try to plug another appliance into the socket. You are using an extension cord? Try to plug the dryer's power cord directly into the socket. The door is not closed securely? The TIMER knob has not been set properly (see Start and Programmes). The START button has not been pressed (see Start and Programmes).

It is taking a long time to dry. q q q q q q q q The filter has not been cleaned (see Maintenance). The temperature setting is not ideal for the type of fabric you are drying (see Start and Programmes). @@@@The items were too wet (see Laundry). @@@@The spare parts have been designed exclusively for this appliance and not for other uses. GB q Use the troubleshooting guide to see if you can solve the problem yourself (see Troubleshooting). If not, turn off the dryer and call the Service Centre closest to you. Installation What to tell the Service Centre: name, address and post code. Q the appliance model (Mod.).

Q the serial number (S/N). This information can be found on the data label inside the door of the machine. .



[You're reading an excerpt. Click here to read official INDESIT IS60V user guide](#)

<http://yourpdfguides.com/dref/5067076>