



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT ISL60V. You'll find the answers to all your questions on the INDESIT ISL60V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT ISL60V
User guide INDESIT ISL60V
Operating instructions INDESIT ISL60V
Instructions for use INDESIT ISL60V
Instruction manual INDESIT ISL60V

Instruction booklet

TUMBLE DRYER

GB
English, 1

ISL60V

Contents

Installation, 2-3

Where to put your dryer
Ventilation
Electrical connection
Before you start using your dryer

Dryer description, 4

The front
The back
Control panel

Start and programmes, 5-7

Choosing a programme
Table of programmes
The controls

Laundry, 8-9

Sorting your laundry
Wash care labels
Special clothing items
Drying times

Warnings and Suggestions, 10

General safety
Disposal
Saving energy and respecting the environment

Maintenance and Care, 11

Switching off the electricity
Cleaning the filter after each cycle
Check the drum after each cycle
Cleaning the dryer

Troubleshooting, 12

Service, 13
Spare parts

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT ISL60V user guide](http://yourpdfguides.com/dref/3206475)
<http://yourpdfguides.com/dref/3206475>

Manual abstract:

! The vent tube should not exceed 2.4 metres in length and should be kept free of any possible accumulation of fluff, lint and water by shaking it out frequently. Always ensure that the tube is not squashed. Permanent venting In conjunction with the vent tube we recommend using a Wall/Window Vent Kit, available at a retail location or the nearest Spare Parts Dealer. Wall mounting 1. Leave an opening in the wall to the left of the dryers proposed position. 2. Keep the tube as short and straight as possible to prevent condensed moisture from backing up into the dryer. 3. Similarly, the duct in the wall should slope downwards towards the outside.

Window mounting 1. With a stacked dryer the hole in the window should ideally be made below the vent. 2. The tube should be kept as short as possible.

Where to put your dryer q Place your dryer at a distance from gas ranges, stoves, heaters, or cook tops because flames can damage the appliance. If you are going to install the appliance under a work counter, be sure to leave a 10mm space between the top and any other objects on or above the machine and a 15mm space between the sides and lateral furnishings or walls. This is to ensure proper air circulation. Make sure that the back vents are not obstructed. Make sure you put your dryer in an environment that is not damp and has proper air circulation throughout. q q Ventilation The Dryer dries your laundry by drawing in cool, clean and relatively dry air, heating it, and then distributing it through the clothes as they are gently tumbled.

For optimum performance, the moist air is then blown out through a vent tube at the back of the dryer. When the dryer is in use, there has to be adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Mobile venting A vent tube must always be fitted when the dryer is used in conjunction with Mobile Venting. The tube must be fitted securely into the back of the dryer (see Dryer Description).

@@@! @@! The tube should be kept clear of the air intake vent and kinks or 'U' bends must be avoided as these will obstruct the tube or trap condensation. 2 Installation Open window venting 1. The end of the tube should be directed downwards, to prevent warm moist air from condensing in the room or in the dryer. Moulded plug ! The plug must not be used without the fuse cover in place. If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from authorised dealers.

Changing the plug ! Ensure that the dryer is adequately ventilated and that the end of the vent tube is not directed towards the air intake duct. ! The vent tube must always be fitted for optimum performance. ! Make sure that the vent tube and air intake vents are not obstructed or blocked. ! The dryer must not recycle exhaust air. ! Misusing a tumble dryer may create a fire hazard. ! Do not discharge exhaust air into a flue which is used for exhaust fumes from other appliances that burn gas or other fuels. The wires in the power cord are coloured in accordance with the following: GREEN / YELLOW EARTH BLUE NEUTRAL BROWN LIVE If a replacement plug is to be fitted, the appropriate wire must be connected to the correct terminal, as follows: Green and Yellow (Earth) wire to terminal marked 'E', symbol, or coloured green and yellow. Blue (Neutral) wire to terminal marked 'N' or coloured black. Cord clamp GB Installation Description Start and Programmes 13A ASTA approved fuse to BS1362. Laundry Electrical connections Make sure of the following before you insert the plug into the electrical socket: q The socket must be grounded.

q The socket must be able to sustain the machines maximum power, which is indicated on the rating label (see Dryer Description). q Power voltage must be within the values indicated on the rating label (see Dryer Description). q The socket must be compatible with the dryers plug. Should this not be the case, replace the plug or the socket. ! The dryer must not be installed outdoors, even if the space is sheltered.

It can be very dangerous if it is exposed to rain or storms. ! Once installed, the dryers electrical wire and plug must be within easy reach. ! Do not use extension cords. ! The power cord must not be bent or squashed. ! The power cord supplied is fitted with a BS1363 plug and a 13 amp BS1362 fuse.

If you need to replace the fuse, use only those rated at 13 amp (13A) and ASTA approved to BS1362. Brown (Live) wire to terminal marked 'L' or coloured red. ! If the plug being replaced is a non-rewirable type, then the cut-off plug must be disposed of safely. DO NOT leave it where it can be inserted into a socket and create a shock hazard. ! The power supply cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorised technicians (see Service). @@! @@! @@@@@@ If you have not set a programme, the buzzer will beep four times. @@@@ The lights indicate that the option has been selected. @@@@ If this light flashes it indicates a fault (see Troubleshooting). @@ Press again, the dryer restarts. @@ During a delayed start the lights flash to show the delay selected.

When (not flashing) they show each stage of the programme by the corresponding light turning on (see Start and Programmes). The PROGRAMMES knob sets the programme: rotate it until the indicator is pointing to the programme you want to select (see Start and Programmes). Start and Programmes Choosing a programme 1. Plug the dryer into the electrical socket. 2. Sort your laundry according to fabric type (see Laundry). 3. Open the door and make sure the filter is clean and in place (see Maintenance). 4. Load the machine and make sure items are not in the way of the door seal.

Close the door. 5. If the On/Off light is not lit: Press the ON/OFF button . 6. Choose a programme by checking the Programmes Guide (see Programmes) as well as the indications for each type of fabric (see Laundry).

- Select a programme by rotating the PROGRAMMES knob. 7. Set a delay time and other options if necessary. 8. If you wish to select the buzzer sound, at the end of the programme, press the ALARM Option button.

9. Press the START button to begin. During the drying programme, you can check on your laundry and take out items that are dry while others continue drying. When you close the door again, press the START button in order to resume drying. 10. During the last few minutes of Drying Programmes, before the programme is completed, the final COOL TUMBLE phase is entered (fabrics are cooled), this phase should always be allowed to complete. 11. When the programme is complete. The buzzer will sound, if this option selected. Open the door, take the laundry out, clean the filter and replace it (see Maintenance).

If you do not take out the laundry immediately, the dryer will tumble occasionally for 10 hours or until you open the door. 12. Unplug the dryer.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/3206475)

[ISL60V user guide](http://yourpdfguides.com/dref/3206475)

<http://yourpdfguides.com/dref/3206475>

The air intake vent is obstructed (see Installation). The permanent ventilation flap on the storm cover is obstructed (see Installation). The items were too wet (see Laundry). The dryer was overloaded (see Laundry).

Programme finishes and clothes are damper than expected. ! For safety the dryer has a maximum programme time of 3 hours. If an automatic programme has not sensed the required final moisture in this time the dryer will complete the programme and stop. Check the above points and run the programme again, if the results are still damp, contact the Service Centre (see Service). The ON/OFF light flashes to indicate a fault.

q Note down the code and contact the Service Centre (see Service). 12 Service Before calling the Service Centre: q Spare Parts This dryer is a complex machine. Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons, could damage the machine and could invalidate the spare parts warranty. Call an authorised technician if you experience problems while using the machine. The spare parts have been designed exclusively for this appliance and not for other uses.

GB q Use the troubleshooting guide to see if you can solve the problem yourself (see Troubleshooting). If not, turn off the dryer and call the Service Centre closest to you. Installation What to tell the Service Centre: name, address and post code. q telephone number. q the type of problem. q the date of purchase. q the appliance model (Mod.). q the serial number (S/N). This information can be found on the data label inside the door of the machine.

q Description Start and Programmes Laundry Warnings and Suggestions Maintenance and Care Troubleshooting Service 13 195042597.00 09/2004 - SIMLEX . Four Ashes, Wolverhampton .



[You're reading an excerpt. Click here to read official INDESIT](#)

[ISL60V user guide](#)

<http://yourpdfguides.com/dref/3206475>